

MULTIFUNCTIONAL DIGITAL SYSTEMS

# Setup Guide for Printing Functions

---

## GA-1191



# Preface

---

Thank you for purchasing the TOSHIBA multifunctional digital system e-STUDIO165/205, e-STUDIO167/207/237 or e-STUDIO182/212/242.

This **Setup Guide for Printing Functions** is a manual for the e-STUDIO165/205, e-STUDIO167/207/237 or e-STUDIO182/212/242 when the following option is installed:

- Network Printer Kit

This **Setup Guide for Printing Functions** describes the following:

- Printer-related settings using the control panel of this equipment
- Settings and management of this equipment from a computer using TopAccess

Be sure to read this manual before using the e-STUDIO165/205, e-STUDIO167/207/237 or e-STUDIO182/212/242 with the options above. Keep this manual handy and retain it for future reference.

# Software License Agreement

---

INSTALLING OR OTHERWISE USING THIS SOFTWARE PRODUCT CONSTITUTES YOUR ACCEPTANCE OF THE FOLLOWING TERMS AND CONDITIONS (UNLESS A SEPARATE LICENSE IS PROVIDED BY THE SUPPLIER OF APPLICABLE SOFTWARE IN WHICH CASE SUCH SEPARATE LICENSE SHALL APPLY). IF YOU DO NOT ACCEPT THESE TERMS, YOU MAY NOT INSTALL OR USE THIS SOFTWARE, AND YOU MUST PROMPTLY RETURN THE SOFTWARE TO THE LOCATION WHERE YOU OBTAINED IT.

THE SOFTWARE INSTALLED ON THIS PRODUCT INCLUDES NUMEROUS INDIVIDUAL SOFTWARE COMPONENTS, EACH HAVING ITS OWN APPLICABLE END USER LICENSE AGREEMENT (“EULA”). INFORMATION RELATING TO THE EULAS MAY BE FOUND IN AN ELECTRONIC FILE INCLUDED ON THE USER DOCUMENTATION CD-ROM INCLUDED HEREWITH; HOWEVER, ALL SOFTWARE AND DOCUMENTATION DEVELOPED OR CREATED BY OR FOR TOSHIBA TEC CORPORATION (“TTEC”) ARE PROPRIETARY PRODUCTS OF TTEC AND ARE PROTECTED BY COPYRIGHT LAWS, INTERNATIONAL TREATY PROVISIONS, AND OTHER APPLICABLE LAWS.

## **Grant of License**

This is a legal agreement between you, the end-user (“You”), and TTEC and its suppliers. This software, fonts (including their typefaces) and related documentation (“Software”) is licensed for use with the system CPU on which it was installed (“System”) in accordance with the terms contained in this Agreement. This Software is proprietary to TTEC and/or its suppliers.

TTEC and its suppliers disclaim responsibility for the installation and/or use of this Software, and for the results obtained by using this Software. You may use one copy of the Software as installed on a single System, and may not copy the Software for any reason except as necessary to use the Software on a single System. Any copies of the Software shall be subject to the conditions of this Agreement.

You may not, nor cause or permit any third party to, modify, adapt, merge, translate, reverse compile, reverse assemble, or reverse engineer the Software. You may not use the Software, except in accordance with this license. No title to the intellectual property in the Software is transferred to you and full ownership is retained by TTEC or its suppliers. Source code of the Software is not licensed to you. You will be held legally responsible for any copyright infringement, unauthorized transfer, reproduction or use of the Software or its documentation.

## **Term**

This license is effective until terminated by TTEC or upon your failure to comply with any term of this Agreement. Upon termination, you agree to destroy all copies of the Software and its documentation.

You may terminate this license at any time by destroying the Software and its documentation and all copies.

---

### **Disclaimer of Warranty**

THIS SOFTWARE IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. TTEC AND ITS SUPPLIERS DISCLAIM ANY WARRANTY RELATING TO THE QUALITY AND PERFORMANCE OF THE SOFTWARE. IF THE SOFTWARE PROVES DEFECTIVE, YOU (AND NOT TTEC OR ITS SUPPLIERS) SHALL BE RESPONSIBLE FOR THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. TTEC AND ITS SUPPLIERS DO NOT WARRANT THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR FREE.

ALL INFORMATION CONTAINED HEREIN THAT IS PROVIDED BY TTEC AND ITS AFFILIATES PURSUANT TO A EULA IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED.

### **Limitation of Liability**

IN NO EVENT WILL TTEC OR ITS SUPPLIERS BE LIABLE TO YOU FOR ANY DAMAGES, WHETHER IN CONTRACT, TORT, OR OTHERWISE (EXCEPT PERSONAL INJURY OR DEATH RESULTING FROM NEGLIGENCE ON THE PART OF TTEC OR ITS SUPPLIERS), INCLUDING WITHOUT LIMITATION ANY LOST PROFITS, LOST DATA, LOST SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE SOFTWARE, EVEN IF TTEC OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, NOR FOR THIRD PARTY CLAIMS.

### **U.S. Government Restricted Rights**

The Software is provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the U.S. Government is subject to restrictions set forth in subdivision (b) (3) (ii) or (c) (i) (ii) of the Rights in Technical Data and Computer Software Clause set forth in 252.227-7013, or 52.227-19 (c) (2) of the DOD FAR, as appropriate. Contractor/Manufacturer is TOSHIBA TEC Corporation, 2-17-2, Higashigotanda, Shinagawa-ku, Tokyo, 141-8664, Japan.

### **General**

You may not sublicense, lease, rent, assign or transfer this license or the Software. Any attempt to sublicense, lease, rent, assign or transfer any of the rights, duties or obligations hereunder is void. You agree that you do not intend to, and will not ship, transmit (directly or indirectly) the Software, including any copies of the Software, or any technical data contained in the Software or its media, or any direct product thereof, to any country or destination prohibited by the United States Government. This license shall be governed by the laws of Japan or, at the election of a Supplier of TTEC concerned with a dispute arising from or relating to this Agreement, the laws of the Country designated from time to time by the relevant Supplier of TTEC. If any provision or portion of this Agreement shall be found to be illegal, invalid or unenforceable, the remaining provisions or portions shall remain in full force and effect.

YOU ACKNOWLEDGE THAT YOU HAVE READ THIS LICENSE AGREEMENT AND THAT YOU UNDERSTAND ITS PROVISIONS. YOU AGREE TO BE BOUND BY ITS TERMS AND CONDITIONS. YOU FURTHER AGREE THAT THIS LICENSE AGREEMENT CONTAINS THE COMPLETE AND EXCLUSIVE AGREEMENT BETWEEN YOU AND TTEC AND ITS SUPPLIERS AND SUPERSEDES ANY PROPOSAL OR PRIOR AGREEMENT, ORAL OR WRITTEN, OR ANY OTHER COMMUNICATION RELATING TO THE SUBJECT MATTER OF THIS LICENSE AGREEMENT.

TOSHIBA TEC Corporation, 2-17-2, Higashigotanda, Shinagawa-ku, Tokyo, 141-8664, Japan.

# Before Reading This Manual

---

## Lineup of our manuals

These manuals are provided for the operation of the e-STUDIO165/205, e-STUDIO167/207/237 or e-STUDIO182/212/242. Select and read the manual best suited to your needs. This manual is the **Setup Guide for Printing Functions**.

### Basic functions

---

#### **Operator's Manual for Copying Functions (Booklet)**

This manual describes the basic operations, mainly copying functions, of this equipment. It also describes safety precautions to ensure correct and safe use of this equipment. Be sure to read this before you use the equipment.

### Facsimile functions

---

The Fax Kit GD-1221 (optional) is necessary for using the Fax functions.

#### **Operator's Manual for Facsimile Function (Booklet)**

This manual describes how to use the Fax functions. Various functions both basic and advanced regarding Fax transmission/reception are available.

### Printing functions

---

The Network Printer Kit GA-1191 (optional) is necessary for using the printing functions.

#### **Quick Start Guide for Printing Functions (Booklet)**

This manual gives basic information regarding the printing functions, such as the GA-1191 accessories, necessary environmental conditions and outline of network connections as well as troubleshooting. Be sure to read this before using the printing functions.

#### **Network Administration Guide for Printing Functions (PDF file)**

This manual describes the operation necessary for configuring a network and using the printing functions, such as connecting to a network and setting components.

#### **Setup Guide for Printing Functions (PDF file, This manual)**

This manual consists of the following two parts.

Control panel: This part describes how to configure the printer-related settings using the control panel of the equipment.

TopAccess: This part describes how to use the co-packed utility "TopAccess". The settings and management of the equipment can be done using a Web browser.

#### **Printing Guide (PDF file)**

This manual describes the operation necessary for printing data from a computer, such as the installation of the client software and the use of the printer driver.

#### **Network Fax Guide (PDF file)**

This manual describes the operation necessary for sending a Fax from a computer via a network, such as the installation of the client software, use of the N/W-Fax driver and the co-packed application software "AddressBook Viewer".

---

## Scanning functions

---

The Scanner Upgrade Kit GA-1201 (optional) is necessary for using the scanning functions.

### **Quick Start Guide for Scanning Functions (PDF file)**

This manual gives the basic information regarding the scanning functions, such as the GA-1201 accessories, necessary environmental conditions and outline of network connections as well as troubleshooting. Be sure to read this before using the scanning functions.

### **Network Administration Guide for Scanning Functions (PDF file)**

This manual describes the operation necessary for configuring a network and using the scanning functions, such as connecting to a network and setting components.

### **Setup Guide for Scanning Functions (PDF file)**

This manual consists of the following two parts.

**Control panel:** This part describes how to configure the scanner-related settings using the control panel of the equipment.

**TopAccess:** This part describes how to use the co-packed utility "TopAccess". The settings and management of the equipment can be done using a Web browser.

### **Scanning Guide (PDF file)**

This manual describes the operation necessary for using the scanning functions, such as the installation and the use of the TWAIN driver.

## To read manuals in the PDF file format

The operator's manual in the PDF (Portable Document Format) can be displayed/printed using Adobe Reader or Adobe Acrobat Reader. If neither is installed in your computer, download one of them. This can be done via the website of Adobe Systems Incorporated.

---

## How to read this manual

### Symbols in this manual

In this manual, some important items are described with the symbols shown below. Be sure to read these items before using this equipment.

**Caution**

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, partial damage of the equipment or surrounding assets, or loss of data.

**Note**

Indicates information to which you should pay attention when operating the equipment.

**Tip**

Describes handy information that is useful to know when operating the equipment.



Pages describing items related to what you are currently doing. See these pages as required.

### Trademarks

- The official name of Windows 2000 is Microsoft Windows 2000 Operating System.
- The official name of Windows XP is Microsoft Windows XP Operating System.
- The official name of Windows Vista is Microsoft Windows Vista Operating System.
- The official name of Windows Server 2003 is Microsoft Windows Server 2003 Operating System.
- The official name of Windows Server 2008 is Microsoft Windows Server 2008 Operating System.
- Microsoft, Windows, Windows NT, and the brand names and product names of other Microsoft products are trademarks of Microsoft Corporation in the US and other countries.
- Apple, AppleTalk, Macintosh, Mac, Mac OS, Safari, and TrueType are trademarks of Apple Inc. in the US and other countries.
- PostScript is a trademark of Adobe Systems Incorporated.
- Mozilla, Firefox and Firefox logo are trademarks or registered trademarks of Mozilla Foundation in the U.S. and other countries.
- Netscape is a trademark of Netscape Communications Corporation.
- IBM, AT and AIX are trademarks of International Business Machines Corporation.
- NOVELL, NetWare, and NDS are trademarks of Novell, Inc.
- TopAccess is a trademark of Toshiba Tec Corporation.
- Other company names and product names in this manual are the trademarks of their respective companies.

©2009 TOSHIBA TEC CORPORATION All rights reserved

This manual is protected by copyright laws. No part of this manual shall be duplicated or reproduced without the permission of TOSHIBA TEC CORPORATION. TOSHIBA TEC CORPORATION shall not be liable in terms of granting patents for any use of information contained in this manual by third parties.



# CONTENTS

---

Preface.....	1
Software License Agreement .....	2
Before Reading This Manual .....	4

## Chapter 1 OVERVIEW

---

Overview.....	12
Contents .....	12
Use environments of TopAccess.....	14

## Chapter 2 BASIC OPERATIONS ON SCREENS (EQUIPMENT)

---

Various Screens .....	16
Basic Operations on Each Screen.....	18
To select mode main screen .....	18
To select each menu .....	19
To key in digits.....	21

## Chapter 3 CANCELING PRINT JOBS AND PRINTING FONT LISTS (EQUIPMENT)

---

To Cancel Print Jobs.....	24
To Print PCL/PS Font List.....	25
PCL font list / PS font list.....	25

## Chapter 4 PRINTING LISTS (EQUIPMENT)

---

To Print Lists.....	28
Configuration page .....	28
NIC status page.....	29

## Chapter 5 CONFIGURING NETWORKS (EQUIPMENT)

---

Network Configuration from Equipment .....	32
Ethernet Configuration .....	33
TCP/IP Configuration .....	35
IPX/SPX Configuration .....	40
AppleTalk Configuration.....	42
HTTP Configuration.....	44

---

## Chapter 6 TopAccess OVERVIEW

---

<b>TopAccess Overview .....</b>	<b>48</b>
End user mode .....	48
Administrator mode .....	49
<b>Accessing TopAccess from Your Computer .....</b>	<b>50</b>
Accessing TopAccess .....	50
TopAccess screen structure .....	53

---

## Chapter 7 TopAccess DEVICE TAB PAGE

---

<b>TopAccess Device Tab Page.....</b>	<b>56</b>
---------------------------------------	-----------

---

## Chapter 8 TopAccess REGISTRATION TAB PAGE

---

<b>Managing Address Book .....</b>	<b>60</b>
Managing contacts in the address book.....	60
Managing groups in the address book .....	64
<b>Managing Mailboxes .....</b>	<b>67</b>
Setting up an Open Mailbox .....	68
Deleting an Open Mailbox .....	74

---

## Chapter 9 TopAccess COUNTER TAB PAGE

---

<b>Viewing Counters .....</b>	<b>78</b>
Displaying the total counter .....	78
Displaying the department counter.....	79

---

## Chapter 10 TopAccess ADMINISTRATION TAB PAGE - SETUP MENU (Printing Function)

---

<b>Setting up Device Settings .....</b>	<b>83</b>
Setting up the device information .....	84
Setting up the energy save.....	85
Setting up the time and date .....	85
Setting up the Web general setting .....	85
<b>Setting up Network Settings (Printing Function) .....</b>	<b>86</b>
Setting up the TCP/IP.....	88
Setting up the IPX/SPX .....	89
Setting up the AppleTalk .....	89
Setting up the Bonjour .....	90
Setting up the DNS session.....	91
Setting up the DDNS session .....	92

---

Setting up the NetWare session .....	93
Setting up the HTTP network service .....	94
Setting up the SNMP network service .....	95
<b>Setting up Copier Settings .....</b>	<b>97</b>
Setting up the copier settings .....	98
<b>Setting up Fax Settings.....</b>	<b>99</b>
Setting up the Fax settings .....	101
<b>Setting up Printer Settings .....</b>	<b>105</b>
Setting up the general setting.....	106
Setting up the default Raw job setting .....	107
Setting up the Raw job setting.....	108
<b>Setting up Print Service Settings (Printing Function).....</b>	<b>111</b>
Setting up the Raw TCP print .....	112
Setting up the LPD print .....	113
Setting up the IPP print .....	113
Setting up the NetWare print .....	114
<b>Displaying Version Information .....</b>	<b>115</b>

---

## **Chapter 11 TopAccess ADMINISTRATION TAB PAGE - MAINTENANCE MENU**

---

<b>About the Maintenance Functions.....</b>	<b>118</b>
<b>Switching Languages.....</b>	<b>119</b>
<b>Backing up Data .....</b>	<b>121</b>
<b>Restoring Data from Backup File.....</b>	<b>124</b>
<b>Importing Address Book Data .....</b>	<b>127</b>
<b>Exporting Address Book Data.....</b>	<b>130</b>
<b>Importing Department Code Data .....</b>	<b>132</b>
<b>Exporting Department Code Data .....</b>	<b>134</b>

---

## **Chapter 12 MANAGING DEPARTMENT CODES ON TopAccess (FOR ADMINISTRATORS)**

---

<b>Managing Department Codes (For Administrators).....</b>	<b>138</b>
--	------------

---

## **Chapter 13 TROUBLESHOOTING**

---

<b>TopAccess Error Messages .....</b>	<b>140</b>
Device status indicator list.....	140
Error message list.....	141

---

---

**Chapter 14 APPENDIX**

---

List Print Format.....	144
INDEX .....	149

# 1

## OVERVIEW

This chapter describes the contents of this manual and the required use environments of TopAccess.

<b>Overview .....</b>	<b>12</b>
Contents .....	12
Use environments of TopAccess .....	14

## Overview

---

### Contents

This manual consists of the following 2 parts:





- Printer-related settings using the control panel of this equipment
- Settings and management of this equipment from a computer using TopAccess

#### **Printer-related settings using the control panel of this equipment**

---

The former part of this manual describes how to set up printer-related items and how to print lists using the [PRINTER] and [USER FUNCTIONS] buttons of the control panel.

See the following chapters for your reference:

Chapter 2	<b>BASIC OPERATIONS ON SCREENS (EQUIPMENT)</b> Describes the basic operations on the control panel screens of this equipment.
Chapter 3	 P.15 “BASIC OPERATIONS ON SCREENS (EQUIPMENT)” <b>CANCELING PRINT JOBS AND PRINTING FONT LISTS (EQUIPMENT)</b> Describes how to cancel a print job in process and how to print font lists, using the control panel of this equipment.  P.23 “CANCELING PRINT JOBS AND PRINTING FONT LISTS (EQUIPMENT)”
Chapter 4	<b>PRINTING LISTS (EQUIPMENT)</b> Describes how to print printer-related-lists from the control panel of this equipment.  P.27 “PRINTING LISTS (EQUIPMENT)”
Chapter 5	<b>CONFIGURING NETWORKS (EQUIPMENT)</b> Describes how to configure networks using the control panel of this equipment.  P.31 “CONFIGURING NETWORKS (EQUIPMENT)”

#### **Printer-related settings and management of this equipment using TopAccess**




---

The latter part of this manual describes how to set up and manage this equipment from your computer through a network using a co-packed utility TopAccess. TopAccess has 2 access levels; the end user level and administrator level. All the setting and maintenance functions of TopAccess can be utilized in the administrator level.





The following functions of this equipment are described:

- Printing functions set and managed from the TopAccess screens
- Fax functions set and managed from the TopAccess screens (only when the Fax Kit (optional) is installed)



See the following pages for your reference:

Chapter 6	<b>TopAccess OVERVIEW</b> Describes the overview of TopAccess and how to access TopAccess.  P.47 “TopAccess OVERVIEW”
Chapter 7	<b>TopAccess DEVICE TAB PAGE</b> Describes the device information on the Device tab page of TopAccess.  P.55 “TopAccess DEVICE TAB PAGE”
Chapter 8	<b>TopAccess REGISTRATION TAB PAGE</b> Describes how to manage the address book and Mailboxes on the TopAccess Registration tab page.  P.59 “TopAccess REGISTRATION TAB PAGE”

---

Chapter 9	TopAccess COUNTER TAB PAGE Describes how to display total counters on the TopAccess Counter tab page.  P.77 “TopAccess COUNTER TAB PAGE”
Chapter 10	TopAccess ADMINISTRATION TAB PAGE - SETUP MENU Describes the various items set by the TopAccess administrator.  P.81 “TopAccess ADMINISTRATION TAB PAGE - SETUP MENU (Printing Function)”
Chapter 11	TopAccess ADMINISTRATION TAB PAGE - MAINTENANCE MENU Describes the maintenance of TopAccess performed by the TopAccess administrator.  P.117 “TopAccess ADMINISTRATION TAB PAGE - MAINTENANCE MENU”
Chapter 12	MANAGING DEPARTMENT CODES ON TopAccess (FOR ADMINISTRATORS) Describes how to manage the department code by an administrator.  P.137 “MANAGING DEPARTMENT CODES ON TopAccess (FOR ADMINISTRATORS)”

#### Tips

- For troubleshooting, see “TROUBLESHOOTING”.  
 P.139 “TROUBLESHOOTING”
- For the lists printed by this equipment, see “Appendix”.  
 P.143 “APPENDIX”

## Use environments of TopAccess

This section describes the use environment of a co-packed utility TopAccess that comes with this equipment. Systems shown below enable you to access the TopAccess using your web browser so that you can set up or manage this equipment from a computer on the network.

### Network

Before using the TopAccess, this equipment must be properly connected to the network, and also TCP/IP and HTTP must be properly configured on this equipment. See the following manuals for the details:


- **Quick Start Guide for Printing Functions**  
Chapter 3 "CONNECTING TO A COMPUTER"  
  - ☰ "Connecting to the Network"
- **Setup Guide for Printing Functions (This manual)**  
Chapter 5 "CONFIGURING NETWORKS (EQUIPMENT)"  
  - ☰ P.35 "TCP/IP Configuration"
  - ☰ P.44 "HTTP Configuration"

### Web browser

TopAccess supports the following web browsers under Windows, Macintosh or UNIX environments:

- Windows: Microsoft Internet Explorer 5.5 SP2 or later  
Mozilla Firefox 1.5.0.4 or later
- Macintosh: Safari 2.0 (412.2) or later  
Mozilla Firefox 1.5.0.4 or later
- UNIX: Mozilla Firefox 1.5.0.4 or later

### Settings on equipment side and settings/management of this equipment using TopAccess:

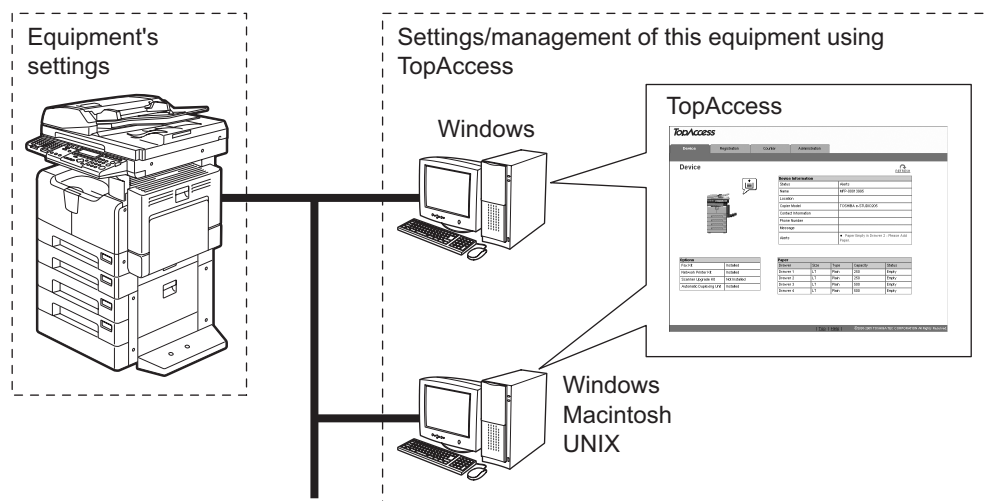



# 2

## BASIC OPERATIONS ON SCREENS (EQUIPMENT)

This chapter describes the basic operations on the control panel screens of this equipment.

<b>Various Screens .....</b>	<b>16</b>
<b>Basic Operations on Each Screen .....</b>	<b>18</b>
To select mode main screen .....	18
To select each menu .....	19
To key in digits.....	21

## Various Screens

---

Major screens appearing on the control panel LCD of this equipment are shown below.

### Ready screen (“Copy mode” main screen)

---

This screen appears a few tenths of a second after you turn the power of this equipment ON. The copying functions can be used.


This screen appears also when you have pressed the [COPY] button to switch the equipment into the copy mode from other modes.



#### Tip

If the ready screen is set for the Fax functions, the screen below appears after you turn the power ON.

Ready screen for Fax functions (“Fax mode” main screen):

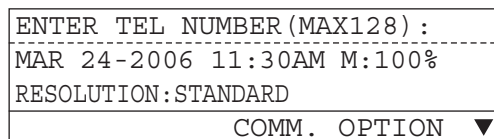

### Mode main screens


---

The mode selection main screens are 4 screens; the “copy mode” main screen, “printer mode” main screen, “user functions mode” main screen and “Fax mode” main screen. In these main screens, menus selectable in the subject mode appear.

To select and operate the mode selection main screen for the printer mode, see the following pages:

P.18 “To select mode main screen”

Example of “printer mode” main screen:

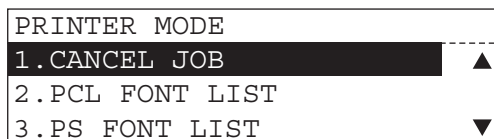

---

## Menu selection screen

---

This screen appears when you select desired menus or items. The name of the menus, sub-menus or items are displayed in this screen.

Example of "YES/NO" selection screen:

CANCEL ?
1 . YES ▲
2 . NO ▼

## Digit entry screen

---


This screen appears when you key in any digits. Enter digits using the digital keys on the control panel.

DEPARTMENT CODE
ENTER DEPARTMENT NUMBER (1-99) :
6

## Error message screen

---

This screen appears when an error has occurred.

	DRAWER1 empty
	Open DRAWER1
	Load paper
	Close DRAWER1


## Basic Operations on Each Screen

### To select mode main screen

When you press the mode selection button (= [PRINTER] or [USER FUNCTIONS]) in the ready screen displayed after power-ON, the main screen for each mode appears.

Ready screen ("Copy mode" main screen)

READY		1
100%	SORT	
ZOOM	FINISHING	EDIT

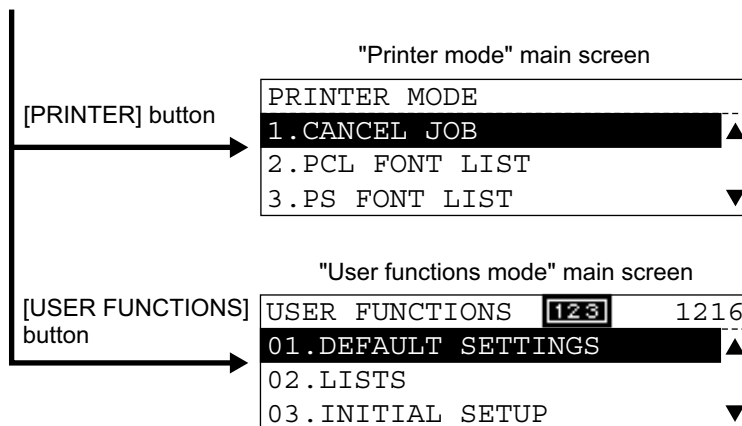

#### Tip

If the ready screen is set for the Fax functions, the "Fax mode" main screen appears as the ready screen.

#### [USER FUNCTIONS] button and screen transition:

- When you press the [USER FUNCTIONS] button while you are operating the copy or printer menu, the screen shifts to the "user function" main screen.
- When you press the [USER FUNCTIONS] button while you are operating the user functions menu, the screen returns to the previously selected main screen, i.e. the ready screen ("copy mode" main screen) or "printer mode" main screen.

Also, if you press the [FUNCTION CLEAR] button when the "user function" main screen is displayed, the screen returns to the previously selected main screen.

#### [PRINTER] button and screen transition:

When you press the [PRINTER] button while you are operating each menu, the screen shifts to the "printer mode" main screen.


For example, when you press it while you are operating the user functions menu, the "printer mode" main screen appears.

#### To return to main screen for each mode:

If you press the [FUNCTION CLEAR] button while you are operating each menu, the screen returns to the main screen for the current mode.

## To select each menu

You can select the desired menu or item in the menu selection screen.

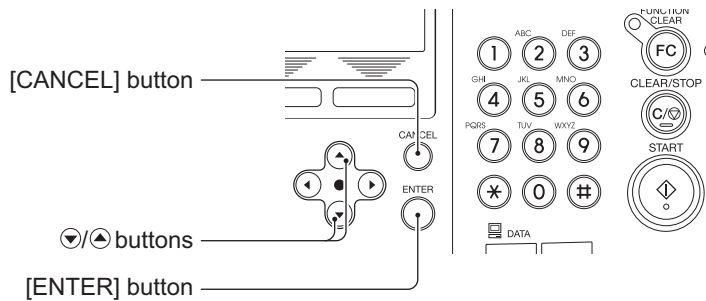


Button	Function
▲ / ▼	Press these buttons to select menus or items. The cursor moves to the menu or item selected. The selected menu or item is highlighted. When you press ▲, the cursor scrolls up. When you press ▼, it scrolls down.
[ENTER]	Press this button to execute the selected menu or item.
[CANCEL]	Press this button to cancel the selected operation. The screen returns to the previous one. (If you press this several times, the screen returns to the main screen for the current mode.)

### Note

The menus displayed in the screen differ depending on which options are installed. Some menus displayed in the menu selection screen shown in this manual may not be displayed in the actual screen, if the corresponding option is not installed.

## Example of menu selection


The menu selection procedure to cancel a print job in the “printer mode” main screen is shown below.

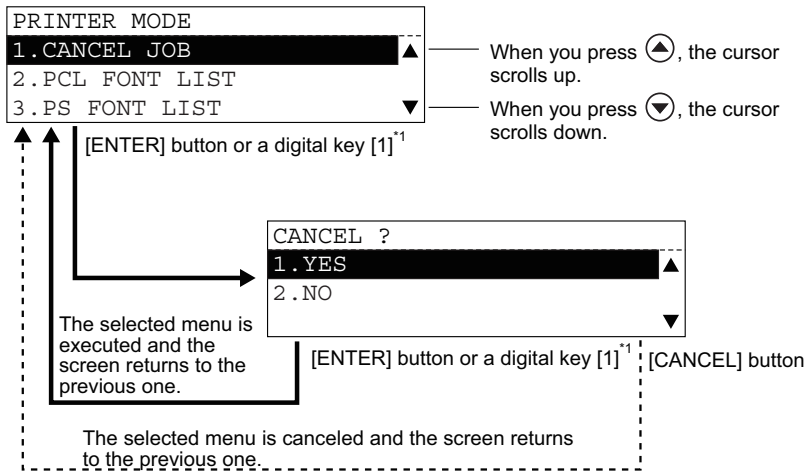

- \*1 Each menu in this equipment has a serial number. When you key in the first 1 or 2 digits of the serial number, you can immediately select this menu. (In other words, this procedure substitutes for the entry by pressing ▲ / ▼ and the [ENTER] button.) With this function, you can select a menu located at the bottom of the hierarchical menu-tree structure by entering a series of numbers (e.g. “03” “03” “02”).

## To key in digits

You can enter digits using the digital keys.

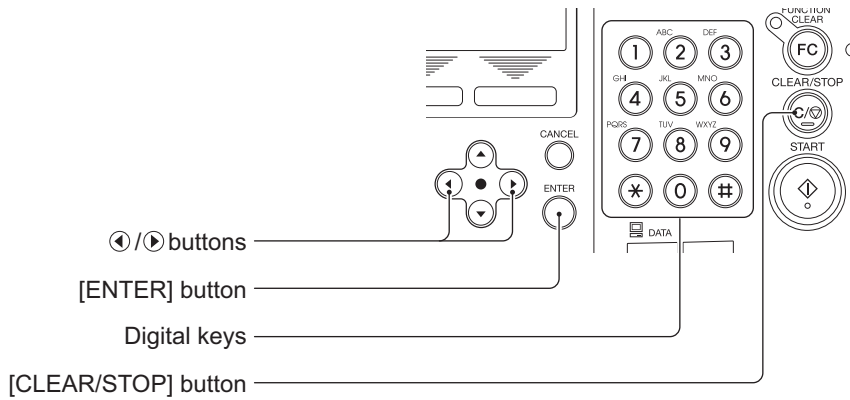

Button /Digital key	Function
Digital Keys	Press these keys to enter digits when the digit entry screen is displayed.
[ENTER]	Press this button to determine the digits keyed in.
◀ / ▶	Press these buttons to move the cursor to the right or left. When you press ◀, the cursor moves to the left. When you press ▶, it moves to the right. When you want to correct a digit already keyed in, move the cursor to the digit and then key in a new digit. The digit is replaced with a new one.
[CLEAR/STOP]	Digits keyed in are all cleared.





# 3

## CANCELING PRINT JOBS AND PRINTING FONT LISTS (EQUIPMENT)


This chapter describes how to cancel a print job in process and how to print font lists, using the control panel of this equipment.

<b>To Cancel Print Jobs .....</b>	<b>24</b>
<b>To Print PCL/PS Font List .....</b>	<b>25</b>
PCL font list / PS font list.....	25

## To Cancel Print Jobs

You can cancel a print job in process using the [PRINTER] button. Canceling print jobs is required usually in the following cases:

- A print job in process needs to be discarded
- Paper has run out during printing and you want to discard the rest of the job. The message screen shown below appears when paper has run out.

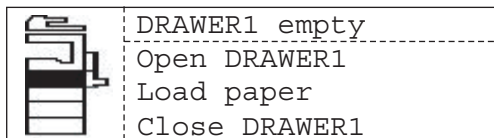

### Note


Canceling print jobs is possible only when this equipment is actually printing a job. If you attempt to cancel a print job when this equipment is not doing so, “Not allowed now” appears in the screen.

### 1 Press the [PRINTER] button when the ready screen is displayed.

The “printer mode” main screen appears.



### 2 Press $\uparrow$ or $\downarrow$ to select CANCEL JOB, and then press the [ENTER] button.

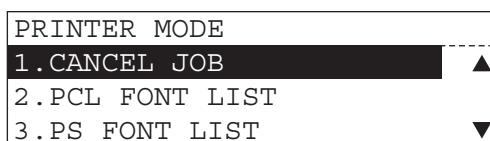

### 3 Press $\uparrow$ or $\downarrow$ to select YES, and then press the [ENTER] button.

The print job is canceled and “Operation Completed” appears. The screen returns to the “printer mode” main screen shown in step 2.



# To Print PCL/PS Font List

You can print the following font lists using the [PRINTER] button:

- PCL font list
- PS font list

## Note

The lists are printed on A4 (LT) or A4-R (LT-R) size paper. Check that paper of the specified size is set.

## Tip

For each font list printed, see the following page:

 P.144 “List Print Format”



## PCL font list / PS font list

You can print lists for the internal PCL font and PS font to be used for printing.

- 1 Press the [PRINTER] button when the ready screen is displayed.**

The “printer mode” main screen appears.



- 2 Press  or  to select PCL FONT LIST or PS FONT LIST, and then press the [ENTER] button.**

“Printing accepted” appears and the selected internal font list is printed out. The screen returns to the “printer mode” main screen shown in step 2.





# 4

## PRINTING LISTS (EQUIPMENT)

This chapter describes how to print printer-related lists from the control panel of this equipment.

<b>To Print Lists .....</b>	<b>28</b>
Configuration page.....	28
NIC status page .....	29

## To Print Lists


You can print the printer-related lists shown below using the [USER FUNCTIONS] button.

- Configuration page
- NIC status page

### Note

The lists are printed on A4 (LT) or A4-R (LT-R) size paper. Check that paper of the specified size is set.

### Tips

- For each list mentioned above, see the following page:  
 P.144 "List Print Format"
- You can see the printer-related user settings by printing the Function List. See the *Operator's Manual for Copying Functions*.
- You can see the printer-related menu list by printing the Menu List. See the *Operator's Manual for Copying Functions*.

## Configuration page

You can print out the setting status of the Network Printer Kit (optional).


### Tip

See the following Operator's Manual for details of the setting items regarding printing functions.

#### Quick Start Guide for Printing Functions

Default Setting List


Chapter 5 "APPENDIX"

 "Default settings for NETWORK SETTING"

 "Default settings for PRINT SERVICE SETTING"

### 1 Press the [USER FUNCTIONS] button.

The "user functions mode" main screen appears.

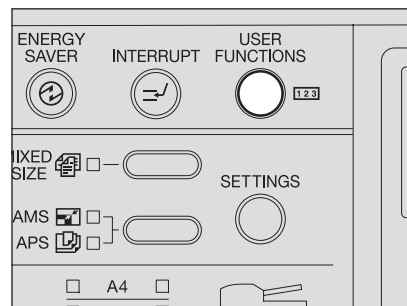


### 2 Press or to select **LISTS**, and then press the [ENTER] button.



- Press **▲** or **▼** to select **CONFIGURATION PAGE**, and then press the **[ENTER]** button.

“Printing accepted” appears and the configuration page is printed out.

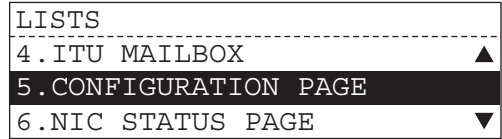


## NIC status page

You can print out the setting status of the NIC (Network Interface Card) of the Network Printer Kit (optional).

- Press the **[USER FUNCTIONS]** button.

The “user functions mode” main screen appears.

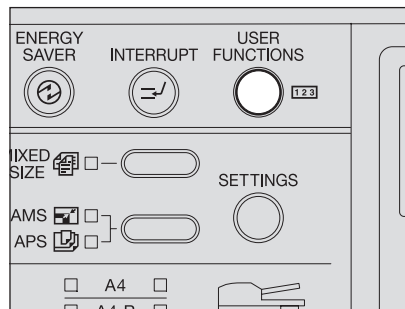


- Press **▲** or **▼** to select **LISTS**, and then press the **[ENTER]** button.



- Press **▲** or **▼** to select **NIC STATUS PAGE**, and then press the **[ENTER]** button.

“Printing accepted” appears and the NIC status page is printed out.

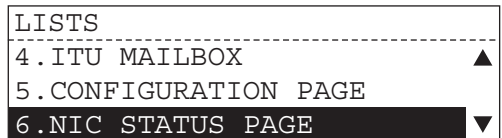





# 5

## CONFIGURING NETWORKS (EQUIPMENT)






This chapter describes how to configure networks using the control panel of this equipment.

<b>Network Configuration from Equipment.....</b>	<b>32</b>
<b>Ethernet Configuration.....</b>	<b>33</b>
<b>TCP/IP Configuration.....</b>	<b>35</b>
<b>IPX/SPX Configuration .....</b>	<b>40</b>
<b>AppleTalk Configuration .....</b>	<b>42</b>
<b>HTTP Configuration .....</b>	<b>44</b>

## Network Configuration from Equipment



---

You can perform the following network configurations using the [USER FUNCTIONS] button:


-  P.33 "Ethernet Configuration"
-  P.35 "TCP/IP Configuration"
-  P.40 "IPX/SPX Configuration"
-  P.42 "AppleTalk Configuration"
-  P.44 "HTTP Configuration"

### To use TopAccess:

Before using a web-based utility TopAccess, TCP/IP protocol and HTTP network server service must be configured in this equipment.

-  P.35 "TCP/IP Configuration"
-  P.44 "HTTP Configuration"

When TCP/IP and HTTP have been configured, you can use TopAccess on your computer. Once TopAccess is enabled, all the network configurations including the reconfiguration of TCP/IP and HTTP can be executed from TopAccess screen. For the network configurations using TopAccess, see the following page:


-  P.86 "Setting up Network Settings (Printing Function)"

# Ethernet Configuration

You can specify the link speed and communication mode of Ethernet.

- 1 Press the [USER FUNCTIONS] button when the ready screen is displayed.


The “user functions mode” main screen appears.

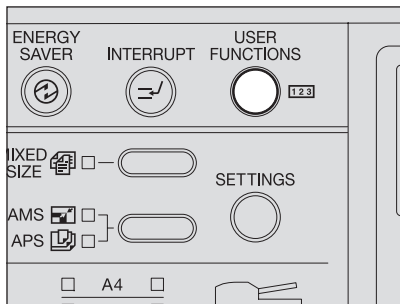

- 2 Press  $\blacktriangle$  or  $\blacktriangledown$  to select INITIAL SETUP, and then press the [ENTER] button.



- 3 Press  $\blacktriangle$  or  $\blacktriangledown$  to select NETWORK, and then press the [ENTER] button.

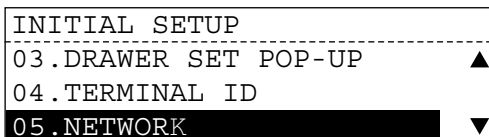



- 4 Press  $\blacktriangle$  or  $\blacktriangledown$  to select ETHERNET, and then press the [ENTER] button.



- 5 Press  $\blacktriangle$  or  $\blacktriangledown$  to select LINK SPEED/DUPLEX MODE, and then press the [ENTER] button.



- 6 Press  $\blacktriangle$  or  $\blacktriangledown$  to select the desired link speed and communication mode.

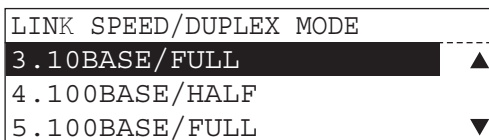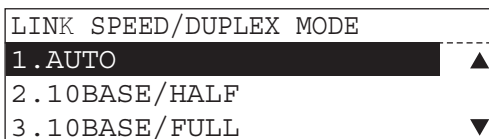

AUTO:	Detects the Ethernet link speed automatically.
10BASE/HALF:	Uses 10BASE-T half-duplex communication mode.
10BASE/FULL:	Uses 10BASE-T full-duplex communication mode.
100BASE/HALF:	Uses 100BASE-TX half-duplex communication mode.
100BASE/FULL:	Uses 100BASE-TX full-duplex communication mode.

#### Notes

- When you select other than AUTO above, refer to the specifications of the network to which this equipment is connected.
- If you are not sure of the most appropriate link speed or communication mode, select AUTO.

## 7 Press the [ENTER] button.

The screen returns to the shown in step 5.

## 8 Press the [CANCEL] button once to return the screen to the NETWORK menu screen.



#### Note

If you press the [CANCEL] button more than twice and exit the NETWORK menu, the NIC initialization operation in the next step becomes ineffective. In this case, repeat the procedure from step 1.

## 9 Press ▲ or ▼ to select COMPLETE, and then press the [ENTER] button.

The initialization starts and “Initializing” appears. When it is completed, “Operation Completed” appears and the screen returns to the one shown in step 3.



## 10 Press the [CANCEL] button once or press the [FUNCTION CLEAR] button to return the screen to the “user function mode” main screen.

#### Note

If the network connection is still unstable even after following the procedure above, turn the power of this equipment OFF and then back ON.

# TCP/IP Configuration

You can configure TCP/IP protocol. This TCP/IP configuration includes address assignment method selection, IP address, subnet mask, and default gateway assignment (manual assignment).

## Notes

- The configuration of TCP/IP protocol differs depending on your network environments.
- Before using a web-based utility TopAccess, TCP/IP protocol and HTTP network server service must be configured in this equipment. For HTTP configuration, see the following page:  
📖 P.44 “HTTP Configuration”

### Configuring TCP/IP using DHCP or Auto IP function:

If you are not sure of the proper TCP/IP configuration method to assign an address to this equipment, select “DYNAMIC” for the address assignment method. When you select “DYNAMIC”, this equipment obtains an IP address, subnet mask and gateway from a DHCP server, if your network supports DHCP. If your network does not support it, the Auto IP function will assign a proper IP address to this equipment.

### Configuring TCP/IP using only DHCP:

When you connect this equipment to a local area network including a DHCP server and configure TCP/IP for this equipment using only DHCP, without the Auto IP function, select “NO AUTOIP” for the address assignment method. When you select “NO AUTOIP”, this equipment obtains an IP address, subnet mask and gateway from the DHCP server. The automatic IP address assignment with the Auto IP function is disabled.


### Connecting to local area network requiring static IP addresses:

When you connect this equipment to a local area network requiring a static IP address, select “STATIC IP” for the address assignment method and specify the IP address manually. Subnet mask and default gateway should also be configured as required.

## Automatic IP address assignment

- 1 Press the [USER FUNCTIONS] button when the ready screen is displayed.

The “user functions mode” main screen appears.

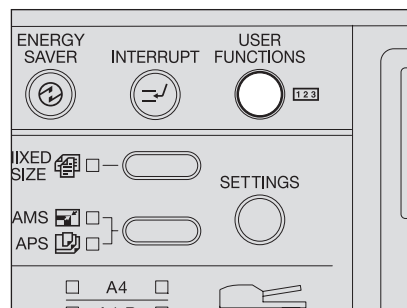

- 2 Press ▲ or ▼ to select INITIAL SETUP, and then press the [ENTER] button.



- 3** Press **▲** or **▼** to select **NETWORK**, and then press the **[ENTER]** button.

```

INITIAL SETUP
-----
03.DRAWER SET POP-UP      ▲
04.TERMINAL ID
05.NETWORK                ▼
  
```

- 4** Press **▲** or **▼** to select **TCP/IP**, and then press the **[ENTER]** button.

```

NETWORK
-----
01.COMPLETE              ▲
02.ETHERNET
03.TCP/IP                ▼
  
```

- 5** Press **▲** or **▼** to select **ADDRESS MODE**, and then press the **[ENTER]** button.

```

TCP/IP
-----
01.ADDRESS MODE         ▲
02.IP ADDRESS
03.SUBNET MASK          ▼
  
```

- 6** Press **▲** or **▼** to select the desired method of automatic IP address assignment.

```

ADDRESS MODE
-----
1.STATIC IP             ▲
2.DYNAMIC
3.NO AUTOIP             ▼
  
```

DYNAMIC: Obtains an IP address automatically using the Auto IP function and DHCP.

NO AUTOIP: Obtains an IP address automatically using DHCP.

- 7** Press the **[ENTER]** button.

The screen returns to the shown in step 5.

- 8** Press the **[CANCEL]** button once to return the screen to the **NETWORK** menu screen.

```

NETWORK
-----
01.COMPLETE              ▲
02.ETHERNET
03.TCP/IP                ▼
  
```

#### Note

If you press the **[CANCEL]** button more than twice and exit the **NETWORK** menu, the NIC initialization operation in the next step becomes ineffective. In this case, repeat the procedure from step 1.

- 9** Press **▲** or **▼** to select **COMPLETE**, and then press the **[ENTER]** button.

The initialization starts and “Initializing” appears. When it is completed, “Operation Completed” appears and the screen returns to the one shown in step 3.

```

NETWORK
-----
01.COMPLETE              ▲
02.ETHERNET
03.TCP/IP                ▼
  
```

- Press the [CANCEL] button once or press the [FUNCTION CLEAR] button to return the screen to the “user function mode” main screen.

**Tip**


You can check the configuration status and the obtained value if you print out the NIC status page.

📖 P.29 “NIC status page”

## Manual IP address assignment

- Press the [USER FUNCTIONS] button when the ready screen is displayed.


The “user functions mode” main screen appears.

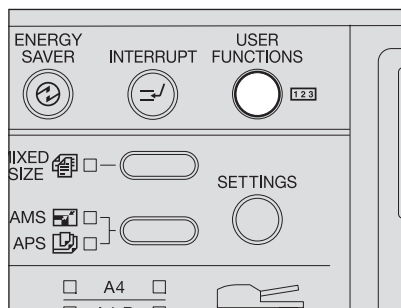

- Press ▲ or ▼ to select INITIAL SETUP, and then press the [ENTER] button.




- Press ▲ or ▼ to select NETWORK, and then press the [ENTER] button.

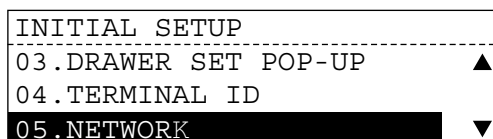

- Press ▲ or ▼ to select TCP/IP, and then press the [ENTER] button.



- Press ▲ or ▼ to select ADDRESS MODE, and then press the [ENTER] button.

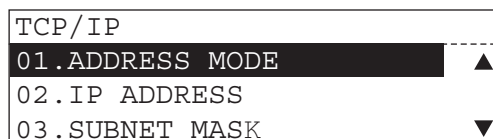

- 6** Press **▲** or **▼** to select **STATIC IP**, and then press the **[ENTER]** button.

The screen returns to the one shown in step 5.

ADDRESS MODE	
1.STATIC IP	▲
2.DYNAMIC	
3.NO AUTOIP	▼

- 7** Press **▲** or **▼** to select **IP ADDRESS**, and then press the **[ENTER]** button.

TCP/IP	
-----	
01.ADDRESS MODE	▲
02.IP ADDRESS	
03.SUBNET MASK	▼

- 8** Enter the IP address, and then press the **[ENTER]** button.

The screen returns to the one shown in step 7.

IP ADDRESS	
-----	
XXX.XXX.XXX.XXX	

- 9** Press **▲** or **▼** to select **SUBNET MASK**, and then press the **[ENTER]** button.

TCP/IP	
-----	
01.ADDRESS MODE	▲
02.IP ADDRESS	
03.SUBNET MASK	▼

- 10** Key in the subnet mask value as required, and then press the **[ENTER]** button.

The screen returns to the one shown in step 9.

SUBNET MASK	
-----	
XXX.XXX.XXX.XXX	

- 11** Press **▲** or **▼** to select **DEFAULT GATEWAY**, and then press the **[ENTER]** button.

TCP/IP	
-----	
02.IP ADDRESS	▲
03.SUBNET MASK	
04.DEFAULT GATEWAY	▼

- 12** Key in the default gateway value as required, and then press the **[ENTER]** button.

DEFAULT GATEWAY	
-----	
XXX.XXX.XXX.XXX	

- 13** Press the **[CANCEL]** button once to return the screen to the **NETWORK** menu screen.

NETWORK	
-----	
01.COMPLETE	▲
02.ETHERNET	
03.TCP/IP	▼

**Note**

If you press the **[CANCEL]** button more than twice and exit the **NETWORK** menu, the NIC initialization operation in the next step becomes ineffective. In this case, repeat the procedure from step 1.



---

**14** Press ▲ or ▼ to select **COMPLETE**, and then press the **[ENTER]** button.

The initialization starts and “Initializing” appears. When it is completed, “Operation Completed” appears and the screen returns to the one shown in step 3.




**15** Press the **[CANCEL]** button once or press the **[FUNCTION CLEAR]** button to return the screen to the “user function mode” main screen.

## IPX/SPX Configuration

You can configure IPX/SPX protocol. The IPX/SPX protocol is configured usually to communicate with a NetWare file server.

- 1 Press the **[USER FUNCTIONS]** button when the ready screen is displayed.


The “user functions mode” main screen appears.

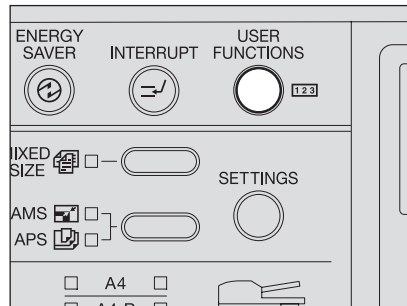

- 2 Press **▲** or **▼** to select **INITIAL SETUP**, and then press the **[ENTER]** button.




- 3 Press **▲** or **▼** to select **NETWORK**, and then press the **[ENTER]** button.

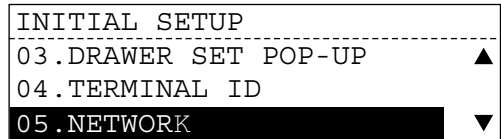

- 4 Press **▲** or **▼** to select **IPX/SPX**, and then press the **[ENTER]** button.



- 5 Press **▲** or **▼** to select **IPX/SPX**, and then press the **[ENTER]** button.

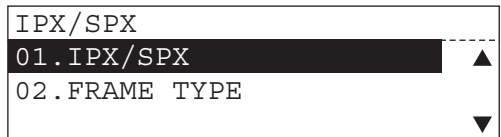


- 6 Press **▲** or **▼** to select **ENABLE**, and then press the **[ENTER]** button.

The screen returns to the one shown in step 5.



- 7 Press **▲** or **▼** to select **FRAME TYPE**, and then press the **[ENTER]** button.

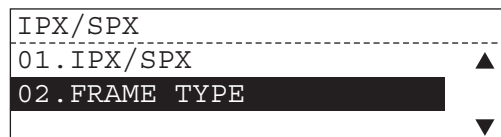

**8** Press **▲** or **▼** to select the desired frame type.

FRAME TYPE	
1 . AUTO SENCE	▲
2 . IEEE802.2	
3 . IEEE802.3	▼

FRAME TYPE	
3 . IEEE802.3	▲
4 . ETHERNET II	
5 . IEEE802.3 SNAP	▼

- AUTO SENSE:** Detects the most appropriate frame type automatically.
- IEEE802.2:** Selects a frame type compatible with IEEE802.2.
- IEEE802.3:** Selects a frame type compatible with IEEE802.3.
- ETHERNET II:** Selects a frame type compatible with Ethernet II.
- IEEE802.3 SNAP:** Selects a frame type compatible with IEEE802.3 SNAP.

**Note**

If you are not sure of the most appropriate frame type, select AUTO SENSE.

**9** Press the **[ENTER]** button.

The screen returns to the one shown in step 7.

**10** Press the **[CANCEL]** button once to return the screen to the **NETWORK** menu screen.

NETWORK	
04 . IPX/SPX	▲
05 . APPLE TALK	
06 . HTTP	▼

**Note**

If you press the **[CANCEL]** button more than twice and exit the **NETWORK** menu, the NIC initialization operation in the next step becomes ineffective. In this case, repeat the procedure from step 1.

**11** Press **▲** or **▼** to select **COMPLETE**, and then press the **[ENTER]** button.

The initialization starts and "Initializing" appears. When it is completed, "Operation Completed" appears and the screen returns to the one shown in step 3.

NETWORK	
01 . COMPLETE	▲
02 . ETHERNET	
03 . TCP/IP	▼


**12** Press the **[CANCEL]** button once or press the **[FUNCTION CLEAR]** button to return the screen to the "user function mode" main screen.

## AppleTalk Configuration

AppleTalk protocol must be enabled when AppleTalk printing from Macintosh computers needs to be enabled.


Set the device name of this equipment and AppleTalk zone using TopAccess as required.



See the following page:

 P.89 “Setting up the AppleTalk”

- 1 Press the [USER FUNCTIONS] button when the ready screen is displayed.

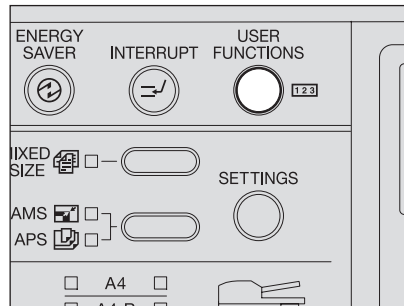
The “user functions mode” main screen appears.





- 2 Press  or  to select INITIAL SETUP, and then press the [ENTER] button.

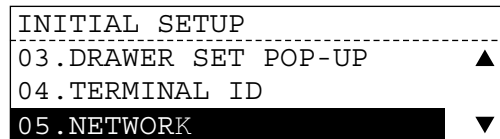

- 3 Press  or  to select NETWORK, and then press the [ENTER] button.






- 4 Press  or  to select APPLE TALK, and then press the [ENTER] button.



- 5 Press  or  to select APPLE TALK, and then press the [ENTER] button.



- 6 Press  or  to select ENABLE for enabling AppleTalk, or select DISABLE for disabling it. Then press the ENTER button.

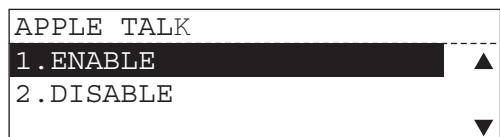

The screen returns to the one shown in step 5.

- 
- 7** Press the [CANCEL] button once to return the screen to the NETWORK menu screen.



**Note**

If you press the [CANCEL] button more than twice and exit the NETWORK menu, the NIC initialization operation in the next step becomes ineffective. In this case, repeat the procedure from step 1.

- 8** Press ▲ or ▼ to select COMPLETE, and then press the [ENTER] button.

The initialization starts and "Initializing" appears. When it is completed, "Operation Completed" appears and the screen returns to the one shown in step 3.




- 9** Press the [CANCEL] button once or press the [FUNCTION CLEAR] button to return the screen to the "user function mode" main screen.

## HTTP Configuration

To use a web-based utility TopAccess, HTTP network server service must be enabled. This service must be enabled also for IPP printing.

- 1 Press the **[USER FUNCTIONS]** button when the ready screen is displayed.


The “user functions mode” main screen appears.

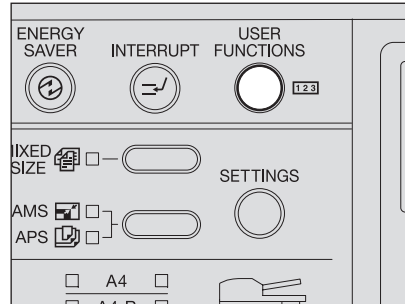

- 2 Press **▲** or **▼** to select **INITIAL SETUP**, and then press the **[ENTER]** button.




- 3 Press **▲** or **▼** to select **NETWORK**, and then press the **[ENTER]** button.

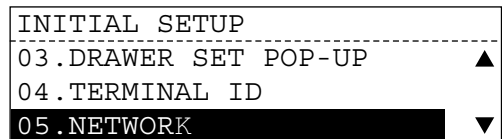

- 4 Press **▲** or **▼** to select **HTTP**, and then press the **[ENTER]** button.




- 5 Press **▲** or **▼** to select **HTTP SERVER**, and then press the **[ENTER]** button.

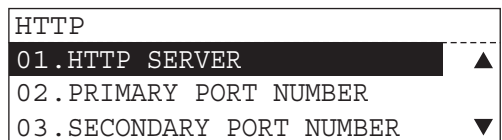


- 6 Press **▲** or **▼** to select **ENABLE** for enabling HTTP network server, or select **DISABLE** for disabling it. Then press the **[ENTER]** button.

The screen returns to the one shown in step 5.

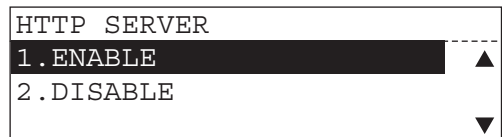

- 7 Press **▲** or **▼** to select **PRIMARY PORT NUMBER**, and then press the **[ENTER]** button.

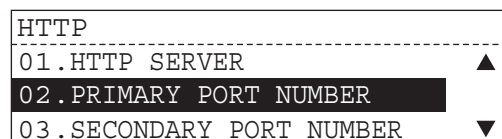

- 8** Key in the port number (normally “80”) to access HTTP, and then press the [ENTER] button.

The screen returns to the one shown in step 7.

**Note**

Port number “80” is set by default. If you want to change it, press the [Clear/Stop] button and key in the desired port number.

PRIMARY PORT NUMBER
-----
ENTER THE PORT NUMBER: ▲
█ ▼

- 9** Press ▲ or ▼ to select **SECONDARY PORT NUMBER**, and then press the [ENTER] button.

HTTP
-----
01 . HTTP SERVER ▲
02 . PRIMARY PORT NUMBER
03 . SECONDARY PORT NUMBER ▼

- 10** Key in the port number (normally “8080”) to access TopAccess, and then press the [ENTER] button.

The screen returns to the one shown in step 9.

**Note**

Port number “8080” is set by default. If you want to change it, press the [Clear/Stop] button and key in the desired port number.

SECONDARY PORT NUMBER
-----
ENTER THE PORT NUMBER: ▲
█ ▼

- 11** Press the [CANCEL] button once to return the screen to the **NETWORK** menu screen.

NETWORK
-----
04 . IPX/SPX ▲
05 . APPLE TALK
06 . HTTP ▼

**Note**

If you press the [CANCEL] button more than twice and exit the NETWORK menu, the NIC initialization operation in the next step becomes ineffective. In this case, repeat the procedure from step 1.

- 12** Press ▲ or ▼ to select **COMPLETE**, and then press the [ENTER] button.

The initialization starts and “Initializing” appears. When it is completed, “Operation Completed” appears and the screen returns to the one shown in step 3.

NETWORK
-----
01 . COMPLETE ▲
02 . ETHERNET
03 . TCP/IP ▼

- 13** Press the [CANCEL] button once or press the [FUNCTION CLEAR] button to return the screen to the “user function mode” main screen.





# 6

## TopAccess OVERVIEW

This chapter describes the overview of TopAccess and how to access TopAccess.


<b>TopAccess Overview .....</b>	<b>48</b>
End user mode .....	48
Administrator mode .....	49
<b>Accessing TopAccess from Your Computer .....</b>	<b>50</b>
Accessing TopAccess .....	50
TopAccess screen structure .....	53

## TopAccess Overview

---

TopAccess has two access levels: the end user level and the administrator level. The administrator can configure all settings available and can perform maintenance operations.

### Tips




- For detailed explanation on TopAccess, see the following page:  
 P.14 “Use environments of TopAccess”
- Display and setting items for Fax are available only when the Fax Kit (optional) is installed in this equipment.

### Note

When the setting or operation given in this manual is performed, do not turn the power of the equipment OFF until the TopAccess screen is automatically updated.

## End user mode

The following settings and management are available in the end user mode:

- Checking device status (Device tab page)  
On the Device tab page, you can view the various types of device information of this equipment, messages and alerts, current paper size and remaining status in each drawer, and option installation status.  
 P.55 “TopAccess DEVICE TAB PAGE”
- Managing address book (Registration tab page)  
On the Registration tab page, you can add or edit destinations (contact names) of the address book.  
 P.59 “TopAccess REGISTRATION TAB PAGE”
- Managing counters (Counter tab page)  
On the Counter tab page, you can view the current values of the total counters.  
 P.77 “TopAccess COUNTER TAB PAGE”

---

## Administrator mode

Only a person who has an administrator privilege can access this mode. To use the administrator mode, the administrator's password should be entered.

- Various settings and maintenance operations by the administrator (Administrator tab)


Setup menu:

- General settings
- Network settings
- Copier settings
- Fax setting
- Printer settings
- Print service settings

 P.81 "TopAccess ADMINISTRATION TAB PAGE - SETUP MENU (Printing Function)"

Maintenance menu:

- Installation of language
- Backup (Address book)
- Restore (Address book)
- Import (Address book)
- Export (Address book, Department code data)

 P.117 "TopAccess ADMINISTRATION TAB PAGE - MAINTENANCE MENU"

- Managing department codes (Counter tab page)

The administrator can view all of the registered department codes. The total counter of each code is displayed in the department code list.

 P.137 "MANAGING DEPARTMENT CODES ON TopAccess (FOR ADMINISTRATORS)"

## Accessing TopAccess from Your Computer

You can access TopAccess using your computer.

### Notes

- If TopAccess does not start on your computer at its first use, see the following pages to check if the TCP/IP protocol and HTTP network service have been correctly set:
  - 📖 P.35 “TCP/IP Configuration”
  - 📖 P.44 “HTTP Configuration”
- Since TopAccess requires cookies to store data on your computer, cookies must be set in the web browser on your computer in advance.
- When TopAccess does not work properly, delete the cookies and try again.
- Do not perform the same setting in TopAccess from one computer at the same time using more than one web browser.

## Accessing TopAccess

The procedures to access a TopAccess on your computer are shown below. The procedures are explained separately in both the end user mode and the administrator mode.

### Note

Do not run more than one TopAccess at a time on your computer.

### TopAccess access procedure

#### 1 Start the web browser on your computer and enter the URL shown below in the address field.

http://<IP Address> or http://<Device Name>

Address

For example

When the IP address of the equipment is “10.10.70.105”:

http://10.10.70.105

When the device name of this equipment is “mfp-00c67861”:

http://mfp-04391122

#### 2 The TopAccess top page for end users is displayed.

The screenshot displays the TopAccess web interface. At the top, there are navigation tabs: Device, Registration, Counter, and Administration. The 'Device' tab is selected. Below the tabs, there is a 'Device' section with a small image of a printer and a 'Device Information' table. To the right of the printer image is a table with the following data:

Device Information	
Status	ready
Name	MFP-00013995
Location	
Copier Model	TOSHIBA e-STUDIO182
Contact Information	
Phone Number	
Message	
Alerts	*


Below the printer image and device information table, there are two tables: 'Options' and 'Paper'.

Options	
Fax #8	Installed
Network Printer #8	Installed
Scanner Upgrade #8	Not installed
Automatic Duplexing Unit	Installed

Paper					
Drawer	Size	Type	Capacity	Status	
Drawer 1	LT	Plain	250	Empty	
Drawer 2	LT	Plain	250	Empty	
Drawer 3	LT	Plain	500	Empty	
Drawer 4	LT	Plain	500	Empty	

At the bottom of the page, there is a footer with the text: '©2005-2008 TOSHIBA TEC CORPORATION All Rights Reserved'.


### 3 Click each tab to display each main page.

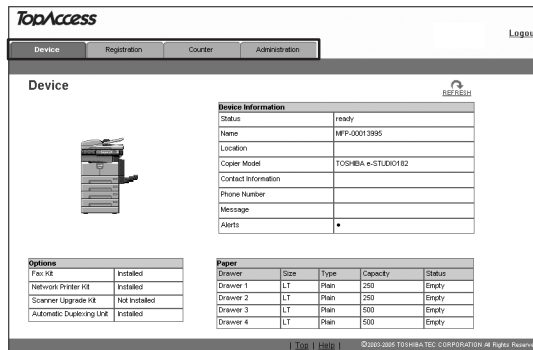

The following function tabs are provided:

- **Device tab**  
The Device tab page is displayed. See the following page for the explanation on the Device tab page:  
 P.55 “TopAccess DEVICE TAB PAGE”
- **Registration tab**  
The Registration tab page is displayed. See the following page for the explanation on the Registration tab page:  
 P.59 “TopAccess REGISTRATION TAB PAGE”
- **Counter tab**  
The Counter tab page is displayed. See the following page for the explanation on the Counter tab page:  
 P.77 “TopAccess COUNTER TAB PAGE”
- **Administration tab**  
The Login page is displayed.  
Proceed to the next step.

### 4 When you click the Administrator tab, enter the administrator password in the “Password” field. Then click [Login].

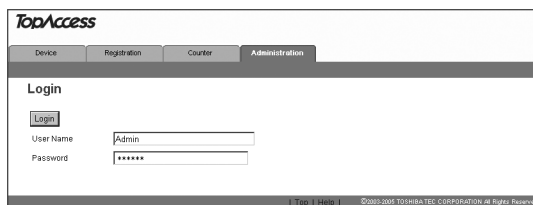


The Setup menu page is displayed.

#### Notes

- Do not change the login name in the User Name field. It must be always “Admin” to log into the administrator mode.
- The default administrator password is “123456”. The administrator should change the password as required. The changed password should be well managed by the administrator on the administrator’s responsibility.  
See the following page on how to change the password:  
 P.83 “Setting up Device Settings”

## 5 Click the menu name to display the desired page.

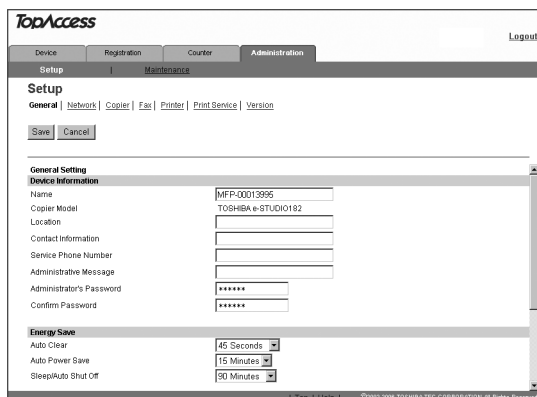

The following 2 menus are provided. When you click a menu, the associated menu page is displayed.


- Setup menu  
The Setup menu page is displayed. See the following page for the explanation on the Setup menu page:  
 P.81 “TopAccess ADMINISTRATION TAB PAGE - SETUP MENU (Printing Function)”
- Maintenance menu  
The Maintenance menu page is displayed. See the following page for the explanation on the Maintenance menu page:  
 P.117 “TopAccess ADMINISTRATION TAB PAGE - MAINTENANCE MENU”

### Tip

To log out of the administrator mode, click the Logout link displayed on the upper right.

# TopAccess screen structure

When you access TopAccess, the Device tab page is displayed:

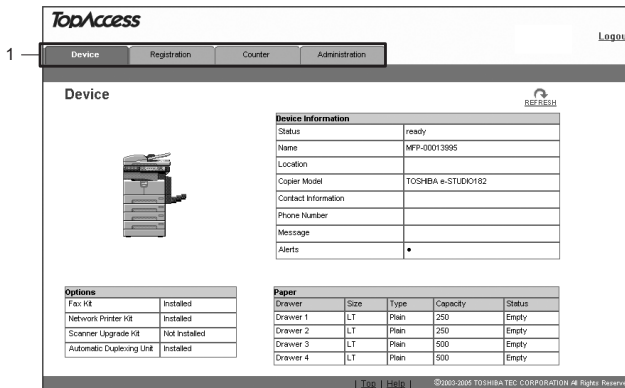


## 1) Function

This provides access to the main pages of TopAccess for each function. When you click each tab, the corresponding tab page is displayed.

- Device tab
- Registration tab
- Counter tab
- Administration tab

## Menu display:

The basic TopAccess menu page contains the following items:

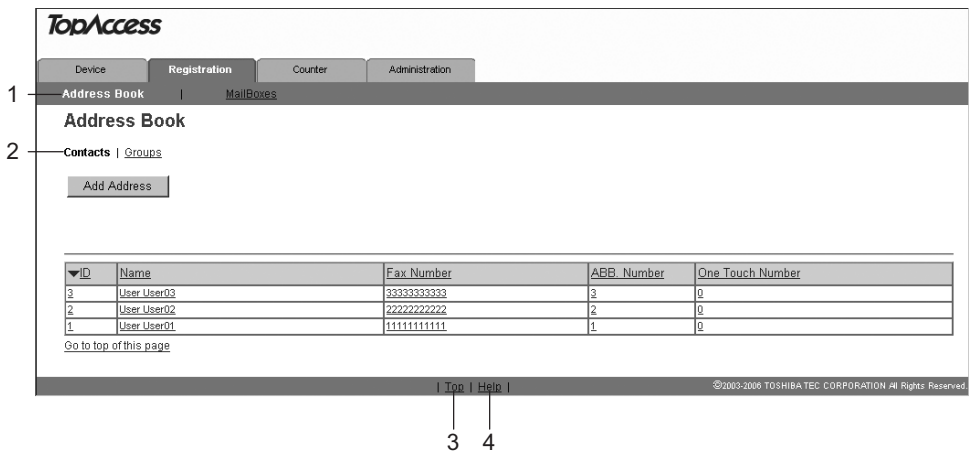

## 1) Menu bar

This provides access to each menu page under the selected function tab.

## 2) Submenu bar

This provides access to each submenu page under the selected menu and function tab.

## 3) Top link

Click this to display the top of the page currently shown.

## 4) Help link

Click this to display Online Help.

**Note**

The TopAccess Online Help cannot be displayed in the following browsers.

- Safari 2.0



# 7

## TopAccess DEVICE TAB PAGE

This chapter describes the device information on the Device tab page of TopAccess.

<b>TopAccess Device Tab Page.....</b>	<b>56</b>
---------------------------------------	-----------

## TopAccess Device Tab Page

When TopAccess opens, the Device tab page is displayed. (The Device tab page is also displayed when you click the Device tab.)

1

2

3

4

Device Information	
Status	ready
Name	MFP-00013995
Location	
Copier Model	TOSHIBA e-STUDIO182
Contact Information	
Phone Number	
Message	
Alerts	•

Options	
Fax Kit	Installed
Network Printer Kit	Installed
Scanner Upgrade Kit	Not Installed
Automatic Duplexing Unit	Installed

Paper				
Drawer	Size	Type	Capacity	Status
Drawer 1	LT	Plain	250	Empty
Drawer 2	LT	Plain	250	Empty
Drawer 3	LT	Plain	500	Empty
Drawer 4	LT	Plain	500	Empty

On this page, the following device information is included:

### 1) REFRESH icon

Refreshes the information on the page.

### 2) Device Information

The Device Information list shows the following information:

- **Status** — Displays the device status.
- **Name** — Displays the name of this equipment.
- **Location** — Displays the equipment's location.
- **Copier Model**— Displays the model name of this equipment.
- **Contact Information** — Displays the contact name of the person responsible for managing this equipment.
- **Phone Number** — Displays the phone number of the person responsible for managing this equipment.
- **Message** — Displays the administrative message.
- **Alerts** — Displays the alert message. Errors are shown in red and warnings are shown in yellow.

### 3) Paper

The Paper list shows the drawer status.

- **Drawer** — Lists the installed drawers.
- **Size** — Displays the paper size set in each drawer.
- **Type** — Displays the paper type set in each drawer.
- **Capacity** — Displays the maximum paper capacity that can be set in each drawer.
- **Status** — Displays the paper consumption status in each drawer.

#### Note

Set the paper size in the drawer on the control panel of the equipment. It cannot be set on TopAccess. See the *Operator's Manual for Copying Functions* for details.

#### 4) Options

The Options list shows the status of options.

- **Fax Kit**— Displays the installation status of the Fax Kit.
- **Network Printer Kit**— Displays the installation status of the Network Printer Kit.
- **Scanner Upgrade Kit**— Displays the installation status of the Scanner Upgrade Kit.
- **Automatic Duplexing Unit**— Displays the installation status of the Automatic Duplexing Unit.

#### Error display:

If an error occurs, a device status indicator and an error message will be displayed on the Device tab page.

The screenshot shows the TopAccess web interface. At the top, there are navigation tabs: Device, Registration, Counter, and Administration. The 'Device' tab is selected. Below the tabs, there is a 'Device' section with a printer icon and a status indicator (1). To the right of the printer icon is a 'Device Information' table. Below the printer icon is an 'Options' table. To the right of the 'Options' table is a 'Paper' table. At the bottom of the page, there is a footer with 'Top | Help | ©2003-2005 TOSHIBA TEC CORPORATION. All Rights Reserved.'

Device Information	
Status	Alerts
Name	MFP-00013995
Location	
Copier Model	TOSHIBA e-STUDIO182
Contact Information	
Phone Number	
Message	
Alerts	• Paper Empty in Drawer 2 - Please Add Paper.

Options	
Fax Kit	Installed
Network Printer Kit	Installed
Scanner Upgrade Kit	Not Installed
Automatic Duplexing Unit	Installed

Paper				
Drawer	Size	Type	Capacity	Status
Drawer 1	LT	Plain	250	Empty
Drawer 2	LT	Plain	250	Empty
Drawer 3	LT	Plain	500	Empty
Drawer 4	LT	Plain	500	Empty

#### 1) Device status indicators

The device status indicators (icons) are displayed here. When more than one error is occurring at the same time, an indicator for the first error is displayed. For the details, see the following page:

P.140 "Device status indicator list"

#### 2) Alerts

The error messages are displayed here. For the details, see the following page:

P.141 "Error message list"



# 8

## TopAccess REGISTRATION TAB PAGE

This chapter describes how to manage the address book and Mailboxes on the TopAccess Registration tab page.

<b>Managing Address Book</b> .....	<b>60</b>
Managing contacts in the address book.....	60
Managing groups in the address book.....	64
<b>Managing Mailboxes</b> .....	<b>67</b>
Setting up an Open Mailbox.....	68
Deleting an Open Mailbox.....	74

## Managing Address Book

This equipment comes with the address book feature that enables users to manage who receives fax transmission.

In the Address Book menu page at the Registration tab in TopAccess, you can add, edit, and delete recipient information. You can also create groups that multiple contacts can be assigned.

📖 P.60 “Managing contacts in the address book”

📖 P.64 “Managing groups in the address book”

### Tip

Address Book can be also managed using the Control Panel. See the *Operator’s Manual for Facsimile Functions*.

## Managing contacts in the address book


You can add or edit a contact by entering recipient information. You can also delete the contact from the Address Book.

📖 P.60 “Adding or editing a contact”

📖 P.63 “Deleting a contact”

### Adding or editing a contact

- 1 **Click the Registration tab and the Address Book menu.**  
The Address Book menu page is displayed.
- 2 **Click [Add Address] to add new contact, or click the contact link that you want to edit in the contacts list.**

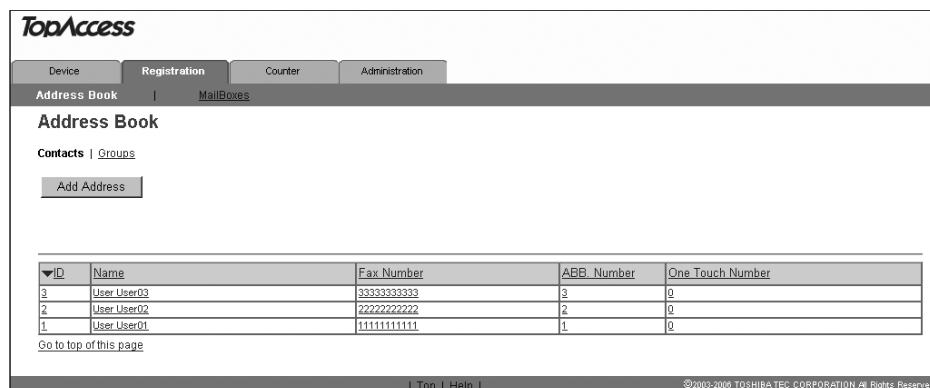

The Contact Properties page is displayed.

### Note

When a telephone number with a PIN code (charge code) is registered on an abbreviated number or a one touch dial number from this equipment, the PIN code is displayed in "\$". On the TopAccess screens the PIN code is displayed as it is.

### 3 Enter following items to specify the recipient information.

**TopAccess**

Device | **Registration** | Counter | Administration

Address Book | MailBoxes

**Contact Property** [Address Book ▶](#)

Save | Cancel | Reset | Delete

Fax Setting

\*Required  
\*\*Either

*Name	User User01
*Fax Number	11111111111
2nd Fax Number	
**ABB Number	1
**One Touch Number	

| Top | Help | ©2003-2005 TOSHIBA TEC CORPORATION All Rights Reserved

**Name** — Enter the name of the recipient. You can enter up to 20 letters.

**Fax Number** — Enter the fax number of the recipient. You can enter up to 128 letters. (“Space” and parentheses “ ( ” or “ ) ” cannot be used.)

**2nd Fax Number** — Enter the 2nd fax number of the recipient. You can enter up to 128 letters. (“Space” and parentheses “ ( ” or “ ) ” cannot be used.)

“2nd Fax Number” is an alternative Fax number used when communication cannot be made by redialing the Fax number entered in “Fax Number”.

**ABB Number** — Key in the abbreviated number of the recipient. (Up to 300 abbreviation numbers. You can specify a different number between 1 to 999.)

**One Touch Number** — Key in the one-touch number of the recipient. (Up to 75 different numbers.)

#### Notes

- To register contact information, you must enter both “Name” and “Fax Number”. Also you must key in either of “ABB. Number” or “One Touch Number”.
- Usually, enter the Fax number in “Fax Number” and “2nd Fax Number” without a hyphen ( - ). If a hyphen is entered, a pause is set making a dial gap of approx. 3 sec.
- For “ABB Number” and “One Touch Number”, if “One Touch Number” is registered first, “ABB Number” cannot be added afterward.
- For Fax transmission of originals, the Fax Kit (optional) is necessary. Without this kit, Fax transmission cannot be made even if Fax numbers are set.

#### Tips

- You can clear the entered values in each field by clicking [Reset].
- You can cancel adding or editing a contact by clicking [Cancel].

### 4 Click [Fax Setting].

The Fax Settings page is displayed.

## 5 Enter following items according to the capabilities of recipient facsimile, and click [Save].

**SUB** — Enter the mailbox number if you want to send originals to the mailbox in the recipient facsimile. You can enter up to 20 letters including numbers and #, \*.

**SEP** — Enter the mailbox number if you want to retrieve a document from the mailbox in the recipient facsimile. You can enter up to 20 letters including numbers and #, \*.

**PWD** — Enter the password to retrieve a document from the mailbox in the recipient facsimile. You can enter up to 20 letters including numbers and #, \*.

**Delayed Transmit** — You can specify the time (00:00 to 23:59) to transmit documents.

**Quality Transmit** — Select if you want to send documents in the Quality TX mode. This feature sends documents at a slower speed than a normal so that the transmission will be less affected by line condition. Select the value from 4800/9600/14400bps. The smaller the value is, the slower the speed becomes.

**Line Monitor** — Selects whether to monitor a tone of the line with the speaker.

**Transmission Report** — Selects whether to print the transmission report after completion of the fax transmission.

### Tip

If you want to clear the fax settings of the contact, click [Reset].



## 6 In the Contact Properties page, click [Save] to add new contact.

**TopAccess**

Device | **Registration** | Counter | Administration

Address Book | MailBoxes

**Contact Property** [Address Book ▶](#)

Save Cancel Reset Delete

Fax Setting

\*Required  
\*\*Either

*Name	User User01
*Fax Number	11111111111
2nd Fax Number	
**ABB. Number	1
**One Touch Number	

| Top | Help | ©2003-2005 TOSHIBA TEC CORPORATION All Rights Reserved

### Tip

A message notifying you that an abbreviated number or a one touch number you keyed in is already registered may be displayed. In this case, click [Return] and key in the correct number.

## Deleting a contact

- 1 Click the **Registration** tab and the **Address Book** menu.  
The Address Book menu page is displayed.
- 2 Click the link that you want to delete in the contacts list.

**TopAccess**

Device | **Registration** | Counter | Administration

Address Book | MailBoxes

**Address Book**

Contacts | Groups

Add Address

ID	Name	Fax Number	ABB. Number	One Touch Number
3	User User03	3333333333	3	0
2	User User02	2222222222	2	0
1	User User01	11111111111	1	0

Go to top of this page

| Top | Help | ©2003-2006 TOSHIBA TEC CORPORATION All Rights Reserved

The Contact Properties page is displayed.

### 3 Click [Delete].

The screenshot shows the TopAccess web interface. At the top, there are tabs for 'Device', 'Registration', 'Counter', and 'Administration'. Below these is a navigation bar with 'Address Book' and 'MailBoxes'. The main content area is titled 'Contact Property' and includes a sub-link 'Address Book >'. There are buttons for 'Save', 'Cancel', 'Reset', 'Delete', and 'Fax Setting'. Below the buttons, there are instructions: '\*Required' and '\*\*Either'. A table of form fields is shown below:

*Name	User User03
*Fax Number	3333333333
2nd Fax Number	
**ABB Number	3
**One Touch Number	

At the bottom of the interface, there are links for 'Top' and 'Help', and a copyright notice: '©2003-2005 TOSHIBA TEC CORPORATION All Rights Reserved'.

The contact is deleted from the Address Book.

## Managing groups in the address book

You can create groups that contain the multiple recipients. This enables you to specify the groups for the destinations instead of specifying each recipient separately when operating fax transmission. You can also delete groups.

P.64 “Adding or editing a group”

P.66 “Deleting a group”

### Adding or editing a group


#### 1 Click the Registration tab and the Address Book menu.

The Address Book menu page is displayed.

#### 2 Click the Group submenu.


The Group submenu page is displayed.

**3 Click [New] to add new group, or click the group link that you want to edit in the groups list.**

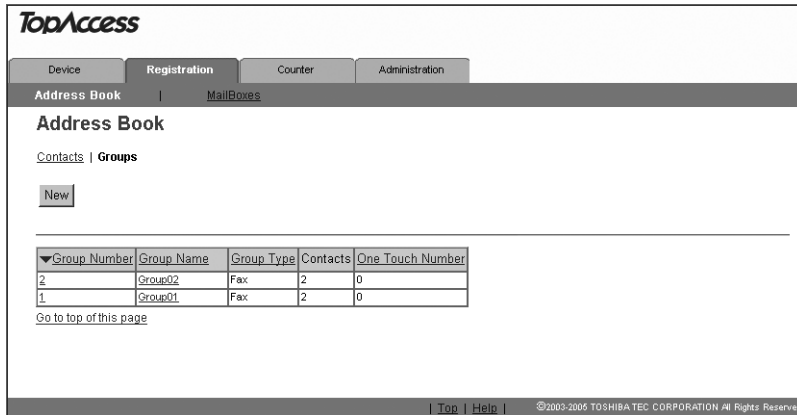

The Group Properties page is displayed.

**4 Enter following items to specify the group properties.**

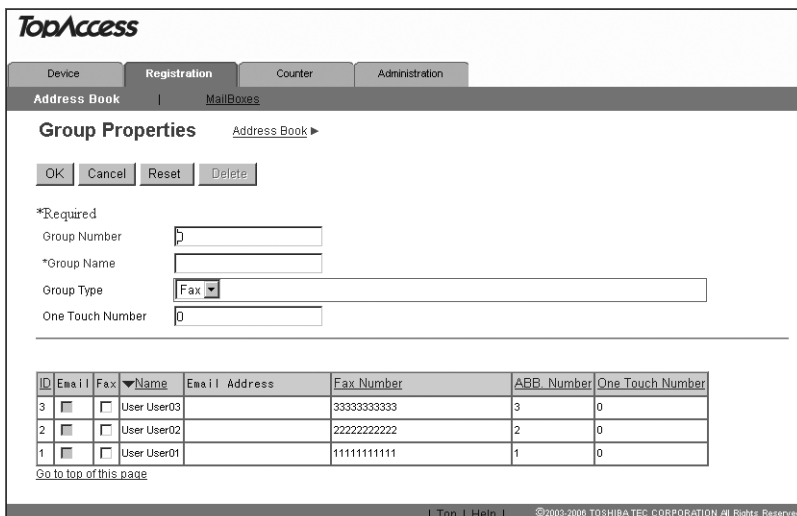

**Group Number** — Enter the group number.

**Group Name** — Enter the group name.

**Group Type** — Select “Fax”. (You can select only “Fax”.)

**One Touch Number** — Key in the one-touch number of the group. (Up to 75 different numbers.)

**Tips**

- You can clear the entered values in each field by clicking [Reset].
- You can cancel adding or editing a group by clicking [Cancel].

**5 Check the Fax boxes of users to add the Fax recipients.**

- 6 Click [OK].**  
The group is created.

**Tip**

A message notifying you that a one touch number you keyed in is already registered may be displayed. In this case, click [Return] and key in the correct number.

## Deleting a group

- 1 Click the Registration tab and the Address Book menu.**  
The Address Book menu page is displayed.
- 2 Click the Group submenu.**  
The Group submenu page is displayed.
- 3 Click the group link that you want to delete in the groups list.**

The screenshot shows the TopAccess web interface. At the top, there are navigation tabs: Device, Registration, Counter, and Administration. Below these is a sub-menu: Address Book | MailBoxes. The main heading is "Address Book". Underneath, there are links for "Contacts" and "Groups", and a "New" button. A table lists the groups:

ID	Group Name	Group Type	Contacts	One Touch Number
1	Group1	Fax	2	1

Below the table is a link "Go to top of this page". At the bottom right, there is a footer: "©2003-2006 TOSHIBA TEC CORPORATION All Rights Reserved".

The Group Properties page is displayed.

- 4 Click [Delete].**

The screenshot shows the "Group Properties" page in the TopAccess web interface. At the top, there are navigation tabs: Device, Registration, Counter, and Administration. Below these is a sub-menu: Address Book | MailBoxes. The main heading is "Group Properties" with a link "Address Book ▶". There are buttons for "OK", "Cancel", "Reset", and "Delete". Below these are fields for:
 

- \*Required Group Number: 1
- \*Group Name: Group2
- Group Type: Fax (dropdown menu)
- One Touch Number: 1

 At the bottom, there is a table listing users:

ID	Email	Fax	Name	Email Address	Fax Number	ABB Number	One Touch Number
3			User User03		3333333333	3	0
2			User User02		2222222222	2	0
1			User User01		1111111111	1	0

Below the table is a link "Go to top of this page". At the bottom right, there is a footer: "© All Rights Reserved | A TEC CORPORATION All Rights Reserved".

Selected group is deleted.

# Managing Mailboxes

---

This equipment supports the ITU-T compatible mailboxes that allow storage and retrieval of documents via mailboxes that are already set up in a mailbox hub. Using TopAccess, you can set up, edit, and delete mailboxes on this equipment.

The following three types of Mailboxes are available:

## **Confidential Mailbox**

The Confidential Box allows a one-time document retrieval from the mailbox. Once a document is retrieved, it is cleared. If a new document is sent to the same box number where another document is stored, it is added to the existing box. You can also set up a password requirement for accessing the Confidential Box for document retrieval, to prevent unauthorized retrieval of documents.

## **Bulletin Board mailbox**

The Bulletin Board Box allows multiple document retrievals from the same mailbox. Once a document is retrieved, it is not cleared. If a new document is sent to the same Box, it replaces the existing one. You can set up a password requirement for accessing the Bulletin Board Box for document reservation.

## **Forward Mailbox**

The Forward mailbox allows you to transmit a received Fax to various destinations, using the following agent:

### **Internet/Fax (Relay) Agent**

When a document has been sent to a mailbox, this equipment can call up the remote Fax via the public switched telephone network according to the destinations registered in the mailbox. After the relay transmission, the transmission result list will be sent to the specified remote Fax. It is also possible to set up a password requirement.

### **Notes**

- Mailboxes can be managed only when the optional Fax Kit (optional) is installed.
- Sending and storage of documents to a mailbox hub and retrieval of documents from a mailbox hub is possible only on an ITU-T compliant facsimile. Only ITU-T compliant facsimiles can be used as Mailbox hubs. This equipment is provided with mailbox hub functions.

### **Tip**

Mailboxes can be managed using the control panel of this equipment. See the ***Operator's Manual for Facsimile Functions***.

## Setting up an Open Mailbox

To carry out ITU-T communications, you must first set up an Open Mailbox in the mailbox hub. You can set up a maximum of 100 mailboxes.

### 1 Click the Registration tab and the MailBoxes menu.

The Mailboxes menu page is displayed.

### 2 Click [New] to set up new mailbox, or click the box number link that you want to edit in the mailboxes list.

Box Number	Agent
002	Confidential
001	Confidential

- If you click [New], skip to step 5.
- If you click the box number link that is not protected by a password, skip to step 4.
- If you click the box number link that is protected by a password, go to the next step.

### 3 Enter the password for the mailbox and click [OK].

### 4 Click [Edit].

Box Number	002
Agent	Confidential

## 5 Select agents and click [Select Agent].

TopAccess

Device Registration Counter Administration

Address Book MailBoxes

MailBoxes Properties MailBoxes ▾

Save Cancel

Select Agent

Confidential  Internet/Fax(Relay)

Bulletin Board

Forward

Top | Help | ©2003-2005 TOSHIBA TEC CORPORATION All Rights Reserved

**Confidential** — Select this to create a Confidential mailbox.

**Bulletin Board** — Select this to create a Bulletin Board mailbox.

**Forward** — Select this to create a relay station mailbox.

**Internet/Fax(Relay)** — Select this to create a Forward mailbox of Fax (Relay) agent.

### Note

The “Internet/Fax (Relay)” will be selected automatically when “Forward” is selected.

## 6 Click the button of each item to set the mailbox properties.

**[MailBox Setting]** — Click this to specify the mailbox settings.

📖 P.70 “MailBox setting”

MailBox Setting

Box Number	001
Document Print	Always

**[Destination Setting]** — Click this to specify the destinations to be sent. This can be set only when creating the Fax(Relay) agent.

📖 P.71 “Destination setting (Mailbox)”

Destination Setting

Destination	single
-------------	--------

**[Relay End Terminal Report]** — Click this to specify where the transmission result list will be sent. This can be set only when creating the Fax(Relay) agent.

📖 P.73 “Relay end terminal report”

Relay End Terminal Report

Relay End Terminal Report	4444444444
---------------------------	------------

## 7 After configuring the desired mailbox properties, click [Save].

The mailbox properties are registered.

## MailBox setting

In the MailBox Setting page, specify the box number and password.

**MailBox Setting**

Save Cancel

\*Required

1 \*Box Number 0001

2 Password \*\*\*\*

### 1) Box Number

Enter the box number of the mailbox. You can enter up to 20 letters (numbers only).

### 2) Password

Enter the box password if you want to protect the mailbox by the password. You can enter up to 20 letters including numbers, sharp marks (#), and asterisks (\*).

## 1 Click [Mailbox Setting] to open the Mailbox Setting page.

## 2 Enter the box number. (Enter the box password as required.)

**MailBox Setting**

Save Cancel

\*Required

\*Box Number 0001

Password \*\*\*\*

## 3 Click [Save].

Mailbox setting is made.




## Destination setting (Mailbox)

In the Recipient List page, you can specify the destinations of the IFax (Relay). You can specify the recipients by selecting recipients from the address book or by selecting recipient groups from the address book.

### Selecting the recipients from the address book


By this method, you can select recipients from the address book in this equipment.

- 1 Click [Destination Setting] to open the Recipient List page.
- 2 Click [Address Book].

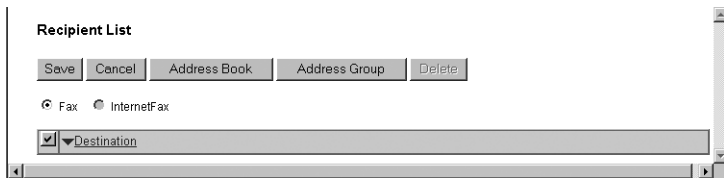

The Address Book page is displayed.

- 3 Check the Fax recipients, and check the Fax boxes of users you want to add as the Fax recipients.

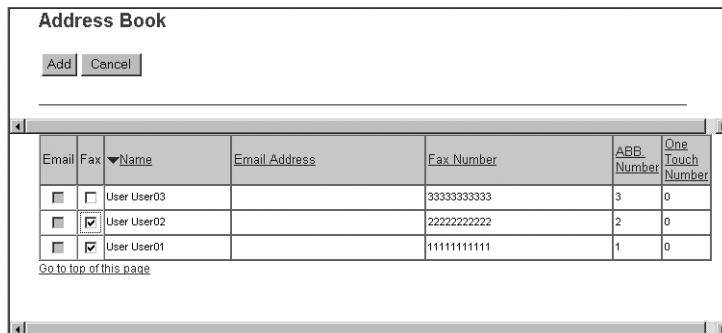

Email	Fax	Name	Email Address	Fax Number	ABB Number	One Touch Number
<input type="checkbox"/>	<input type="checkbox"/>	User User03		3333333333	3	0
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	User User02		2222222222	2	0
<input type="checkbox"/>	<input checked="" type="checkbox"/>	User User01		1111111111	1	0


- 4 Click [ADD].  
Selected recipients are added in the Recipient List page.

#### Tip

You can remove the contacts that you added in the recipient list before submitting the destination settings.

 P.73 "Removing the contacts from the recipient list"

- 5 Click [Save].

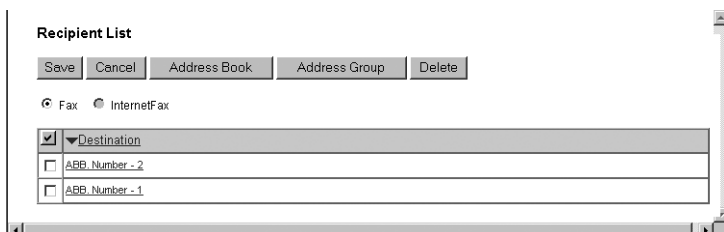

The contacts are added as the destinations.

## Selecting the groups from the address book

By this method, you can select groups from the address book.

- 1** Click [Destination Setting] to open the Recipient List page.
- 2** Click [Address Group].

The Address Group page is displayed.

- 3** Check the Group boxes that contains the desired recipients.

Group	Group Name	Group Type
<input checked="" type="checkbox"/>	Group2	Fax
<input type="checkbox"/>	Group1	Fax

- 4** Click [ADD].

All recipients in the selected groups are added in the Recipient List page.

### Tip

You can remove the contacts that you added in the recipient list before submitting the destination settings.

P.73 "Removing the contacts from the recipient list"

- 5** Click [Save].

The contacts are added as the destinations.

---

## Removing the contacts from the recipient list

---

- 1 Check the check boxes of the contacts that you want to remove from the recipient list, and click [Delete].

Recipient List

Save Cancel Address Book Address Group Delete

Fax  InternetFax

Destination
<input type="checkbox"/> Group Number - 2
<input checked="" type="checkbox"/> Group Number - 1

The selected contacts are removed from the recipient list.

## Relay end terminal report

In the Relay End Terminal Report page, you can specify a recipient that the transmission result list will be sent.

- 1 Click [Relay End Terminal Report].  
The Relay End Terminal Report page is displayed.
- 2 Enter the fax number, or select Fax option button of a user that you want to send the transmission result list.

Relay End Terminal Report

Add Cancel Reset

4444444444

Fax	ID	Name	Fax Number	ABB Number	One Touch Number
<input type="radio"/>	3	User User03	3333333333	3	0
<input type="radio"/>	2	User User02	2222222222	2	0
<input type="radio"/>	1	User User01	1111111111	1	0

[Go to top of this page](#)

### Tip

You can clear the selected option button by clicking [Reset].

### Note

You cannot specify more than 1 recipient for the destination of the Relay End Terminal Report.

- 3 Click [Add].  
The selected recipient is set for the transmission result list destination.


## Deleting an Open Mailbox

You can delete an existing Open Mailbox from TopAccess.

### Note


If you want to delete an Open Mailbox, the document must first be retrieved, printed, or canceled from the Open Mailbox.

- 1 Click the Registration tab and the MailBoxes menu.**  
The MailBoxes menu page is displayed.
- 2 Click the box number link that you want to delete in the mailboxes list.**

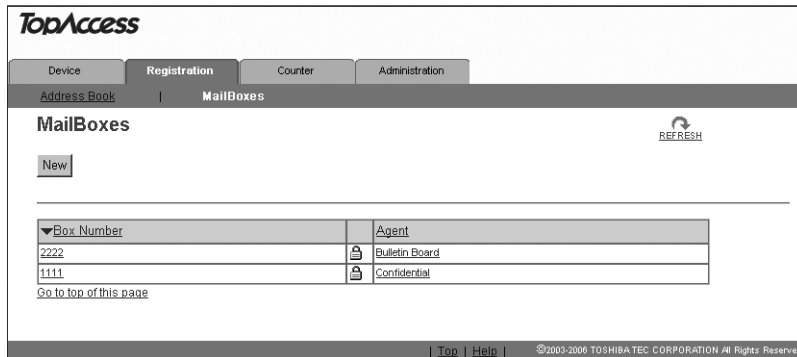


- If you click the box number link that is not protected by a password, skip to step 4.
- If you click the box number link that is protected by a password, go to the next step.

- 3 Enter the password for the mailbox and click [OK].**

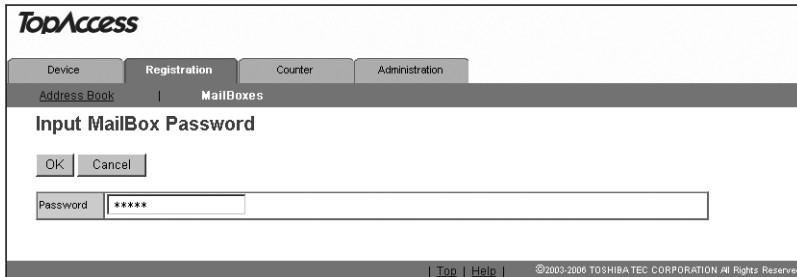

The MailBoxes Properties page is displayed.

- 4 Click [Delete].**

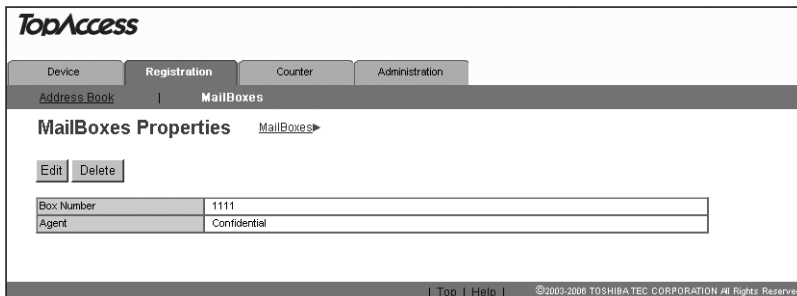

The confirmation dialog box appears.

---

## 5 Click [OK].



Selected mailbox is deleted.



## TopAccess COUNTER TAB PAGE


This chapter describes how to display total counters on the TopAccess Counter tab page.

<b>Viewing Counters</b> .....	<b>78</b>
Displaying the total counter .....	78
Displaying the department counter .....	79

## Viewing Counters

This equipment maintains a set of counters that keep track of the number of pages printed, copied and scanned. These statistics can be displayed in totals or broken down by department. This topic describes how to display the statistics and manage the department counters.

 P.78 “Displaying the total counter”

 P.79 “Displaying the department counter”


### Displaying the total counter

In the Total Counter menu page, you can display the total counter information for each copy/print counter of small paper and copy/print counter of large paper.

#### 1 Click the Counters tab and the Total Count menu.

The Total Count menu page is displayed.

#### 2 You can check the total counter in this page.

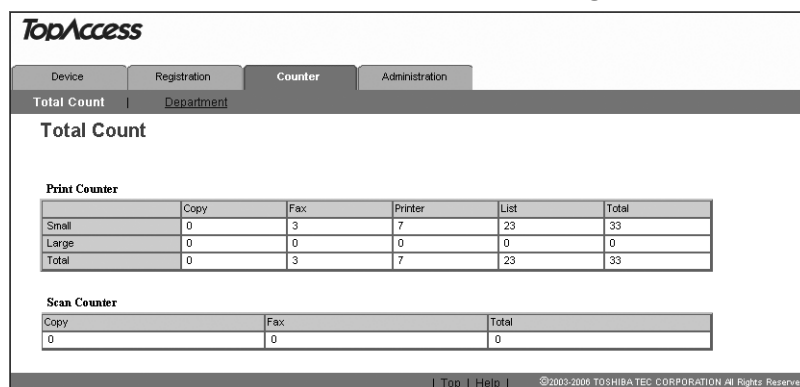

Print Counter					
	Copy	Fax	Printer	List	Total
Small	0	3	7	23	33
Large	0	0	0	0	0
Total	0	3	7	23	33

Scan Counter		
Copy	Fax	Total
0	0	0

The shown above is the details of the values of the print counter and the scan counter. Note that these values are unresettable.

#### Print Counter

- Copy: Displays the number of pages printed with copying operations.  
 Fax: Displays the number of pages printed with the reception of fax data.  
 Printer: Displays the number of pages printed with the receptions of the InternetFax or printing operations.  
 List: Displays the number of list pages printed.  
 Total: Displays the total number of pages printed.

#### Scan Counter

- Copy: Displays the number of pages scanned with copying operations.  
 Fax: Displays the number of pages scanned with the transmissions of fax data.  
 Total: Displays the total number of pages scanned.



## Displaying the department counter

In the Department menu page, you can display the counter information of a specific department. If you want to display the department counter, you must enter the department code.

### Note


Displaying the department counter is available only when a department code is set by using this equipment.

### Tip

The administrator can view all departments including respective counter information.

 P.138 "Managing Department Codes (For Administrators)"

- 1 Click the Counters tab and the Department menu.**  
The Department menu page is displayed.
- 2 Enter a department code that you want to display the counter in the "Department Code" field and click [Enter].**

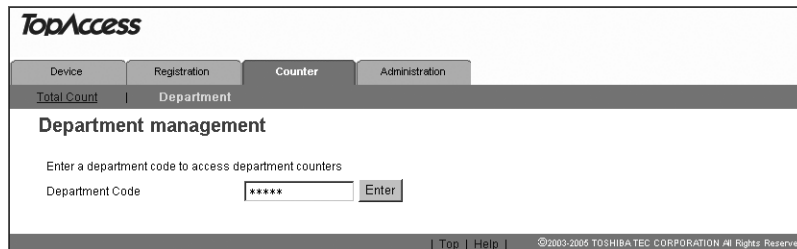

TopAccess

Device Registration **Counter** Administration

Total Count Department


**Department management**

Enter a department code to access department counters

Department Code  Enter

| Top | Help | ©2003-2005 TOSHIBA TEC CORPORATION All Rights Reserved.

The department counter for specified department is displayed.

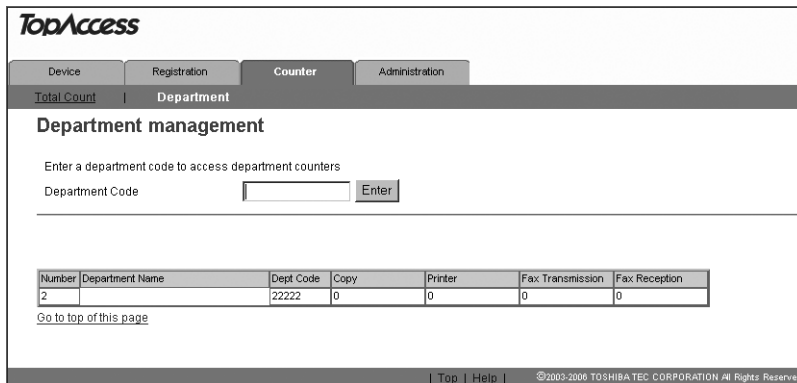

TopAccess

Device Registration **Counter** Administration

Total Count Department

**Department management**

Enter a department code to access department counters

Department Code  Enter

Number	Department Name	Dept Code	Copy	Printer	Fax Transmission	Fax Reception
2		22222	0	0	0	0

[Go to top of this page](#)

| Top | Help | ©2003-2006 TOSHIBA TEC CORPORATION All Rights Reserved.



# 10

## TopAccess ADMINISTRATION TAB PAGE - SETUP MENU (Printing Function)

This chapter describes the various items set by the TopAccess administrator.

<b>Setting up Device Settings</b> .....	<b>83</b>
Setting up the device information.....	84
Setting up the energy save .....	85
Setting up the time and date .....	85
Setting up the Web general setting .....	85
<b>Setting up Network Settings (Printing Function)</b> .....	<b>86</b>
Setting up the TCP/IP .....	88
Setting up the IPX/SPX .....	89
Setting up the AppleTalk .....	89
Setting up the Bonjour.....	90
Setting up the DNS session .....	91
Setting up the DDNS session.....	92
Setting up the NetWare session.....	93
Setting up the HTTP network service.....	94
Setting up the SNMP network service.....	95
<b>Setting up Copier Settings</b> .....	<b>97</b>
Setting up the copier settings.....	98
<b>Setting up Fax Settings</b> .....	<b>99</b>
Setting up the Fax settings.....	101
<b>Setting up Printer Settings</b> .....	<b>105</b>
Setting up the general setting .....	106
Setting up the default Raw job setting.....	107
Setting up the Raw job setting .....	108
<b>Setting up Print Service Settings (Printing Function)</b> .....	<b>111</b>
Setting up the Raw TCP print.....	112
Setting up the LPD print .....	113
Setting up the IPP print .....	113

Setting up the NetWare print.....	114
<b>Displaying Version Information .....</b>	<b>115</b>

# Setting up Device Settings

In the General submenu page in the Setup menu, an administrator can configure the general settings such as Device Information, Energy Save, Date and Time, and Web General Setting.

## Note


Some settings may not apply to the LCD of this equipment as soon as you save the settings. The settings will be updated by pressing the [FUNCTION CLEAR] button on the Control Panel or after an Auto Clear time period.

## Setting the device settings

### 1 Access TopAccess in the administrator mode.


 P.50 “Accessing TopAccess”

### 2 Click the Setup menu and General submenu.

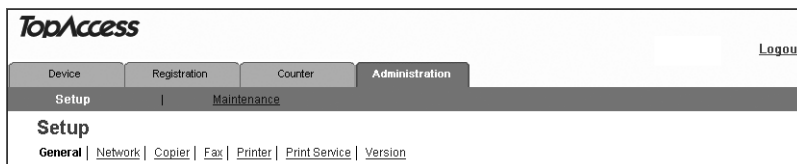



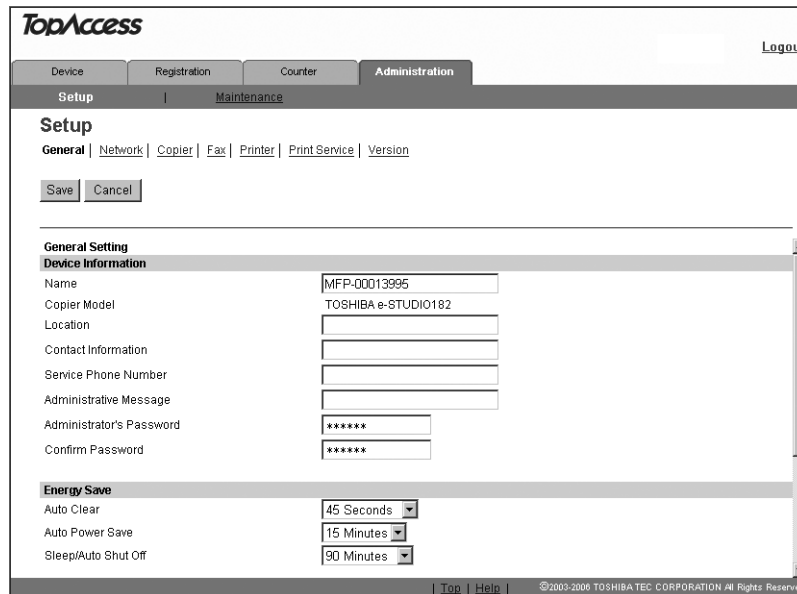

The General submenu page is displayed.

### 3 In the General submenu page, set the device settings as required.

The screenshot shows the TopAccess administrator interface with the General Setting page. The page has a header with the TopAccess logo and a Logout button. Below the header are tabs for Device, Registration, Counter, and Administration. A navigation bar shows Setup and Maintenance. The Setup menu is expanded, and the General submenu is selected. The General Setting page contains two main sections: Device Information and Energy Save. The Device Information section includes fields for Name (MFP-00013995), Copier Model (TOSHIBA e-STUDIO182), Location, Contact Information, Service Phone Number, Administrative Message, Administrator's Password (\*\*\*\*\*), and Confirm Password (\*\*\*\*\*). The Energy Save section includes dropdown menus for Auto Clear (45 Seconds), Auto Power Save (15 Minutes), and Sleep/Auto Shut Off (90 Minutes). At the bottom of the page, there are links for Top and Help, and a copyright notice: ©2003-2006 TOSHIBA TEC CORPORATION. All Rights Reserved.

In the General submenu page, you can set the following:

-  P.84 “Setting up the device information”
-  P.85 “Setting up the energy save”
-  P.85 “Setting up the time and date”
-  P.85 “Setting up the Web general setting”

## 4 Click [Save].

The confirmation dialog box appears.

### Note

If you want to restore the current settings without saving the changes, click [Cancel]. Clicking [Cancel] cannot restore the defaults. This can only clear the changes and restore the current settings before saving the changes.

## 5 Click [OK] to apply the changes.



### Note

When using the Internet Explorer, the settings that are displayed in each field may not be changed even if you change the settings and click [Save]. However, the settings have been changed in the equipment. In that case, click the General submenu then the page displays the current settings in each field.

## Setting up the device information

You can set the device information displayed in the Device tab page.

General Setting	
Device Information	
1	Name <input type="text" value="MFP-00013995"/>
2	Copier Model <input type="text" value="TOSHIBA e-STUDIO182"/>
3	Location <input type="text"/>
4	Contact Information <input type="text"/>
5	Service Phone Number <input type="text"/>
6	Administrative Message <input type="text"/>
7	Administrator's Password <input type="password" value="*****"/>
8	Confirm Password <input type="password" value="*****"/>

### 1) Name

This displays the equipment's device name.

### 2) Copier Model

This displays the equipment's model name.

### 3) Location

Enter the name of the department or site. This is displayed in the Device tab page that appears first when accessing the TopAccess web site for users.

### 4) Contact Information

Enter the name or title of the contact person for this equipment. This is displayed in the Device tab page that appears first when accessing the TopAccess web site for users.

### 5) Service Phone Number

Enter the phone number for service on this equipment. This is displayed in the Device tab page that appears first when accessing the TopAccess web site for users.

### 6) Administrative Message

Enter the message about this equipment for all users to read. This is displayed in the Device tab page that appears first when accessing the TopAccess web site for users.

### 7) Administrator's Password

If you want to change the administrator's password used to log in functions from the TopAccess, enter a new password. You can enter alphanumeric letters of 6 or more and 10 or less for the administrator's password. You cannot leave this field blank.

### 8) Confirm Password

Enter a new password that you entered in the "Administrator's password" field.

## Setting up the energy save

You can set the time to enter the Auto Clear, Auto Power Save and Auto Power Off mode.

Energy Save	
1 — Auto Clear	45 Seconds
2 — Auto Power Save	15 Minutes
3 — Sleep/Auto Shut Off	90 Minutes

#### 1) Auto Clear

Select how long this equipment can remain inactive before the LCD of this equipment automatically returns to the default display and settings.

#### 2) Auto Power Save

Select how long this equipment can remain inactive before entering the power save mode.

#### 3) Sleep/Auto Shut Off

Select how long this equipment can remain inactive before entering the sleep mode or auto shut off mode.

## Setting up the time and date

You can set the date, time, time zone, and date format.

Date & Time					
1 —	2006	March	22	09	:23
2 —	(GMT) Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London				

#### 1) Date/Time

To adjust the date, select year in the first field, select month in the second field, and enter date in the third field.

To adjust the time, enter hour in the fourth field, and enter time in the fifth field.

#### 2) Time Zone

Select the time zone where this equipment is located.

## Setting up the Web general setting

You can set the session timer to automatically log out from the administrator mode.

WEB General Setting	
1 — Session Timer	10 Minutes

#### 1) Session Timer


Enter how long you want this equipment to preserve the session data of TopAccess. You can enter any integer between 5 to 999.

## Setting up Network Settings (Printing Function)


In the Network submenu page in the Setup menu, an administrator can configure the network settings such as TCP/IP, IPX/SPX, AppleTalk, Bonjour, DNS Session, DDNS Session, NetWare Session, HTTP Network Service, and SNMP Network Service.

### Setting the network settings

#### 1 Access TopAccess in the administrator mode.


 P.50 "Accessing TopAccess"

#### 2 Click the Setup menu and Network submenu.

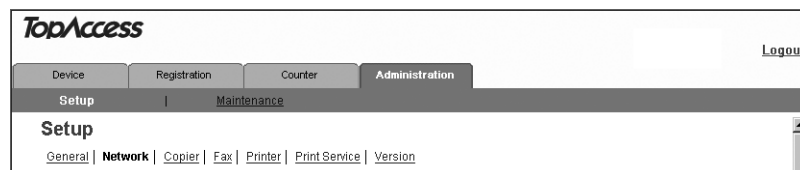





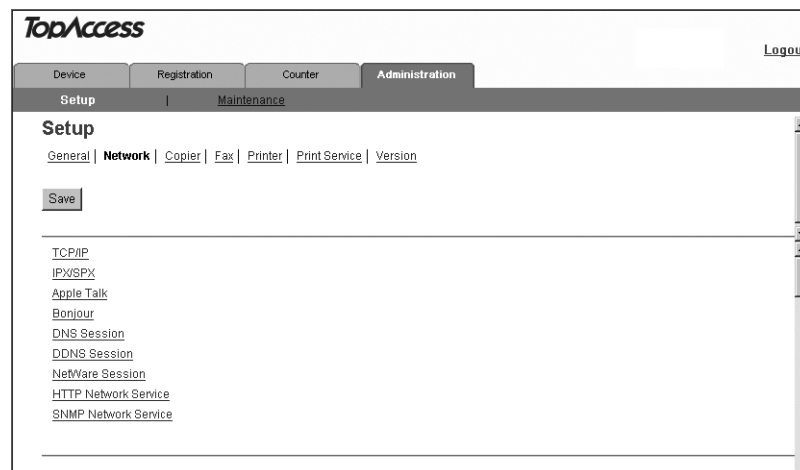




The Network submenu page is displayed.

#### 3 In the Network submenu page, click link or scroll the page to find the setting table, and click the button of the setting to set the network settings as required.



In the Network submenu page, you can set the following:

-  P.88 "Setting up the TCP/IP"
-  P.89 "Setting up the IPX/SPX"
-  P.89 "Setting up the AppleTalk"
-  P.90 "Setting up the Bonjour"
-  P.91 "Setting up the DNS session"
-  P.92 "Setting up the DDNS session"
-  P.93 "Setting up the NetWare session"
-  P.94 "Setting up the HTTP network service"
-  P.95 "Setting up the SNMP network service"



---

#### 4 Click [OK].

The confirmation dialog box appears.

##### Note


If you want to restore the current settings without saving the changes, click [Cancel]. Clicking [Cancel] cannot restore the defaults. This can only clear the changes and restore the current settings before saving the changes.

#### 5 Click [OK] to save the settings and close the sub window.

#### 6 Click [Save].

The confirmation dialog box appears.

#### 7 Click [OK] to apply the changes.

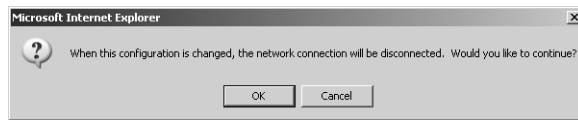

This equipment starts initializing the NIC (Network Interface Card) to apply the changes.

##### Note

When using the Internet Explorer, the settings that are displayed in each field may not be changed even if you change the settings and click [Save]. However, the settings have been changed in the equipment. In that case, click the General submenu then the page displays the current settings in each field.

## Setting up the TCP/IP

You can set the TCP/IP protocol to enable communication over TCP/IP. The TCP/IP must be configured to enable TopAccess, Raw TCP or LPR printing, and IPP printing.

**TCP/IP**

OK Cancel      Selecting 'Save' in the Main Window is required to Save the new settings.

1 — Address Mode      Static IP

2 — IP Address      10 151 137 78

3 — Subnet Mask      255 255 0 0

4 — Default Gateway      10 151 130 1

5 — IP Filtering

Filter	Start Address	End Address
Filter 1	0 0 0 0	0 0 0 0
Filter 2	0 0 0 0	0 0 0 0
Filter 3	0 0 0 0	0 0 0 0
Filter 4	0 0 0 0	0 0 0 0
Filter 5	0 0 0 0	0 0 0 0
Filter 6	0 0 0 0	0 0 0 0
Filter 7	0 0 0 0	0 0 0 0
Filter 8	0 0 0 0	0 0 0 0
Filter 9	0 0 0 0	0 0 0 0
Filter 10	0 0 0 0	0 0 0 0

### 1) Address Mode

Select how to set the IP address.

- **Static IP** — Select this to assign the static IP address manually. When this is selected, enter the static IP address in the IP Address field.
- **No AutoIP** — Select this to assign the IP address using the DHCP with Auto-IP addressing disabled. When this is selected, the IP address, subnet mask and default gateway can be automatically obtained from the DHCP server if the network supports the DHCP, but the IP address will not be assigned if the network does not support the DHCP.
- **Dynamic** — Select this to assign the IP address using the DHCP with Auto-IP addressing enabled. When this is selected, the IP address, subnet mask and default gateway can be automatically obtained from the DHCP server if the network supports the DHCP, and the IP address can be also assigned using Auto-IP addressing even if the network does not support the DHCP.

### 2) IP Address

Enter the static IP address that is assigned to this equipment when “Static IP” is selected in the “Address Mode” drop down box.

### 3) Subnet mask

Enter the subnet mask if required when “Static IP” is selected in the “Address Mode” drop down box.

### 4) Default Gateway

Enter the gateway address if required when “Static IP” is selected in the “Address Mode” drop down box.

### 5) IP Filtering

When you want to set the IP filtering, specify the range of IP addresses in the Start Address and End Address fields.

When you specify the range of IP addresses, only the client that the specified IP address range is assigned can access the equipment.


---

## Setting up the IPX/SPX

You can set the IPX/SPX protocol to enable the communication over IPX/SPX.

### Note

The IPX/SPX must be configured to enable Novell printing with NetWare server 5.1/6.0/6.5 over IPX/SPX.

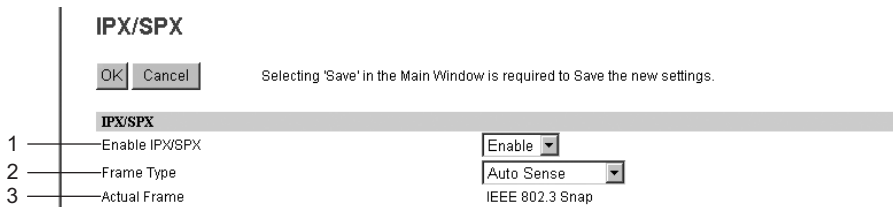

### 1) Enable IPX/SPX

Select whether the IPX/SPX protocol is enabled or disabled. Please enable this when configuring Novell printing over the IPX/SPX network.

### 2) Frame Type

Select the desired frame type for IPX/SPX.


- **Auto Sense** — Select this to use an appropriate frame type that the equipment found first.
- **IEEE 802.3/Ethernet II/IEEE 802.3 Snap/IEEE802.2** — Instead of “Auto Sense”, select the frame types to be used from these options.

### 3) Actual Frame

This displays the actual frame type of the equipment.

## Setting up the AppleTalk

You can set the protocol to enable communication over AppleTalk. The AppleTalk must be configured to enable AppleTalk printing from Macintosh computers.

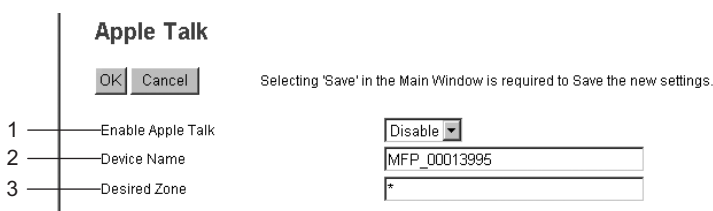

### 1) Enable Apple Talk

Select whether the AppleTalk protocol is enabled or disabled. Please enable this when configuring AppleTalk printing.

### 2) Device Name

Enter the device name of the equipment that will be displayed in the AppleTalk network.

### 3) Desired Zone

Enter the zone name where the equipment will connect — if required. If you leave an asterisk in this field, the equipment will connect to the default zone.

## Setting up the Bonjour

In Bonjour, you can enable or disable the Bonjour networking that is available for Mac OS X 10.3.x/10.4.x//10.5.x.

**Bonjour**

OK Cancel

Selecting 'Save' in the Main Window is required to Save the new settings.

1 — Enable Bonjour

2 — Link-Local Host Name

3 — Service Name

**1) Enable Bonjour**

Select whether the Bonjour is enabled or disabled.

**2) Link-Local Host Name**

Enter the DNS host name of this equipment.

**3) Service Name**

Enter the device name of this equipment that will be displayed in the Bonjour network.


---


## Setting up the DNS session

In DNS Session, you can specify the DNS server to enable the FQDN (Fully Qualified Domain Name) rather than the IP address on specifying each server address.

### Tip

When the DNS service is enabled and the DNS server supports the dynamic DNS service, please set the DDNS Session as well.

 P.92 "Setting up the DDNS session"

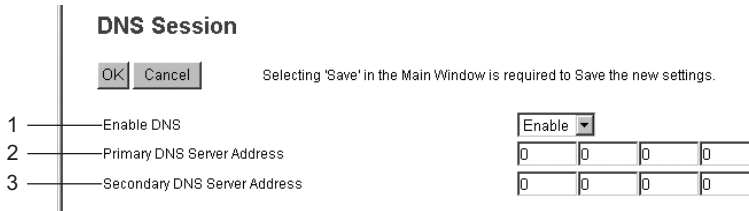

**DNS Session**

OK Cancel      Selecting 'Save' in the Main Window is required to Save the new settings.

1 — Enable DNS      Enable ▾

2 — Primary DNS Server Address      0 0 0 0

3 — Secondary DNS Server Address      0 0 0 0

### 1) Enable DNS

Select whether the DNS server is used or not.

### 2) Primary DNS Server Address

Specify the IP address of the primary DNS server when the DNS service is enabled.

### 3) Secondary DNS Server Address


Specify the IP address of the secondary DNS server when the DNS service is enabled, as you require.

## Setting up the DDNS session

In DDNS Session, you can enable the Dynamic DNS service if the DNS server supports the dynamic DNS.

### Notes

- When using DDNS and the IP address is assigned using DHCP, enter "006 DNS Servers" and "015 DNS Domain Name" in the DHCP Client to register the A record and PTR record of the equipment automatically using DDNS.

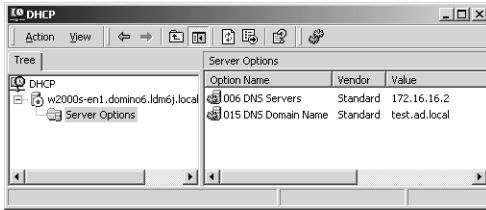


- When using DDNS, make sure the "Allow dynamic updates?" option is set to "Yes" (for Windows 2000 Server) or "Nonsecure and Secure" (for Windows Server 2003 / Windows Server 2008) for the Forward Lookup Zones and Reversed Lookup Zones. If "Secure" mode or "None" is selected in Windows Server 2003 / Windows Server 2008, be sure to add the host name of the equipment to "Forward Lookup Zones" and "Reversed Lookup Zones".


### Windows 2000 Server (Forward Lookup Zones)



### Windows Server 2003 (Forward Lookup Zones)

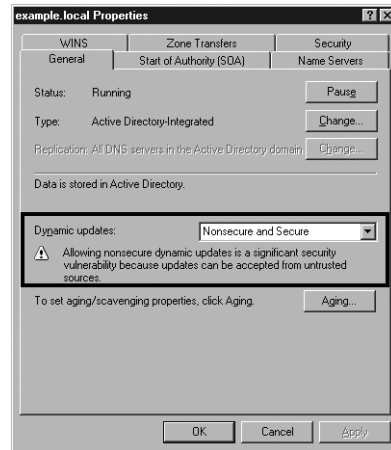

### DDNS Session

 

Selecting 'Save' in the Main Window is required to Save the new settings.

- 1 — Enable DDNS  Enable
- 2 — Host Name
- 3 — Domain Name

#### 1) Enable DDNS

Select whether the dynamic DNS service is enabled or disabled.

#### 2) Host Name

Enter the host name that will be added to the DNS server using DDNS.

---

### 3) Domain Name

Enter the domain name that will be added to the DNS server using DDNS.

## Setting up the NetWare session

In NetWare Session, you can set the NetWare Bindery or NDS service. This must be set when configuring a Novell printing environment.

**NetWare Session**

OK Cancel      Selecting 'Save' in the Main Window is required to Save the new settings.

1 — Enable Bindery      Enable

2 — Enable NDS      Enable

3 — Context

4 — Tree

5 — Search root

#### 1) Enable Bindery

Select whether the NetWare Bindery mode for Novell printing is enabled or disabled. When you configure a Novell printing environment with the NetWare server in bindery mode, you must enable this.

#### 2) Enable NDS

Select whether the NetWare NDS mode for Novell printing is enabled or disabled. When you configure a Novell printing environment with the NetWare server in NDS mode, you must enable this. When this is enabled, you should also specify the context and tree for the NDS.

#### 3) Context

Enter the NDS context that the NetWare print server for this equipment is located.

#### 4) Tree

Enter the NDS tree.

#### 5) Search root

Enter the NetWare server name that this equipment preferentially searches for the queues.

---

## Setting up the HTTP network service

In HTTP Network Service, you can enable or disable Web-based services such as TopAccess and IPP printing.

The screenshot shows a dialog box titled "HTTP Network Service". At the top left are "OK" and "Cancel" buttons. To the right of these buttons is the text: "Selecting 'Save' in the Main Window is required to Save the new settings." Below this text are three numbered items:

- 1 — Enable HTTP Server: A dropdown menu currently set to "Enable".
- 2 — Primary Port Number: A text input field containing "80".
- 3 — Secondary Port Number: A text input field containing "8080".

### 1) Enable HTTP Server

Select whether the Web-based TopAccess and IPP printing are enabled or disabled.

### 2) Primary Port Number

Enter the port number for the NIC HTTP server. Generally "80" is used for this port.

### 3) Secondary Port Number

Enter the port number for TopAccess. Generally "8080" is used for this port.



## Setting up the SNMP network service

In SNMP Network Service, you can enable or disable the SNMP to monitor the device status using a network monitoring utility. If an administrator wants to monitor the device status with a monitoring utility, programmed to fit the MIB, you must enable the SNMP and SNMP Traps.

**SNMP Network Service**

OK Cancel      Selecting 'Save' in the Main Window is required to Save the new settings.

1 — Enable SNMP      Enable

2 — Read Community      public

3 — Read Write Community      private

4 — Enable Authentication Trap      Enable

5 — Enable Alerts Trap      Enable

6 — IP Trap Address1      0 0 0 0

    IP Trap Address2      0 0 0 0

    IP Trap Address3      0 0 0 0

    IP Trap Address4      0 0 0 0

    IP Trap Address5      0 0 0 0

    IP Trap Address6      0 0 0 0

    IP Trap Address7      0 0 0 0

    IP Trap Address8      0 0 0 0

    IP Trap Address9      0 0 0 0

    IP Trap Address10      0 0 0 0

7 — IP Trap Community      public

8 — IPX Trap Address      00000000000000000000000000000000

### 1) Enable SNMP

Select whether the SNMP monitoring with MIB is enabled or disabled. This must be enabled to allow users to connect using the AddressBook Viewer.

### 2) Read Community

Enter the trap community name for the SNMP Traps.

#### Note

If you specify a community name other than “public” for the Read Community, the applications that use MIB (AddressBook Viewer) will be unavailable. The SNMP communication of the printer driver also will be unavailable, so that the obtaining the configurations and confirming the department code will be disabled.

### 3) Read Write Community

Enter the Read Write community name for the SNMP Traps.

#### Note

If you specify a community name other than “private” for the Read Write Community, the applications that use MIB (AddressBook Viewer) will be unavailable. The SNMP communication of the printer driver also will be unavailable, so that the obtaining the configurations of this equipment and confirming the department code will be disabled.

### 4) Enable Authentication Trap

Select whether sending a SNMP Traps when this equipment is accessed using SNMP from a different read community.

**5) Enable Alerts Trap**

Select whether sending a SNMP Traps when an alert condition occurs.

**6) IP Trap Address 1-10**

Enter the IP address where the SNMP Traps will be sent. You can specify up to 10 addresses.

**7) IP Trap Community**

Enter the trap community name for the IP Traps.

**8) IPX Trap Address**

Enter the IPX address where the SNMP Traps will be sent.

# Setting up Copier Settings

In the Copier submenu page in the Setup menu, an administrator can configure the copier settings that initially apply to copy operations.

## Note


Some settings may not apply to the LCD of this equipment as soon as you save the settings. The settings will be updated by pressing the [FUNCTION CLEAR] button on the Control Panel or after an Auto Clear time period.

## Setting the copier settings

### 1 Access TopAccess in the administrator mode.


📖 P.50 “Accessing TopAccess”

### 2 Click the Setup menu and Copier submenu.

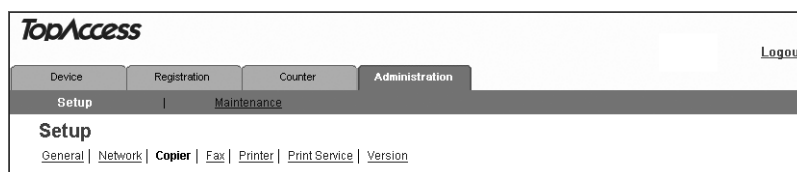

The Copier submenu page is displayed.

### 3 In the Copier submenu page, set the copier settings as required.

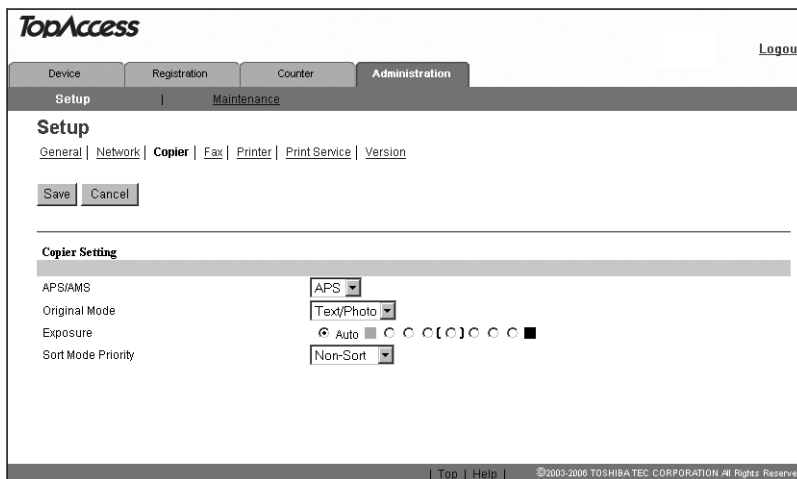

To set the Copier Settings, see the following:

📖 P.98 “Setting up the copier settings”

### 4 Click [Save].

The confirmation dialog box appears.

## Note

If you want to restore the current settings without saving the changes, click [Cancel]. Clicking [Cancel] cannot restore the defaults. This can only clear the changes and restore the current settings before saving the changes.

## 5 Click [OK] to apply the changes.



### Note

When using the Internet Explorer, the settings that are displayed in each field may not be changed even if you change the settings and click [Save]. However, the settings have been changed in the equipment. In that case, click the Copier submenu then the page displays the current settings in each field.

## Setting up the copier settings

In Copier Settings, you can set the default copier settings that apply for copy operation from the LCD of this equipment.

### Note

Depending on the settings in this equipment, some copier setting items may not be displayed.



### 1) APS/AMS

Select whether to give priority to APS or AMS, or to disable the priority.

- **APS (Automatic Paper Selection)** — Automatically detects the size of the originals and selects the drawer in which paper of the same size as the originals is used.
- **AMS (Automatic Magnification Selection)** — Automatically sets the reproduction ratio to match the scanned original data to the paper size in the selected drawer.
- **No** — Disable priority.

### 2) Original Mode

Select the default original mode for black/white originals.

### 3) Exposure

Select the type of image density for black and white copy.

- **Auto** — Select this to set the Auto mode as the default exposure for black and white copy. The Auto mode automatically detects the density of the original to make copies at the optimum exposure.
- **Manual** — Select this to set the density level manually within 7 stages.

### 4) Sorter Mode Priority

Select the default sort mode for copying.

# Setting up Fax Settings

In the Fax submenu page in the Setup menu, an administrator can configure the fax device settings and the settings initially apply to fax operations.

## Notes


- Some settings may not apply to the LCD of this equipment as soon as you save the settings. The settings will be updated by pressing the [FUNCTION CLEAR] button on the Control Panel or after an Auto Clear time period.
- The Fax submenu page in the Setup menu is available only when the optional Fax unit is installed.

## Setting the fax settings

### 1 Access TopAccess in the administrator mode.


 P.50 "Accessing TopAccess"

### 2 Click the Setup menu and Fax submenu.

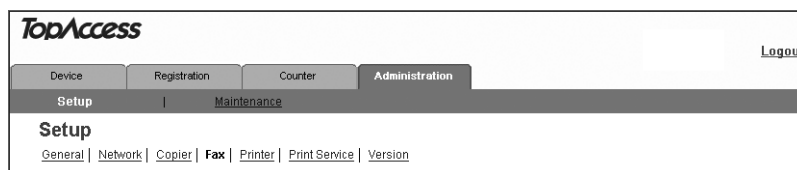


The Fax submenu page is displayed.

### 3 In the Fax submenu page, set the fax settings as required.

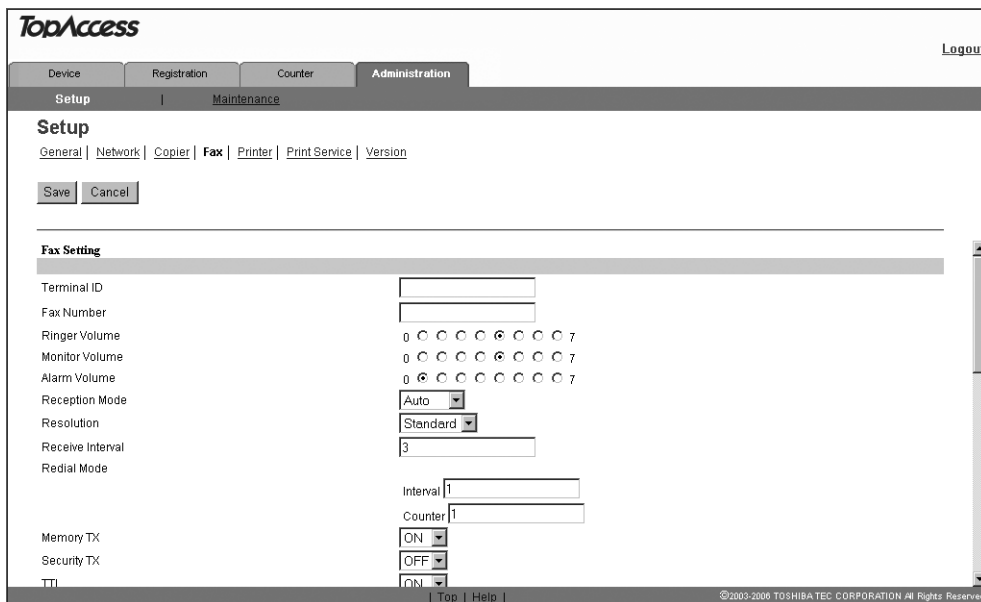

To set the Fax Settings, see the following:

 P.101 "Setting up the Fax settings"

---

## 4 Click [Save].

The confirmation dialog box appears.

### Note

If you want to restore the current settings without saving the changes, click [Cancel]. Clicking [Cancel] cannot restore the defaults. This can only clear the changes and restore the current settings before saving the changes.

## 5 Click [OK] to apply the changes.



### Notes

- If a valid value is not set to both "Interval" and "Counter" for redialing, the error message "Please enter a valid value." is displayed. Click [OK] on the error dialog box and enter valid values.
- When using the Internet Explorer, the settings that are displayed in each field may not be changed even if you change the settings and click [Save]. However, the settings have been changed in the equipment. In that case, click the Fax submenu then the page displays the current settings in each field.



- 
- 4) **Monitor Volume**  
Select the volume of the line monitor during transmission.
  - 5) **Alarm Volume**  
Selects the volume of the alarm.
  - 6) **Reception Mode**  
Select how this equipment activates when a fax is received.
    - **Auto** — Select this to automatically receive incoming originals when the bell rings. Select this when the line is being used exclusively by the fax transmission.
    - **Manual** — Select this to manually receive incoming originals after pressing the Start button on the Control Panel.
  - 7) **Resolution**  
Select the default resolution for sending faxes.
    - **Standard** — Select this to set the Standard mode as the default resolution appropriate for the originals in which the text is regular size.
    - **Fine** — Select this to set the Fine mode as the default resolution appropriate for the originals in which the text is small or a detailed drawing is contained.
    - **Ultra Fine** — Select this to set the Ultra-Fine mode as the default resolution appropriate for the originals in which the text is particularly small or a precision drawing is contained.
  - 8) **Receive Interval**  
Selects the interval of transmissions. Transmissions are forcibly paused every 4 times to receive incoming faxes during each interval. This interval can be set from 0 to 15 minutes.
  - 9) **Redial Mode**  
Selects redialing intervals and the number of times to redial when the line is busy.
    - **Interval** — Selects the redialing interval from 0 to 15 minutes.
    - **Counter** — Selects the number of times to redial from 0 to 14.
  - 10) **Memory TX**  
Selects whether the fax data are temporarily stored in the memory before transmission or not.
  - 11) **Security TX**  
Checks whether the number you dialed matches that of a destination or not and determines whether the fax data should be transmitted or not. If these numbers do not match, the fax data will not be transmitted to prevent inadvertent data transmission caused by dialing mistakes or misconnection of a telephone switchboard. You can select whether to enable or disable this function.
  - 12) **TTI**  
Select whether printing a transmission header (TTI) to identify the sender of received faxes.
  - 13) **RTI**  
Select whether printing a reception header (RTI) on received faxes to clearly identify the time, date, and page count of received faxes.
  - 14) **ECM**  
Select whether enabling or disabling the ECM (Error Correction Mode) to automatically re-send any portion of the document affected by phone line noise or distortion.
  - 15) **Discard**  
Select whether discarding the lower portion of the received fax image if it is larger than the recording paper.
  - 16) **Reduction**  
Select whether reducing the received fax image if it is larger than the effective printing area of the recording paper.
  - 17) **Recovery Transmit**  
Select whether re-transmitting a fax after failing the initially specified number of redial attempts. When this is enabled, select the stored time length from 1 to 24 hours.
-



---

### 18) Send after Scan

Selects whether to temporarily store all the scanned fax data before transmission or not.

- **Dial During Scan** — Transmits the data without storing them in the memory before transmission.
- **Dial After Scan** — Scans and stores the data in the memory before transmission.

When you select “Dial After Scan”, you can further select in the memory-full status whether you send the fax data scanned and stored so far in the memory or not.

### 19) When Memory Full

Select the fax transmission method when memory full occurs.

- **Delete Scan Pages** – Deletes the stored data and stops the transmission.
- **Send Scan Pages** – Transmits the data stored before the memory-full status.

### 20) Account Code

Selects whether to enable or disable the entry of the account code for each transmission.

When this function is enabled, you can figure out in a transmission journal how many faxes have been transmitted to each destination.

### 21) Separator Page

Selects whether to print separator pages which automatically separate a stack of faxes received from one destination or not. When this function is enabled, you can easily sort the received faxes.

### 22) Memory RX

Selects whether the received fax data are stored in the memory before printing them or not when any printing problems have occurred (e.g. running out of recording paper, a recording paper jam).

### 23) Privileged RX

Selects whether to receive faxes from only limited senders or not, such as the ones registered in the abbreviated number list or the one touch dial number list.

### 24) Journal Auto Print

Select whether automatically printing a transmission and reception journal after every transmission is completed.

### 25) Transmission Report

Selects how the transmission report is printed out.

- **OFF** — Does not print out the transmission report.
- **Always** — Prints out the transmission report at the completion of each transmission.
- **ON ERROR** — Prints out the transmission report only when a transmission error has occurred.

### 26) Memory Transmission Report

Select how to print a result report after a memory transmission.

- **OFF** — Select this to not print a memory transmission report.
- **Always** — Select this to print a memory transmission report with all page images for each memory transmission is completed.
- **ON ERROR** — Select this to print a memory transmission report with all page images only when the memory transmission is not successfully completed.
- **Always (Print 1st Page Image)** — Select this to print a memory transmission report with the 1st page image for each memory transmission is completed.
- **ON ERROR (Print 1st Page Image)** — Select this to print a memory transmission report with the 1st page image only when the memory transmission is not successful.

### 27) Multi Transmission Report

Select how to print a result report after a multi-address transmission.

- **OFF** — Select this to not print a multi-address transmission report.
- **Always** — Select this to print a multi-address transmission report with all page images for each multi-address transmission is completed.

- **ON ERROR** — Select this to print a multi-address transmission report with all page images only when the multi-address transmission is not successfully completed.
- **Always (Print 1st Page Image)** — Select this to print a multi-address transmission report with the 1st page image for each multi-address transmission is completed.
- **ON ERROR (Print 1st Page Image)** — Select this to print a multi-address transmission report with the 1st page image only when the multi-address transmission is not successful.

#### 28) Polling Report

Select how to print a result report after a multi-polling reception.

- **OFF** — Select this to not print a multi-polling report.
- **Always** — Select this to print a multi-polling report for each multi-polling reception.
- **ON ERROR** — Select this to print a multi-polling report only when the multi-polling reception is not successful.

#### 29) Relay Originator

Select how to print a result report after a relay transmission.

- **OFF** — Select this to not print a relay station report.
- **Always** — Select this to print a relay station report with all page images for each relay transmission is completed.
- **ON ERROR** — Select this to print a relay station report with all page images only when the relay transmission is not successful.
- **Always (Print 1st Page Image)** — Select this to print a relay station report with the 1st page image for each relay transmission is completed.
- **ON ERROR (Print 1st Page Image)** — Select this to print a relay station report with the 1st page image only when the relay transmission is not successful.

#### 30) Relay Station Report

Selects how the relay station report is printed out.

- **OFF** — Does not print out the relay station report.
- **Always** — Prints out the relay station report at the completion of each transmission.
- **ON ERROR** — Prints out the relay station report only when a transmission error has occurred.
- **Always (Print 1st Page Image)** — Prints out the relay station report with the 1st page of the original at the completion of each transmission.
- **ON ERROR (Print 1st Page Image)** — Prints out the relay station report with the 1st page of the original only when a transmission error has occurred.

#### 31) Relay End Report

Selects how the relay end report is printed out.

- **OFF** — Does not print out the relay end report.
- **Always** — Prints out the relay end report at the completion of each transmission.
- **ON ERROR** — Prints out the relay end report only when a transmission error has occurred.
- **Always (Print 1st Page Image)** — Prints out the relay end report with the 1st page of the original at the completion of each transmission.
- **ON ERROR (Print 1st Page Image)** — Prints out the relay end report with the 1st page of the original only when a transmission error has occurred.

#### 32) Local Mailbox List

Selects whether to print out the mailbox list of your fax unit for each transmission automatically or not.

#### 33) Remote Mailbox List

Selects whether to print out the mailbox list of other fax units for each transmission automatically or not.

#### 34) Relay Reception List

Selects whether to print out a list for the content of the received fax for each reception automatically or not.

# Setting up Printer Settings


In the Printer submenu page in the Setup menu, an administrator can configure how the printer works and the printer options needed for the raw print jobs.

## Setting the printer settings

### 1 Access TopAccess in the administrator mode.


P.50 "Accessing TopAccess"

### 2 Click the Setup menu and Printer submenu.

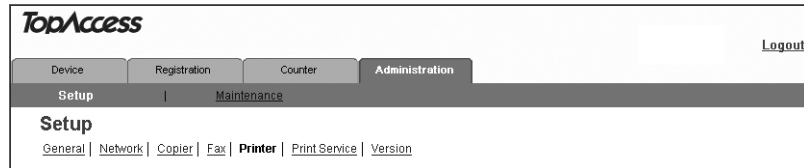

The Printer submenu page is displayed.

### 3 In the Printer submenu page, set the Printer settings as required.

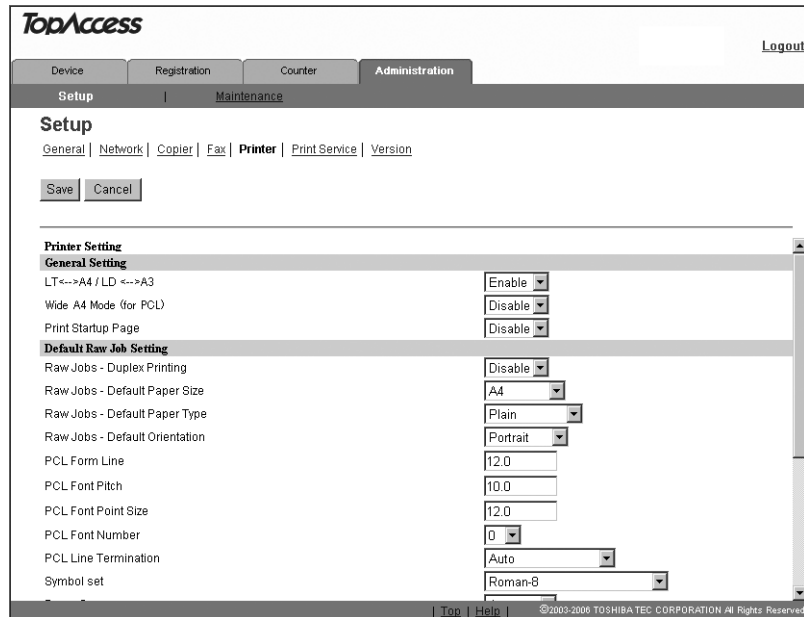

To set the Printer Settings, see the following:

- P.106 "Setting up the general setting"
- P.107 "Setting up the default Raw job setting"
- P.108 "Setting up the Raw job setting"

### 4 Click [Save].

The confirmation dialog box appears.

#### Note

If you want to restore the current settings without saving the changes, click [Cancel]. Clicking [Cancel] cannot restore the defaults. This can only clear the changes and restore the current settings before saving the changes.

## 5 Click [OK] to apply the changes.



### Note

When using the Internet Explorer, the settings that are displayed in each field may not be changed even if you change the settings and click [Save]. However, the settings have been changed in the equipment. In that case, click the Printer submenu then the page displays the current settings in each field.

## Setting up the general setting

In General Setting, you can specify the printer related options.



### 1) LT<-->A4/LD<-->A3

Select whether printing a document intended for that one paper size can be printed on paper of a different size. For example, you can print a document set up for Letter size on A4 paper. When disabled, this equipment will prompt users for the correct paper size.

### 2) Wide A4 Mode (for PCL)

Select whether the width of the printable area of copy paper is widened or not when you are printing PCL print job on A4 paper. Select [Enable] to widen it for approx. 3.5 mm / 0.14 inch (when in a portrait direction) and approx. 1.5 mm / 0.06 inch (when in a landscape direction). Thus more data can be printed for each line.

### 3) Print Startup Page

Select whether printing the startup page every time this equipment is powered on. The startup page is the NIC Status page.


---

## Setting up the default Raw job setting

In Default Raw Job Setting, you can specify the default raw job setting, which applies a raw job that no queue name is specified or specified queue name does not exist.

### Tip

You can also add LPR queue names and specify the raw job setting for each queue.

 P.108 “Setting up the Raw job setting”

Default Raw Job Setting	
1 — Raw Jobs - Duplex Printing	Disable
2 — Raw Jobs - Default Paper Size	A4
3 — Raw Jobs - Default Paper Type	Plain
4 — Raw Jobs - Default Orientation	Portrait
5 — PCL Form Line	12.0
6 — PCL Font Pitch	10.0
7 — PCL Font Point Size	12.0
8 — PCL Font Number	0
9 — PCL Line Termination	Auto
10 — Symbol set	Roman-8
11 — Paper Source	Auto

### 1) Raw jobs - Duplex Printing

Select whether a raw job will be printed on both sides of the paper.

### Note

The “Raw jobs - Duplex Printing” option is available only when the Automatic Duplexing Unit is installed.

### 2) Raw jobs - Default Paper Size

Select the default paper size that applies to a raw job.

### 3) Raw jobs - Default Paper Type

Select the default paper type that applies to a raw job.

### 4) Raw jobs - Default Orientation

Select the default orientation that applies to a raw job.

### 5) PCL Form Line

Enter the number of lines printed per page.

### 6) PCL Font Pitch

Enter the font pitch when the selected font number represents a fixed pitch scalable font.

Pitch is measured by letters per inch, so a 10-pitch is ten letters per inch.

### 7) PCL Font Point Size

Enter the font size when the selected font number represents a proportionally spaced scalable font. The Font Size option allows you to determine the point size (height) of the default font.

### 8) PCL Font Number

Enter the font number of the internal PCL font to be used as the default font for printing. You can check the font numbers and internal PCL fonts in the Internal PCL Font List. Please see the **Printing Guide** for the font number of internal PCL fonts,

### 9) PCL Line Termination

Select the type of the line termination.

### 10) Symbol set

Select the symbol set that applies to a raw job.


### 11) Paper Source


Select the paper source that applies to a raw job.

## Setting up the Raw job setting

In Raw Job Setting, you can add up to 16 LPR queue names and specify the raw job setting for each queue. These queue names can be used when printing without a printer driver, such as printing from UNIX workstation.

You can add, edit, or delete a LPR queue.

 P.108 "Adding or editing a LPR queue"

 P.110 "Deleting a LPR queue"

## Adding or editing a LPR queue

- To add a new LPR queue, click [Add] in Raw Job Setting. To edit an existing LPR queue, select a radio button of a queue that you want to edit and click [Edit].**

Raw Job Setting												
<input type="button" value="Add"/> <input type="button" value="Edit"/> <input type="button" value="Delete"/>												
	Queue Name	Duplex Printing	Paper Size	Paper Type	Orientation	PCL Form Line	PCL Font Pitch	PCL Font Point Size	PCL Font Number	PCL Line Termination	Symbol set	Paper Source
<input checked="" type="radio"/>	queue1	Disable	A4	Plain	Portrait	12.0	10.0	12.0	0	Auto	Roman-8	Auto
<input type="radio"/>	queue2	Enable	A4	Plain	Landscape	12.0	10.0	12.0	0	Auto	Roman-8	Auto
<input type="radio"/>	queue3	Disable	A4	Thick1	Portrait	12.0	10.0	12.0	0	Auto	Roman-8	Auto

The Add New LPR Queue page is displayed.

## 2 Enter following items as required.

**Add New LPR Queue**

Queue Name	<input type="text"/>
Duplex Printing	Disable ▾
Paper Size	A4 ▾
Paper Type	Plain ▾
Orientation	Portrait ▾
PCL Form Line	12.0
PCL Font Pitch	10.0
PCL Font Point Size	12.0
PCL Font Number	0 ▾
PCL Line Termination	Auto ▾
Symbol set	Roman-8 ▾
Paper Source	Auto ▾

**Queue Name** — Enter the queue name using up to 31 alphanumeric letters. The queue name is case sensitive so that “Queue1” and “queue1” will be added as different queues.

**Raw jobs - Duplex Printing** — Select whether a raw job will be printed on both sides of the paper.

**Raw jobs - Default Paper Size** — Select the default paper size that applies to a raw job.

**Raw jobs - Default Paper Type** — Select the default paper type that applies to a raw job.

**Raw jobs - Default Orientation** — Select the default orientation that applies to a raw job.

**PCL Form Line** — Enter the number of lines printed per page.

**PCL Font Pitch** — Enter the font pitch when the selected font number represents a fixed pitch scalable font. Pitch is measured by letters per inch, so a 10-pitch is ten letters per inch.

**PCL Font Point Size** — Enter the font size when the selected font number represents a proportionally spaced scalable font. The Font Size option allows you to determine the point size (height) of the default font.

**PCL Font Number** — Enter the font number of the internal PCL font to be used as the default font for printing. You can check the font numbers and internal PCL fonts in the Internal PCL Font List. Please see the *Printing Guide* for the font number of internal PCL fonts.

**PCL Line Termination** — Select the type of the line termination.

**Symbol set** — Select the symbol set that applies to a raw job.

**Paper Source** — Select the paper source that applies to a raw job.

## 3 Click [Save].

The queue name is added in the list.

## Deleting a LPR queue

- 1 Select a radio button of a queue that you want to delete and click [Delete].

 
**Raw Job Setting**

Add Edit Delete

	Queue Name	Duplex Printing	Paper Size	Paper Type	Orientation	PCL Form Line	PCL Font Pitch	PCL Font Point Size	PCL Font Number	PCL Line Termination	Symbol set	Paper Source
<input checked="" type="radio"/>	queue1	Disable	A4	Plain	Portrait	12.0	10.0	12.0	0	Auto	Roman-8	Auto
<input type="radio"/>	queue2	Enable	A4	Plain	Landscape	12.0	10.0	12.0	0	Auto	Roman-8	Auto
<input type="radio"/>	queue3	Disable	A4	Thick1	Portrait	12.0	10.0	12.0	0	Auto	Roman-8	Auto

The confirmation dialog box appears.

- 2 Click [OK].



The selected queue is deleted.



# Setting up Print Service Settings (Printing Function)


In the Print Service submenu page in the Setup menu, an administrator can configure such print services as Raw TCP Print, LPD Print, IPP Print, and NetWare Print.

## Note


Some settings may not apply to the LCD of this equipment as soon as you save the settings. The settings will be updated by pressing the [FUNCTION CLEAR] button on the Control Panel or after an Auto Clear time period.

## Setting the print service settings

### 1 Access TopAccess in the administrator mode.


 P.50 "Accessing TopAccess"

### 2 Click the Setup menu and Print Service submenu.

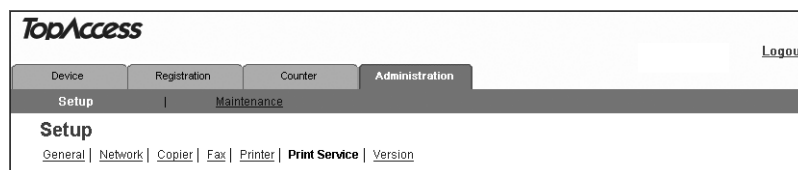



The Scan to Print Service submenu page is displayed.

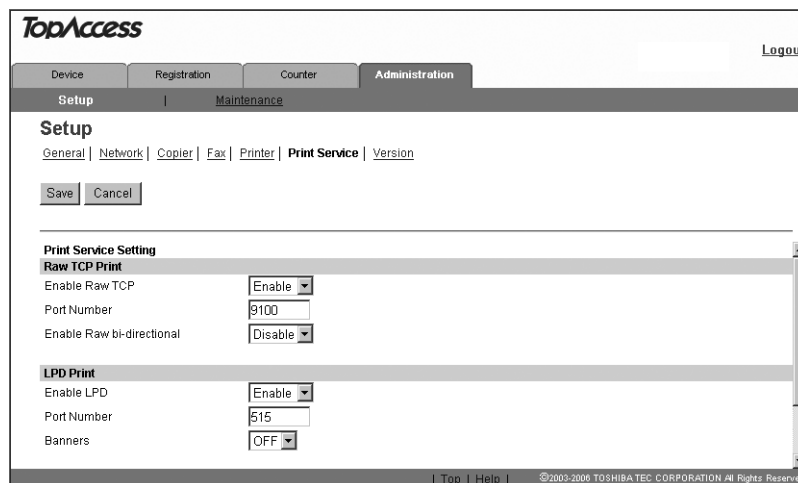
### 3 In the Print Service submenu page, set the Print Service settings as required.




In the Print Service submenu page, you can set the following:

 P.112 "Setting up the Raw TCP print"

 P.113 "Setting up the LPD print"

 P.113 "Setting up the IPP print"

 P.114 "Setting up the NetWare print"


## 4 Click [Save].

 The confirmation dialog box appears.

### Note

If you want to restore the current settings without saving the changes, click [Cancel]. Clicking [Cancel] cannot restore the defaults. This can only clear the changes and restore the current settings before saving the changes.

## 5 Click [OK] to apply the changes.



### Note

When using the Internet Explorer, the settings that are displayed in each field may not be changed even if you change the settings and click [Save]. However, the settings have been changed in the equipment. In that case, click the Print Service submenu then the page displays the current settings in each field.

## Setting up the Raw TCP print

In Raw TCP Print, you can enable or disable the Raw TCP print service.

Raw TCP Print	
1 — Enable Raw TCP	Enable
2 — Port Number	9100
3 — Enable Raw bi-directional	Disable

### 1) Enable Raw TCP

Enable or disable Raw TCP print service.

### 2) Port Number

If enabling the Raw TCP, enter the Raw TCP port number for the Raw TCP print. Generally "9100" is used.

### 3) Enable Raw bi-directional

Enable or disable Raw bi-directional communication.

---

## Setting up the LPD print

In LPD Print, you can set the LPD print options to enable the LPD/LPR print service.

LPD Print	
1 — Enable LPD	Enable
2 — Port Number	515
3 — Banners	OFF

- 1) Enable LPD**  
Enable or disable LPD print service.
- 2) Port Number**  
If enabling the LPD, enter the LPD port number. Generally “515” is used.
- 3) Banners**  
Select whether printing a banner page for each print job using LPR printing.

### Note

When printing from Macintosh computer using LPR printing, the PostScript code will be printed instead of a banner page. If any users will print from Macintosh computers using LPR printing, please disable the “Banners” option.

## Setting up the IPP print

In IPP Print, you can set the IPP Print options to enable the IPP print service.

IPP Print	
1 — Enable IPP	Enable
2 — Port80 Enable	Enable
3 — Port Number	631
4 — URL	http://10.151.137.78:631/Print
5 — Administrator's Name	admin
6 — Administrator's Password	*****
7 — Authentication	Disable
8 — User Name	user
9 — Password	*****

- 1) Enable IPP**  
Enable or disable IPP print service.
- 2) Port80 Enable**  
Enable or disable the Port80 for IPP printing. Port631 is usually used for the IPP access so users must specify to the URL, i.e. “http://<IP address or DNS name>:631/Print”, for the IPP port. When this is enabled, this equipment allows IPP access through the Port80, which is the default port for the HTTP access so users do not have to specify the port number in the IPP port, i.e. “http://<IP address or DNS name>/Print”.
- 3) Port Number**  
If enabling the IPP, enter the IPP port number. Generally “631” is used.
- 4) URL**  
Display the URL for IPP printing. You cannot change the URL for IPP printing. This URL should be set as the print port when users set up the printer driver for IPP printing.

**5) Administrator's Name**

Enter the administrator's user name to be allowed to perform the [Cancel All Documents] function. The user who log in to the computer using this administrator's name can delete all jobs in the IPP queue by selecting [Cancel All Documents] command in the [File] menu of printer queue dialog box on Windows.

**6) Administrator's Password**

Enter the password of user to be allowed to perform the [Cancel All Documents] function.

**7) Authentication**

Enable or disable the authentication for creating the IPP queue on the client computers. When this is enabled, the dialog box to enter a user name and password will be displayed when a user creates the IPP print port.

- **Disable** — Select this to disable the authentication.
- **Basic** — Select this to enable the authentication.

**Note**

To enable the authentication, be sure to select "Basic". If "Digest" or "Basic Digest" is selected, users no longer create the IPP print port, because "Digest" or "Basic Digest" is not supported for Windows.

**8) User Name**

Enter the user name for authentication.

**9) Password**

Enter the password for authentication. "123456" has been set as the default.

## Setting up the NetWare print

In NetWare Print, you can set the NetWare print options to enable the Novell print service.

NetWare Print	
1 — Login Name	MFP_00013995
2 — Password	
3 — Print Queue Scan Rate	5

**1) Login Name**

Enter the print server name that is created in the NetWare file server.

**2) Password**

Enter the password that is set to the print server, if required.


**3) Print Queue Scan Rate**

Enter how frequently to scan the print queues for print jobs. This should be entered in second. You can enter between 1 to 255.


# Displaying Version Information

An administrator can display the system software version information of this equipment. The version information can be displayed from the Setup menu page.

## 1 Access TopAccess in the administrator mode.


 P.50 "Accessing TopAccess"

## 2 Click the Setup menu and Version submenu.

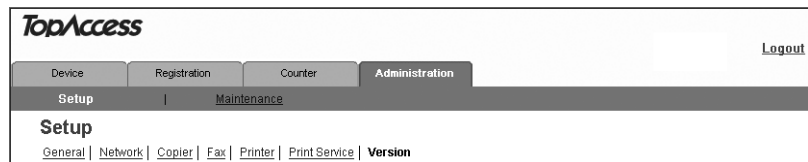

The Version submenu page is displayed.

## 3 In the Version submenu page, you can confirm the version information of the system software.

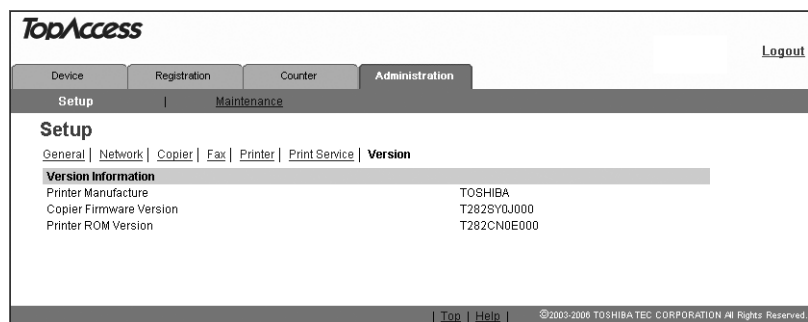



## **TopAccess ADMINISTRATION TAB PAGE - MAINTENANCE MENU**

This chapter describes the maintenance of TopAccess performed by the TopAccess administrator.

<b>About the Maintenance Functions .....</b>	<b>118</b>
<b>Switching Languages .....</b>	<b>119</b>
<b>Backing up Data .....</b>	<b>121</b>
<b>Restoring Data from Backup File .....</b>	<b>124</b>
<b>Importing Address Book Data .....</b>	<b>127</b>
<b>Exporting Address Book Data .....</b>	<b>130</b>
<b>Exporting Department Code Data.....</b>	<b>134</b>


## About the Maintenance Functions

---

In the Maintenance menu of the TopAccess administrator mode, an administrator can perform the following maintenance:


### **Install Language**

The administrator can change the language displayed in the TopAccess screen.

 P.119 "Switching Languages"

### **Backing up data**

An administrator can create backup files of address book.

 P.121 "Backing up Data"


### **Restoring data from the backup files**

An administrator can restore the address book from the backup files.

 P.124 "Restoring Data from Backup File"


### **Importing address book data**

This equipment allows you to import address book data in CSV format.

 P.127 "Importing Address Book Data"

### **Exporting address book data**

The address book data can be exported in a CSV format.

 P.130 "Exporting Address Book Data"

### **Exporting department code data**

The department code data can be exported in a CSV format.

 P.134 "Exporting Department Code Data"

#### **Note**

When the address book data of the equipment are backed up, restored or imported/exported, updating the data may take a while depending on their data size. Do not turn the power of the equipment OFF until the data are updated.



# Switching Languages

You can switch the currently-used language to the desired one by uploading the language of TopAccess in the Client Utilities CD-ROM to this equipment.

## Note

When the Scanner Upgrade Kit (optional) has been installed, upload the TopAccess language data stored in the Scan Utilities CD-ROM (included in the Scanner Upgrade Kit) in order to switch TopAccess languages according to the **Setup Guide for Scanning Functions**. The TopAccess language data are also provided in the Client Utilities CD-ROM (included in the Network Printer Kit), which is described in this guide. However, they do not support the scanning function.


### 1 Insert the Client Utilities CD-ROM into a client PC.

When inserting the Client Utilities CD-ROM, the installer may automatically start. Click [Cancel] to make the installer exit and continue the operation.

### 2 Access TopAccess in the administrator mode.


📖 P.50 “Accessing TopAccess”

### 3 Click the Maintenance menu and Install Language submenu.

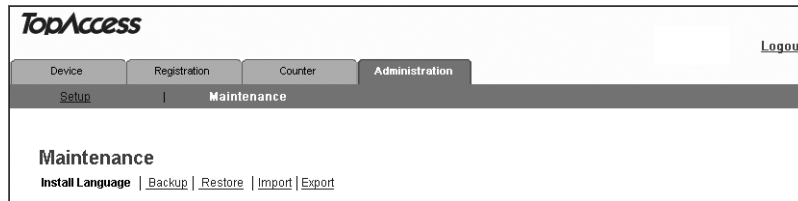


The Install Language submenu page is displayed.

### 4 Select the desired language in the “Select” drop down box.

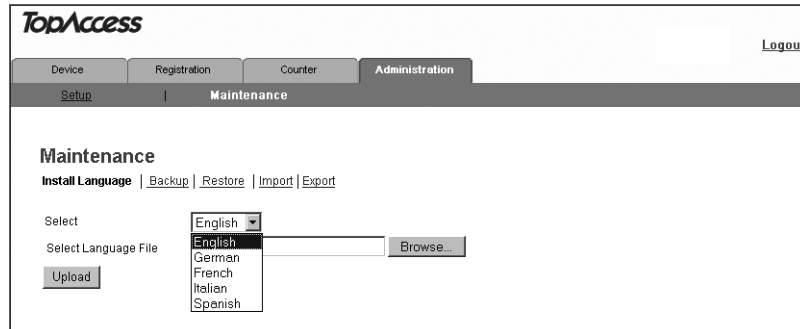


**5 Click [Browse] and then select the TOPACCESS folder in the Client Utilities CD-ROM. Then select the desired language file and click [Open].**

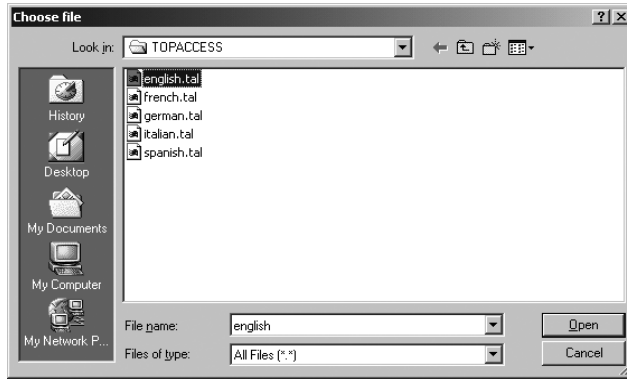


TopAccess language:  
 [Client Utilities CD-ROM]: \TOPACCESS\<Language>

**Note**

 If the language selected in the drop down box and the one selected from the Client Utilities CD-ROM differ, the error message dialog box shown below appears. Click [OK] in this message dialog box and then select the correct language.



**6 Click [Upload].**

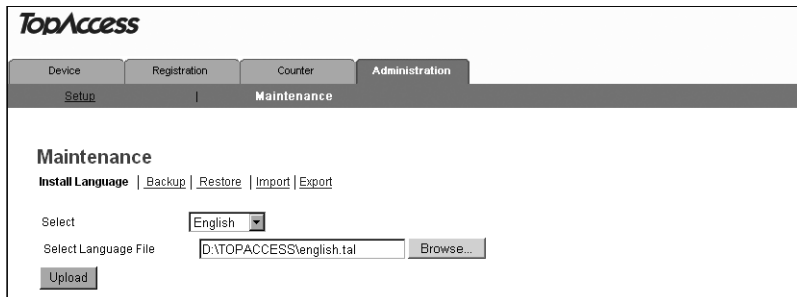


Uploading starts. When it is completed, the language is switched.


# Backing up Data

The administrator can create backup files of the address book data. The backup files can be used to restore or upload to other e-STUDIO165/205, e-STUDIO167/207/237 or e-STUDIO182/212/242 compatible equipments.

## 1 Access TopAccess in the administrator mode.


 P.50 "Accessing TopAccess"

## 2 Click the Maintenance menu and Backup submenu.

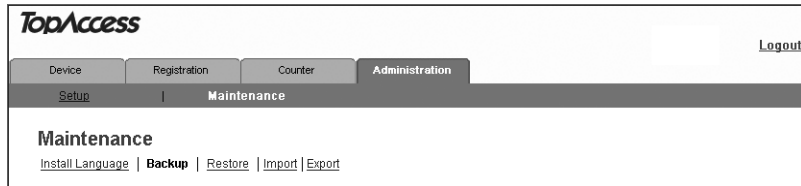


The Backup submenu page is displayed.

## 3 Click [Create New File] for the data that you want to backup.

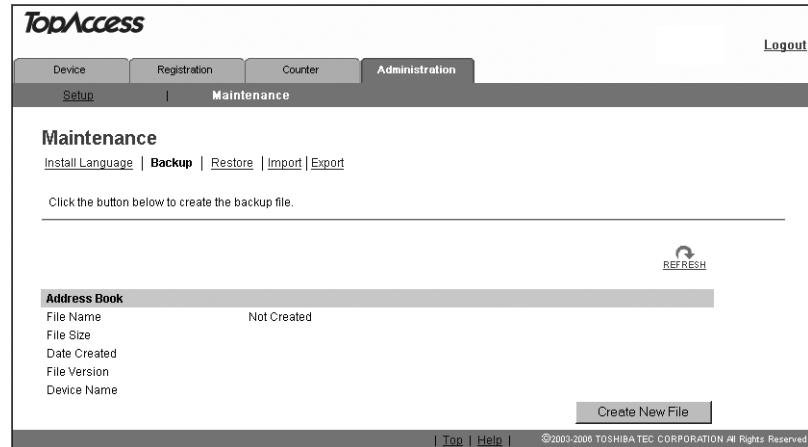

"Backup or restoration process in progress." appears and the backup process begins.

## 4 Click [REFRESH] on the right side.

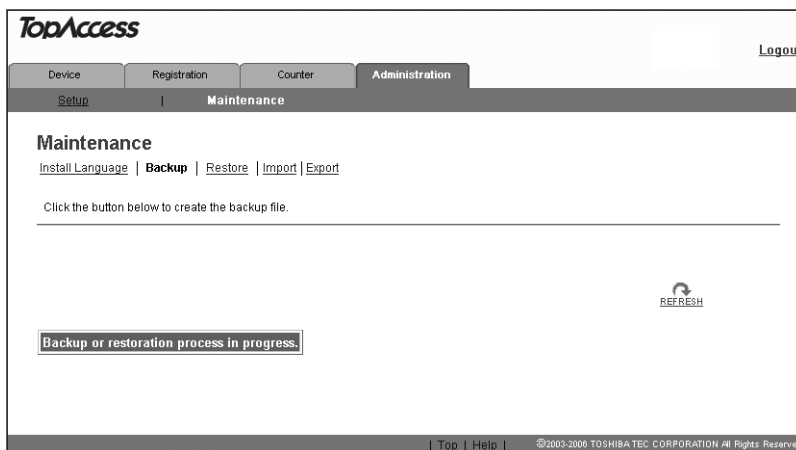


A backup file is created and its name and size will be displayed.

### Note

If the screen is not refreshed by clicking the [REFRESH] icon, please wait a while and then try again. Creating the backup file may take a few minutes depending on its size.


## 5 Right-click the File Name link and select [Save Target As...].

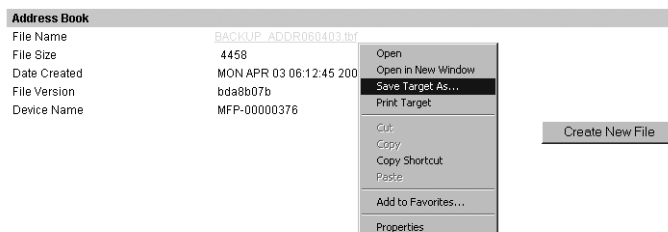

The Save As dialog box appears.

---

**6** Select the file location and select “All Files” in the “Save as type” drop down box.

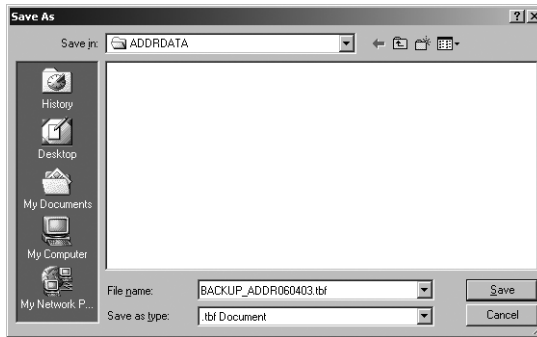

**Note**

It is recommended to save the backup file as it is named. If you change the file name, the equipment cannot restore the data from the backup files. The file name of each backup data must be the following name:

- Address Book: BACKUP\_ADDR<date>.tbf

**7** Click [Save].

The backup file is saved in the selected location.

**Caution**

If you turn the power of the equipment OFF, the export files in the equipment will be lost.


## Restoring Data from Backup File

An administrator can restore the address book data using the backup files. This maintenance feature is used to restore data from backup files, to recover the original environments.


### Note

Before restoring the data from backup files, please confirm that there is no print job, no scan job, and no fax job. The backup files cannot be restored if there are any jobs that have been processed.

### 1 Access TopAccess in the administrator mode.

 P.50 "Accessing TopAccess"

### 2 Click the Maintenance menu and Restore submenu.

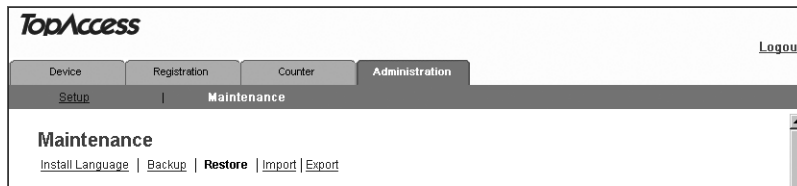


The Restore submenu page is displayed.

### 3 Click [Browse] in the data section that you want to restore.



The Choose File dialog box appears.

## 4 Select a backup file and click [Open].

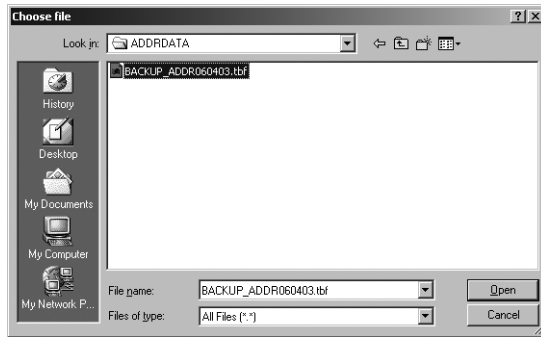

### Note

If the backup file name is not the name as shown below, the equipment cannot restore the data from the backup files.

- Address Book: BACKUP\_ADDR<date>.tbf

## 5 Click [Upload].




The Restore screen displays the backup file information.

## 6 Check the box of Address Book and click [Restore].



“Backup or restoration process in progress.” appears and the restoration process begins.

## 7 Click [REFRESH] on the right side.

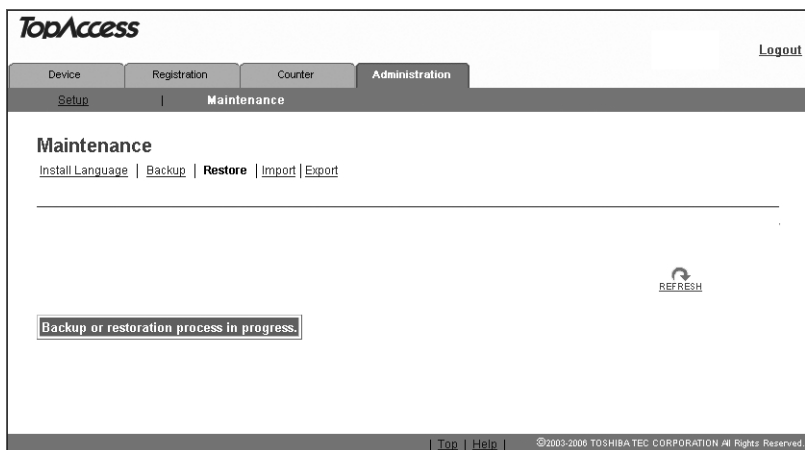

The address book data are restored in this equipment.

### Note

If the screen is not refreshed by clicking the [REFRESH] icon, please wait a while and then try again. Restoration may take a few minutes depending on the file size.



## Importing Address Book Data

You can import the address book data in a CSV format to TopAccess. The data need to be comma-delimited CSV files complying with the address book data format of TopAccess. Create the file in the following format:

```
"NAME","Email Address","Tel Number","ABB_ID","OT_ID","Search Letter"
"Use01","user01@toshibatec-ifax.com","000000000001","1","1","A"
"Use02","user02@toshibatec-ifax.com","000000000002","","2","B"
"Use03","user03@toshibatec-ifax.com","000000000003","2","","A"
```

Each item in the address book data is imported to TopAccess under the following item names:

Item Names in Address Book	Item Names in TopAccess	Maximum Number of letters Acceptable
NAME	Name	20 one-byte letters / 10 two-byte letters
Email Address	(Import disabled)	-
Tel Number	Fax Number	128 one-byte letters (Digits and signs " * ", "#", " - ")
ABB_ID	ABB. Number	3 one-byte letters (Digits from 001 to 999)
OT_ID	One Touch Number	2 one-byte letters (Digits from 1 to 75)
Search Letter	Search Letter	1 one-byte letters (Capital letters, digits, signs)


- Be sure to enter "NAME" and "Tel Number", or the data will not be imported.
- Data with letters exceeding the maximum number shown above cannot be imported.
- Be sure to enter either "ABB\_ID" or "OT\_ID".
- A maximum of 300 abbreviated numbers ("ABB\_ID") and a maximum of 75 one-touch numbers ("OT\_ID") can be imported.
- If an abbreviated number ("ABB\_ID") already registered for one user is used for another, only the data of the user first registered in this abbreviated number will be imported. (The same procedure is taken in one-touch numbers ("OT\_ID").)
- For letters accepted for "Search Letter", see the **Operator's Manual for Facsimile Function**.


**Note**

Before importing the address book data, confirm that this equipment meets the conditions shown below. If this equipment does not meet any of the following conditions, the address book data will not be imported:


- The main screen of any operation modes (e.g. copy mode) is displayed or this equipment has entered into the energy saving mode from the status displaying the main screen of any operation modes.
- No reserved jobs or jobs in process exist.

**1 Access TopAccess in the administrator mode.**


 P.50 "Accessing TopAccess"

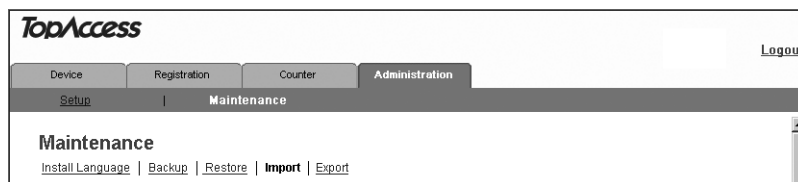**2 Click the Maintenance menu and Import submenu.**

The Import submenu page is displayed.

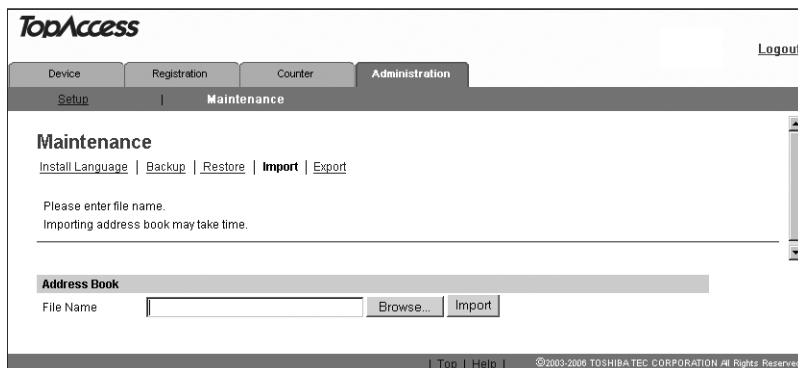**3 Click [Browse...] in the Address Book area.**

The Choose File dialog box appears.

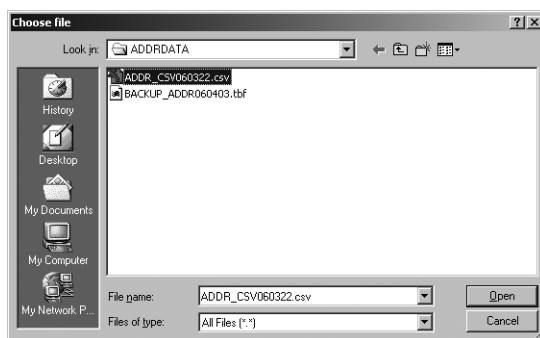**4 Select the CSV file that contains address book data and click [Open].**

## 5 Click [Import].

The screenshot shows the TopAccess web interface. At the top, there are navigation tabs for Device, Registration, Counter, and Administration. The Administration tab is active, and the Maintenance sub-tab is selected. The page title is "Maintenance". Below the title, there are links for "Install Language", "Backup", "Restore", "Import", and "Export". The "Import" link is highlighted. Below the links, there is a text prompt: "Please enter file name. Importing address book may take time." Below this, there is a section titled "Address Book" with a text input field for "File Name" containing the path "C:\Documents and Settings\z66020m\". To the right of the input field are "Browse..." and "Import" buttons. At the bottom of the page, there is a footer with "Top | Help |" and "©2003-2006 TOSHIBA TEC CORPORATION All Rights Reserved".

“Backup or restoration process in progress.” appears and the import process begins.

## 6 Click [REFRESH] on the right side.

The screenshot shows the TopAccess web interface. At the top, there are navigation tabs for Device, Registration, Counter, and Administration. The Administration tab is active, and the Maintenance sub-tab is selected. The page title is "Maintenance". Below the title, there are links for "Install Language", "Backup", "Restore", "Import", and "Export". Below the links, there is a text prompt: "Please enter file name. Importing address book may take time." Below this, there is a section titled "Address Book" with a text input field for "File Name" containing the path "C:\Documents and Settings\z66020m\". To the right of the input field are "Browse..." and "Import" buttons. At the bottom of the page, there is a footer with "Top | Help |" and "©2003-2006 TOSHIBA TEC CORPORATION All Rights Reserved".


The address book data are imported from the CSV file to this equipment.

### Note


If the screen is not refreshed by clicking the [REFRESH] icon, please wait a while and then try again. Import may take a few minutes depending on the file size.

## Exporting Address Book Data


The address book data can be exported in a CSV format. For the formats of the address book data and each item, see the following page:

 P.127 “Importing Address Book Data”

### 1 Access TopAccess in the administrator mode.


 P.50 “Accessing TopAccess”

### 2 Click the Maintenance menu and the Export submenu.

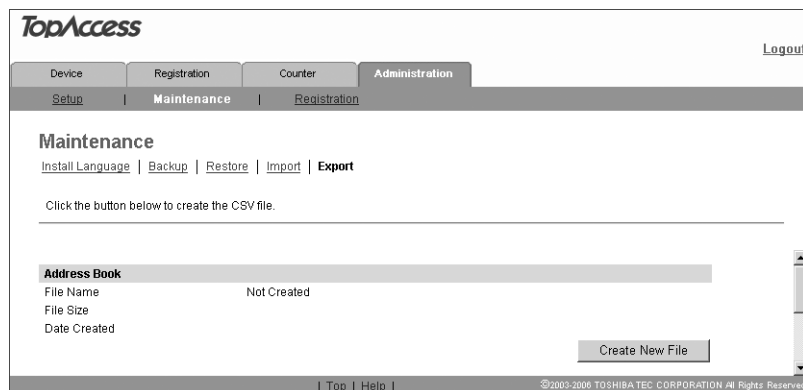


The Export submenu page is displayed.

### 3 Click [Create New File] in the Address Book area.

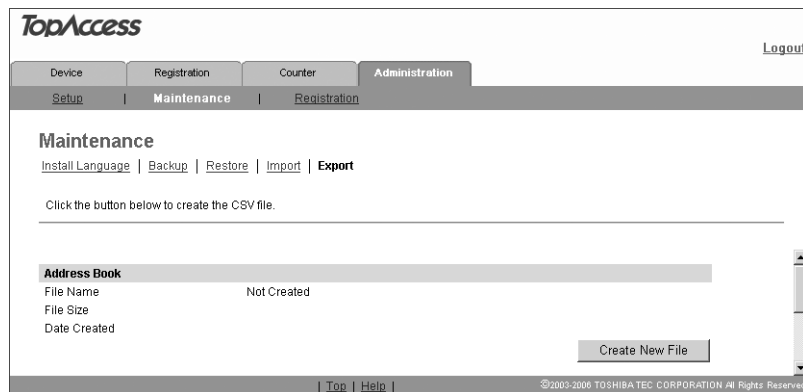


The information of the address book data (CSV file name) is displayed.

#### 4 Right-click the link of the file name, and select [Save Target As ...].

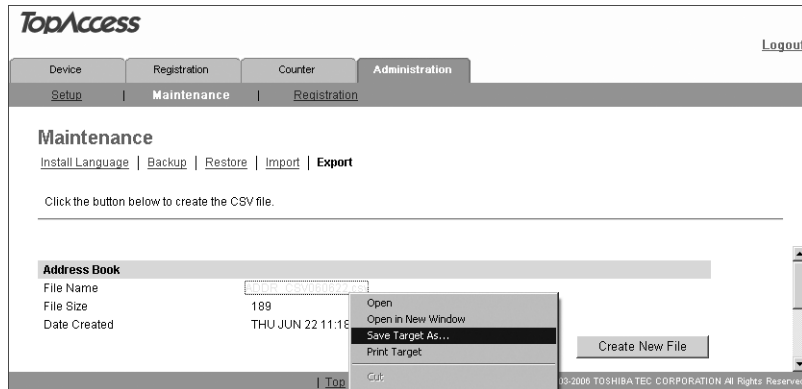

The Save As dialog box is displayed.

#### 5 Specify where the file is to be saved, and select "All Files" in the "Save as type" drop down box.

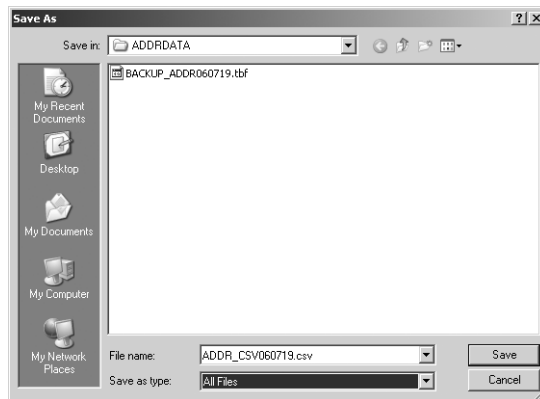

#### 6 Click [Save].

The address book data file in a CSV format is saved in the location you specified.

#### Caution

If you turn the power of the equipment OFF, the export files in the equipment will be lost.

## Importing Department Code Data

You can import the department code data in a CSV format that were previously exported.

### Note


Before importing the department code data, confirm that this equipment meets the conditions shown below. If this equipment does not meet any of the following conditions, the department code data will not be imported:

- The department code function is enabled.
- The department code entry screen is displayed or this equipment has entered into the energy saving mode from the status displaying the department code entry screen.
- No reserved jobs or jobs in process exist.

### 1 Access the TopAccess in the administrator mode.


 P.50 "Accessing TopAccess"

### 2 Click the Maintenance menu and Import submenu.

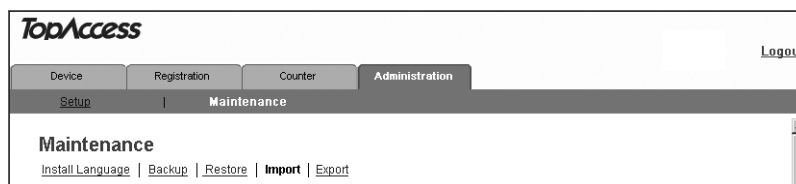

The Import submenu page is displayed.

### 3 Click [Browse...] in the Department Code area.

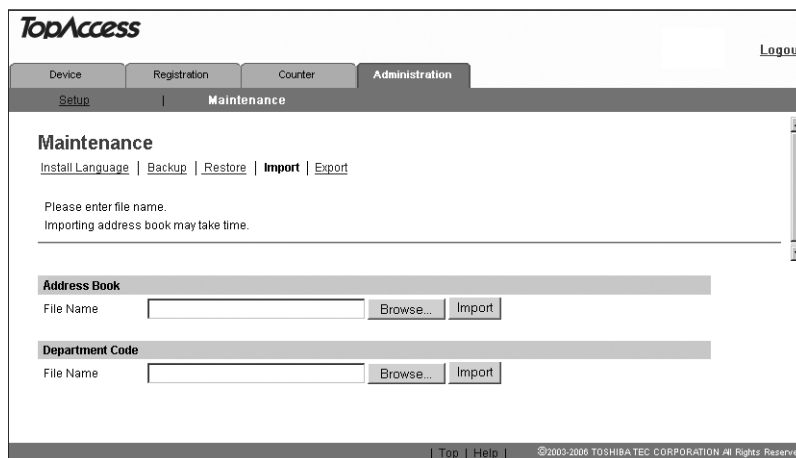


The Choose File dialog box appears.

**4 Select CSV file of the department code data that were exported previously, and then click [Open].**



**5 Click [Import].**

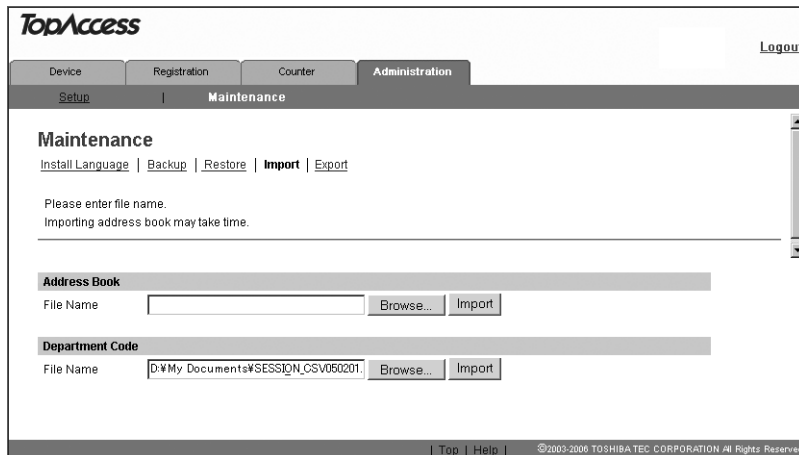

"Backup or restoration process in progress." appears and the import process begins.

**6 Click the [REFRESH] on the right side.**



The department code data are imported from the CSV file to this equipment.

**Note**

If the screen is not refreshed by clicking the [REFRESH], wait for a while and then try again. Import may take a few minutes depending on the file size.

## Exporting Department Code Data

The department code data can be exported in a CSV format.


### Notes

- Before importing the department code data, confirm that the department code function is enabled. If disabled, the data will not be imported.
- The purpose of this procedure is backing up the department code data to prepare for failure. Do not edit or delete the exported data because they will be needed at the time of importing them back.

### 1 Access TopAccess in the administrator mode.


 P.50 "Accessing TopAccess"

### 2 Click the Maintenance menu and the Export submenu.

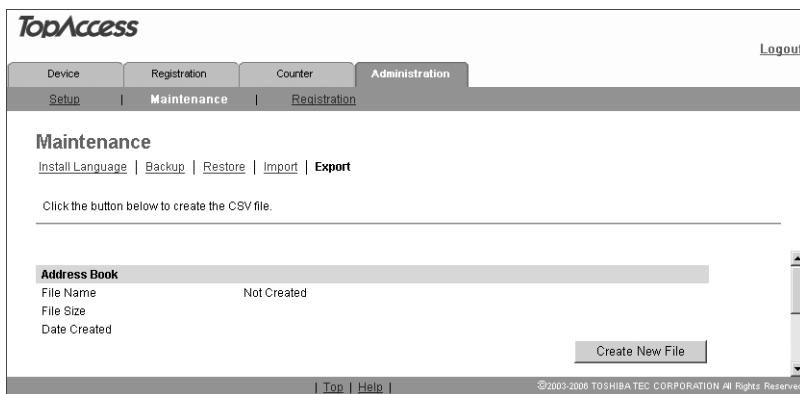

The Export submenu page is displayed.


### 3 Click [Create New File] in the Department Code Export area.

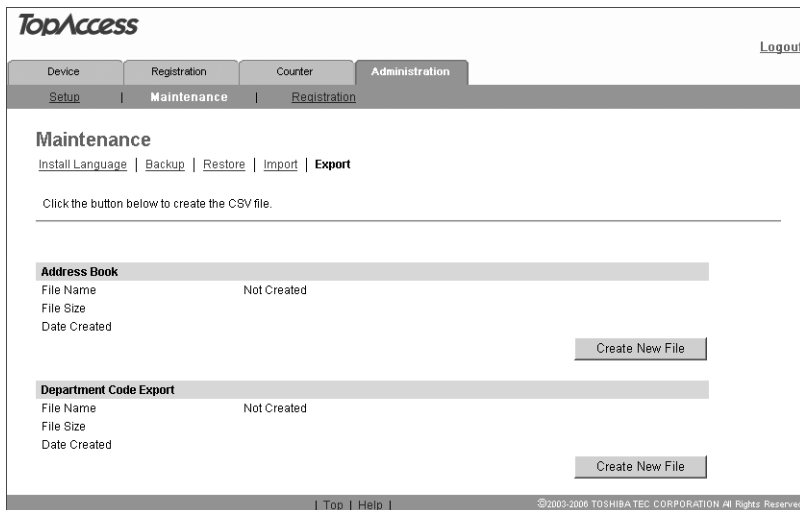

The information of the department code data (CSV file name) is displayed.




#### 4 Right-click the link of the file name, and select [Save Target As ...].

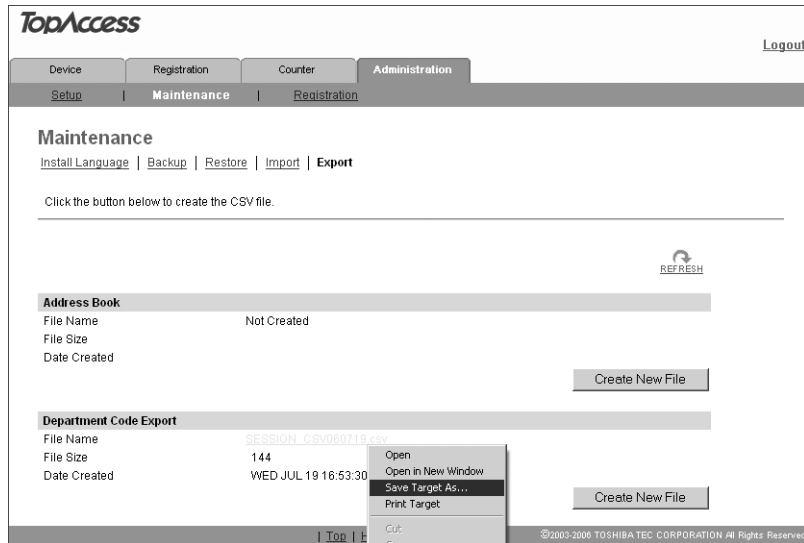

The Save As dialog box is displayed.

#### 5 Specify where the file is to be saved, and select "All Files" in the "Save as type" drop down box.

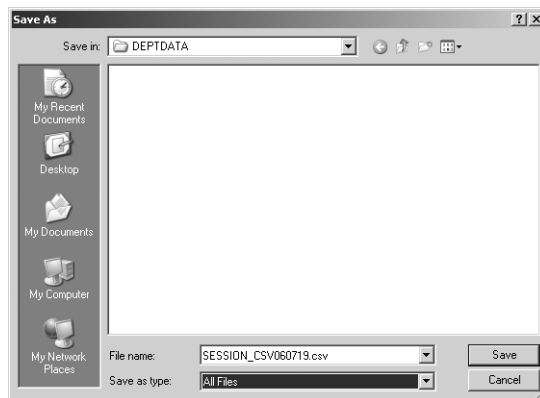

#### 6 Click [Save].

The department code data file in a CSV format is saved in the location you specified.

#### Caution

If you turn the power of the equipment OFF, the export files in the equipment will be lost.



# 12

## **MANAGING DEPARTMENT CODES ON TopAccess (FOR ADMINISTRATORS)**

This chapter describes how to have department codes managed by an administrator.

<b>Managing Department Codes (For Administrators) .....</b>	<b>138</b>
---	------------

## Managing Department Codes (For Administrators)

On the Department menu page at the Counter tab, by entering the master code, the administrator can display the department list that contains the counter information for each department.

### Note

Displaying the department counter is available only when a department code is set by using this equipment.

### Tip

To register or delete the department codes, use the control panel of this equipment. For department code settings in this equipment, see *Operator's Manual for Copying Functions*.

- 1 Click the Counters tab and the Department menu.**  
The Department menu page is displayed.
- 2 Enter the master code in the “Department Code” field and click [Enter].**

The Department Management page is displayed.

- 3 The departments list containing the counter information is displayed.**

Number	Department Name	Dept Code	Copy	Printer	Fax Transmission	Fax Reception
1	11	11111	0	0	0	0
2	22	22222	0	0	0	0
3	33	33333	0	0	0	0

[Go to top of this page](#)

### Tip

You can display the desired department code information by entering that code.

# 13

## TROUBLESHOOTING

This chapter describes the most common TopAccess errors, and provides procedures to resolve the conditions. If the problem persists after you have followed all of the steps, make sure to note what you were trying to do and any error messages appear, etc. — and then contact your service representative.


<b>TopAccess Error Messages .....</b>	<b>140</b>
Device status indicator list.....	140
Error message list .....	141

## TopAccess Error Messages

---

### Device status indicator list

When an error occurs, the Device status indicator will be displayed on the Device tab page of TopAccess. For details, see the following page:

 P.56 “TopAccess Device Tab Page”

- Printer Error



The above printer error icon indicates:

- You need to remove paper from the receiving tray.
- Non-recommended toner is being used.

For information on how to resolve the error condition, see “Replacing Toner Cartridge” in the ***Operator’s Manual for Copying Functions***.

- Cover Open



The Cover Open error icon indicates that you need to close the cover.

- Toner Empty



The Toner Empty icon indicates the empty status of the toner cartridge. For information on how to resolve the error condition, see “Replacing Toner Cartridge” in the ***Operator’s Manual for Copying Functions***.

- Paper Empty



The Paper Empty icon indicates that one of the drawers is opened. You must close the opened drawer to resume printing or copying. This icon also indicates the empty status of the drawer. This status does not immediately stop a print job or a copy job. If the automatic paper selection (APS) function is enabled, the print or copy job may continue by selecting paper of the same size in the other drawer. For information on how to resolve the error condition, see “When this message appears” in the ***Operator’s Manual for Copying Functions***.

When paper has run out, you can cancel a print job in process from the control panel of this equipment. See the following page for how to cancel a print job:

 P.24 “To Cancel Print Jobs”

- Paper Jam



The Paper Jam icon indicates that you must remove jammed paper from the equipment. For information on how to resolve the error condition, see “Paper Jams” in the ***Operator’s Manual for Copying Functions***.


- Service calls



The Service Call error icon indicates that you must call for service. Contact your service technician.

## Error message list

The error message will be displayed in “Alerts” field on the Device tab page of TopAccess.  
For the details, see the following page:

 P.56 “TopAccess Device Tab Page”

<b>TopAccess Message</b>	<b>Corrective Action</b>
Main Motor Error - Please Contact Service Technician.	Contact your service representative.
Fuser Error - Please Contact Service Technician.	Contact your service representative.
Scanner Error - Please Contact Service Technician.	Contact your service representative.
Toner Not Recognized - Please Check Toner.	Check and adjust the toner cartridge.
Fatal Error - Please Contact Service Technician.	Contact your service representative.
Paper Jam in Automatic Duplexing Unit - Please Clear Paper Path.	Remove jammed paper.
Paper Jam in Printer - Please Clear Paper Path.	Remove jammed paper.
Paper Insertion Jam - Please Clear Paper Path.	Remove jammed paper.
Front Cover Open - Please Close Cover.	Close the Front cover.
Paper Feeding Cover Open - Please Close Cover.	Close the Paper Feeding cover.
Lower Side Cover Open - Please Close Cover.	Close the Lower Side cover.
Transfer/Transport unit Cover Open - Please Close Cover.	Close the Transfer/Transport unit cover.
Black Toner Empty - Please Refill.	Replace the toner. Refer to the Operator's Manual for Copying Functions for instruction.
Black Toner Cartridge Depleted - Please Install New Cartridge Before System is Empty.	Prepare the toner cartridge.
Paper Empty in Drawer 1 - Please Add Paper.	Set paper in the drawer 1.
Paper Empty in Drawer 2 - Please Add Paper.	Set paper in the drawer 2.
Paper Empty in Drawer 3 - Please Add Paper.	Set paper in the drawer 3.
Paper Empty in Drawer 4 - Please Add Paper.	Set paper in the drawer 4.





## APPENDIX

This chapter has been prepared to give additional information.

<b>List Print Format .....</b>	<b>144</b>
--------------------------------	------------

# List Print Format

## Configuration Page (Example)

```

CONFIGURATION PAGE
      S/N           : XXXXXXXXXXXX          TIME           : '07-04-10 09:30
      F/W Ver.     : XXXXXXXXXXXX

GENERAL
MEMORY SIZE                : 256MB
OPTIONAL FUNCTIONAL KIT    : NOT INSTALLED

NETWORK SETTING
GENERAL PRODUCT
GENERAL
ETHERNET SPEED/DUPLEX MODE : 10BASE FULL

NETWORK
TCP/IP
ADDRESS MODE               : DYNAMIC
IP ADDRESS                 : XXX.XXX.XXX.XXX
SUBNET MASK                : XXX.XXX.XXX.XXX
DEFAULT GATEWAY            : 0. 0. 0. 0

IPX/SPX
ENABLE IPX/SPX             : ENABLE
FRAME TYPE                 : AUTO SENSE

APPLE TALK
ENABLE APPLE TALK          : DISABLE
DEVICE NAME                : XXXXXXXXXXXX
DESIRED ZONE                : *

SESSION
DNS SESSION
ENABLE DNS                  : ENABLE
PRIMARY DNS SERVER ADDRESS : 0. 0. 0. 0
SECONDARY DNS SERVER ADDRESS : 0. 0. 0. 0

DDNS SESSION
ENABLE DDNS                 : ENABLE
HOST NAME                   : XXXXXXXXXXXX
DOMAIN NAME                 :

NETWARE SESSION
ENABLE BINDERY              : ENABLE
ENABLE NDS                  : ENABLE
CONTEXT                     :
TREE                        :
SEARCH ROOT                 :

BONJOUR SESSION
ENABLE BONJOUR              :

```

---

## NIC Status Page (Example)

---

```
=====
Unit Serial No : XXXXXXXX
Network Address : XX;XX;XX;XX;XX;XX
Network Topology : Ethernet Connector: RJ45
Network Mode : AUTO
Novell Network Information enabled
  Print Server Name : XXXXXXXXXXXXX
  Password Defined :
  Search Root not defined
  Directory Services Tree not defined
  Directory Service Context not defined
  Scan Rate : 5
  Frame Type : Auto Sense
TCP/IP Network Information enabled
  IP Address : XX.XXX.XXX.XX
  Subnet Mask : XXX.XXX.X.X
  Default Gateway : XX.XXX.XXX.X
  Primary DNS Server : XXX.XX.XXX.XX
  DNS Name :
  Host Name : XXXXXXXXXXXXX
IPP Network Information enabled
  Internet Printing Protocol : XXXXXXXXXXXXX
AppleTalk Network Information disabled
=====
Novell Connection Information
  Couldn't attach to server
AppleTalk Connection Information
  AppleTalk Printer Name: XXXXXXXXXXXXX
Raw Socket Connection Information
  Port Number: 9100
```



## PCL Font List (Example)

**TOSHIBA**

**e-STUDIO205**

Internal PCL Font List

Page:1

0	Courier	The quick brown fox jumps over the lazy dog
1	CG-Times	<b>The quick brown fox jumps over the lazy dog</b>
2	CG-Times Bold	<b>The quick brown fox jumps over the lazy dog</b>
3	CG-Times Italic	<i>The quick brown fox jumps over the lazy dog</i>
4	CG-Times Bold Italic	<b><i>The quick brown fox jumps over the lazy dog</i></b>
5	CG Omega	The quick brown fox jumps over the lazy dog
6	CG Omega Bold	<b>The quick brown fox jumps over the lazy dog</b>
7	CG Omega Italic	<i>The quick brown fox jumps over the lazy dog</i>
8	CG Omega Bold Italic	<b><i>The quick brown fox jumps over the lazy dog</i></b>
9	Coronet	<i>The quick brown fox jumps over the lazy dog</i>
10	Clarendon Condensed	<b>The quick brown fox jumps over the lazy dog</b>
11	Univers Medium	The quick brown fox jumps over the lazy dog
12	Univers Bold	<b>The quick brown fox jumps over the lazy dog</b>
13	Univers Italic	<i>The quick brown fox jumps over the lazy dog</i>
14	Univers Bold Italic	<b><i>The quick brown fox jumps over the lazy dog</i></b>
15	Univers Medium Condensed	The quick brown fox jumps over the lazy dog
16	Univers Condensed Bold	<b>The quick brown fox jumps over the lazy dog</b>
17	Univers Medium Condensed Italic	<i>The quick brown fox jumps over the lazy dog</i>
18	Univers Condensed Bold Italic	<b><i>The quick brown fox jumps over the lazy dog</i></b>
19	Antique Olive	The quick brown fox jumps over the lazy dog
20	Antique Olive Bold	<b>The quick brown fox jumps over the lazy dog</b>
21	Antique Olive Italic	<i>The quick brown fox jumps over the lazy dog</i>
22	Garamond Antiqua	The quick brown fox jumps over the lazy dog
23	Garamond Halbfett	<b>The quick brown fox jumps over the lazy dog</b>
24	Garamond Kursiv	<i>The quick brown fox jumps over the lazy dog</i>
25	Garamond Kursiv Halbfett	<b><i>The quick brown fox jumps over the lazy dog</i></b>
26	Marigold	<i>The quick brown fox jumps over the lazy dog</i>
27	Albertus Medium	The quick brown fox jumps over the lazy dog
28	Albertus Extra Bold	<b>The quick brown fox jumps over the lazy dog</b>
29	Arial	The quick brown fox jumps over the lazy dog
30	Arial Bold	<b>The quick brown fox jumps over the lazy dog</b>
31	Arial Italic	<i>The quick brown fox jumps over the lazy dog</i>
32	Arial Bold Italic	<b><i>The quick brown fox jumps over the lazy dog</i></b>
33	Times New Roman	The quick brown fox jumps over the lazy dog
34	Times New Roman Bold	<b>The quick brown fox jumps over the lazy dog</b>
35	Times New Roman Italic	<i>The quick brown fox jumps over the lazy dog</i>
36	Times New Roman Bold Italic	<b><i>The quick brown fox jumps over the lazy dog</i></b>
37	Helvetica	The quick brown fox jumps over the lazy dog
38	Helvetica-Bold	<b>The quick brown fox jumps over the lazy dog</b>
39	Helvetica-Oblique	<i>The quick brown fox jumps over the lazy dog</i>
40	Helvetica-BoldOblique	<b><i>The quick brown fox jumps over the lazy dog</i></b>
41	Helvetica-Narrow	The quick brown fox jumps over the lazy dog
42	Helvetica-Narrow-Bold	<b>The quick brown fox jumps over the lazy dog</b>
43	Helvetica-Narrow-Oblique	<i>The quick brown fox jumps over the lazy dog</i>
44	Helvetica-Narrow-BoldOblique	<b><i>The quick brown fox jumps over the lazy dog</i></b>
45	Palatino-Roman	The quick brown fox jumps over the lazy dog
46	Palatino-Bold	<b>The quick brown fox jumps over the lazy dog</b>
47	Palatino-Italic	<i>The quick brown fox jumps over the lazy dog</i>
	Palatino-BoldItalic	<b><i>The quick brown fox jumps over the lazy dog</i></b>



# INDEX

---

## Numerics

2nd Fax Number ..... 61

## A

ABB Number ..... 61  
Accessing TopAccess ..... 50  
Account Code ..... 103  
Actual Frame ..... 89  
Add Address ..... 60  
Address Book ..... 71  
Address Group ..... 72  
Address Mode ..... 88  
Administration tab ..... 51  
Administrative Message ..... 84  
Administrator mode ..... 49  
Administrator's Name ..... 114  
Administrator's Password ..... 85, 114  
Alarm Volume ..... 102  
Alerts ..... 56, 57  
AppleTalk ..... 89  
Authentication ..... 114  
Auto Clear ..... 85  
Auto Power Save ..... 85  
Automatic Duplexing Unit ..... 57  
Automatic IP address assignment ..... 35

## B

Backup ..... 121  
Banners ..... 113  
Basic Operations on Each Screen ..... 18  
Bonjour ..... 90  
Box Number ..... 70  
Bulletin Board ..... 69  
Bulletin Board mailbox ..... 67

## C

Capacity ..... 56  
Confidential ..... 69  
Confidential Mailbox ..... 67  
Configuration page ..... 28  
Confirm Password ..... 85  
Contact  
  Adding ..... 60  
  Deleting ..... 63  
Contact Information ..... 56, 84  
Context ..... 93  
Copier Model ..... 56, 84  
Copier Settings ..... 97, 98  
Counter tab ..... 51

## D

DDNS Session ..... 92  
Default Gateway ..... 88  
Default Raw Job Setting ..... 107  
Delayed Transmit ..... 62

Department Code ..... 79  
Department Counter ..... 79  
Desired Zone ..... 89  
Destination Setting ..... 69, 71  
Device Information ..... 56, 84  
Device Name ..... 89  
Device Settings ..... 83  
Device status indicators ..... 57  
Device tab ..... 51  
Device Tab Page ..... 56  
Discard ..... 102  
DNS Session ..... 91  
Domain Name ..... 93  
Drawer ..... 56

## E

ECM ..... 102  
Enable Alerts Trap ..... 96  
Enable Apple Talk ..... 89  
Enable Authentication Trap ..... 95  
Enable Bindery ..... 93  
Enable Bonjour ..... 90  
Enable DDNS ..... 92  
Enable DNS ..... 91  
Enable HTTP Server ..... 94  
Enable IPP ..... 113  
Enable IPX/SPX ..... 89  
Enable LPD ..... 113  
Enable NDS ..... 93  
Enable Raw bi-directional ..... 112  
Enable Raw TCP ..... 112  
Enable SNMP ..... 95  
End user mode ..... 48  
Energy Save ..... 85  
Error message list ..... 141  
Export ..... 130, 134  
Exposure ..... 98

## F

Fax Kit ..... 57  
Fax Number ..... 61, 101  
Fax Setting ..... 61  
Fax Settings ..... 99, 101  
First Name ..... 61  
Forward ..... 69  
Forward Mailbox ..... 67  
Frame Type ..... 89

## G

General  
  Device Information ..... 84  
  Energy Save ..... 85  
  Web General Setting ..... 85  
General Setting ..... 106

Group	
Adding .....	64
Deleting .....	66
Editing .....	64
Group Name .....	65
Group Number .....	65

## H

Help link .....	53
Host Name .....	92
HTTP Network Service .....	94

## I

Import .....	128
Internet/Fax (Relay) Agent .....	67
Internet/Fax(Relay) .....	69
IP Address .....	88
IP Filtering .....	88
IP Trap Address 1-10 .....	96
IP Trap Community .....	96
IPX Trap Address .....	96
IPX/SPX .....	89
ITU-T .....	67

## J

Journal Auto Print .....	103
--------------------------	-----

## L

Line Monitor .....	62
Link-Local Host Name .....	90
List Print .....	144
Local Mailbox List .....	104
Location .....	56, 84
Login Name .....	114
LT<-->A4/LD<-->A3 .....	106

## M

MailBox Setting .....	69, 70
Maintenance	
Backup .....	121
Import .....	128
Restore .....	124
Maintenance Functions .....	118
Maintenance menu .....	52
Managing	
Address Book .....	60
Mailboxes .....	67
Manual IP address assignment .....	37
Memory RX .....	103
Memory Transmission Report .....	103
Memory TX .....	102
Menu bar .....	53
Message .....	56
Monitor Volume .....	102
Multi Transmission Report .....	103

## N

Name .....	56, 84
NetWare Session .....	93
Network	
AppleTalk .....	89
Bonjour .....	90
DDNS Session .....	92
DNS Session .....	91
HTTP Network Service .....	94
IPX/SPX .....	89
NetWare Session .....	93
SNMP Network Service .....	95
TCP/IP .....	88
Network Configuration from Equipment	
AppleTalk Configuration .....	42
Ethernet Configuration .....	33
HTTP Configuration .....	44
IPX/SPX Configuration .....	40
TCP/IP Configuration .....	35
Network Printer Kit .....	57
Network Settings .....	86
NIC status page .....	29

## O

One Touch Number .....	61
Open Mailbox	
Deleting .....	74
Setting up .....	68
Options .....	57
Original Mode .....	98

## P

Paper .....	56
Paper Source .....	108, 109
Password .....	70, 114
PCL Font Number .....	107, 109
PCL Font Pitch .....	107, 109
PCL Font Point Size .....	107, 109
PCL Form Line .....	107, 109
PCL Line Termination .....	107, 109
PCL/PS Font List .....	25
Phone Number .....	56
Polling Report .....	104
Port Number .....	112, 113
Port80 Enable .....	113
Primary DNS Server Address .....	91
Primary Port Number .....	94
Print Jobs .....	24
Print Queue Scan Rate .....	114
Print Service	
IPP Print .....	113
LPD Imaging .....	113
NetWare Imaging .....	114
Raw TCP Print .....	112
Print Service Settings .....	111



Print Startup Page .....	106	Setup	
Printer Settings .....	105	Copier .....	97
Privileged RX .....	103	Fax .....	99
PWD .....	62	General .....	83
<b>Q</b>		Network .....	86
Quality Transmit .....	62	Print Service .....	111
Queue Name .....	109	Printer .....	105
<b>R</b>		Version .....	115
Raw Job Setting .....	108	Setup menu .....	52
Raw jobs - Default Orientation .....	107, 109	Size .....	56
Raw jobs - Default Paper Size .....	107, 109	Sleep/Auto Shut Off .....	85
Raw jobs - Default Paper Type .....	107, 109	SNMP Network Service .....	95
Raw jobs - Duplex Printing .....	107, 109	Sorter Mode Priority .....	98
Read Community .....	95	Status .....	56
Read Write Community .....	95	SUB .....	62
Receive Interval .....	102	Submenu bar .....	53
Reception Mode .....	102	Subnet mask .....	88
Recovery Transmit .....	102	Switching Languages .....	119
Redial Mode .....	102	Symbol set .....	107, 109
Reduction .....	102	<b>T</b>	
REFRESH icon .....	56	TCP/IP .....	88
Registration tab .....	51	Terminal ID .....	101
Relay End Report .....	104	To Print Lists .....	28
Relay End Terminal Report .....	69, 73	Top link .....	53
Relay Originator .....	104	TopAccess .....	14
Relay Reception List .....	104	TopAccess Overview .....	48
Relay Station Report .....	104	TopAccess screen structure .....	53
Remote Mailbox List .....	104	Total Counter .....	78
Resolution .....	102	Transmission Report .....	62, 103
Restore .....	124	Tree .....	93
Ringer Volume .....	101	TTI .....	102
RTI .....	102	Type .....	56
<b>S</b>		<b>U</b>	
Scanner Upgrade Kit .....	57	URL .....	113
Screen		<b>W</b>	
Digit entry screen .....	17	Web General Setting .....	85
Error message screen .....	17	When Memory Full .....	103
Menu selection screen .....	17		
Mode main screens .....	16		
Ready screen .....	16		
Search root .....	93		
Secondary DNS Server Address .....	91		
Secondary Port Number .....	94		
Security TX .....	102		
Send after Scan .....	103		
SEP .....	62		
Separator Page .....	103		
Service Name .....	90		
Service Phone Number .....	84		
Session Timer .....	85		





**MULTIFUNCTIONAL DIGITAL SYSTEMS**  
**Setup Guide for Printing Functions**

# **GA-1191**

**TOSHIBA TEC CORPORATION**

2-17-2, HIGASHIGOTANDA, SHINAGAWA-KU, TOKYO, 141-8664, JAPAN

